

[manuals.plus](#) /› [Braun](#) /› [Braun MultiMix 5 HM5130 Hand Mixer Instruction Manual](#)**Braun HM5130**

Braun MultiMix 5 Hand Mixer HM5130 Instruction Manual

Model: HM5130

1. IMPORTANT SAFETY INFORMATION

Please read these instructions carefully and completely before using the appliance. Keep this manual for future reference.

- Always unplug the appliance from the power supply before cleaning, assembling, disassembling, or if left unattended.
- This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
- Children should be supervised to ensure that they do not play with the appliance.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to persons and/or damage to the mixer.
- Do not immerse the motor unit in water or other liquids.
- Do not use attachments not recommended or sold by the manufacturer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner.

2. PRODUCT OVERVIEW

The Braun MultiMix 5 Hand Mixer HM5130 is a versatile kitchen appliance designed for beating, whisking, kneading, and chopping ingredients. It features a powerful 350-watt motor and SmartMix technology for efficient performance.

Main Unit and Components



The Braun MultiMix 5 Hand Mixer (HM5130) shown with its main unit, chopper attachment, MultiWhisk beaters, and dough hooks.

The main unit features an ergonomic soft-grip handle and a VarioControl speed dial for easy one-handed operation. The SmartMix technology positions the motor vertically, shifting the weight into the bowl for reduced effort.




A hand comfortably gripping the Braun MultiMix 5 Hand Mixer, demonstrating its ergonomic design.



A detailed view of the VarioControl speed dial, allowing for seamless speed adjustments with a thumb.

Attachments

- **MultiWhisk Beaters:** These unique beaters are designed for both whisking and beating, creating volume for light and airy mixtures.

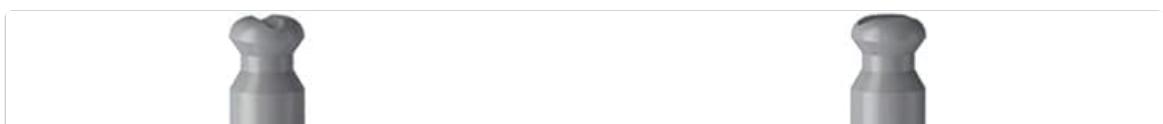





The MultiWhisk beaters, designed for efficient whisking and beating tasks.

- **Dough Hooks:** Sturdy dough hooks are included for kneading heavier mixtures like bread and pizza dough.





The robust dough hooks, ideal for kneading various types of dough.

- **Chopper Attachment:** A 2-cup capacity chopper is provided for preparing ingredients such as nuts, herbs, or vegetables.



The 2-cup chopper attachment, useful for quickly processing smaller quantities of ingredients.

3. SETUP AND ASSEMBLY

Attaching/Detaching Beaters and Dough Hooks

1. Ensure the mixer is unplugged before attaching or detaching any accessories.

2. Insert the desired beaters or dough hooks into the openings on the underside of the mixer. Ensure the correct attachment goes into the corresponding hole (one shaft is slightly larger than the other). Push firmly until they click into place.
3. To detach, press the eject button located on the top of the mixer. The attachments will release.

Assembling the Chopper Attachment

1. Place the chopping blade onto the central pin inside the chopper bowl.
2. Add your ingredients to the chopper bowl.
3. Place the chopper lid onto the bowl, ensuring it is securely locked.
4. Attach the mixer unit to the top of the chopper lid by aligning the drive shaft and twisting until it locks into place.

4. OPERATING INSTRUCTIONS

Powering On and Speed Control

1. Plug the mixer into a suitable power outlet.
2. Use the VarioControl speed dial with your thumb to select the desired speed from 1 to 9. The mixer will start operating at the selected speed.
3. For an extra burst of power, press the Turbo button.
4. To turn off the mixer, slide the speed dial back to the '0' position.

Using Attachments

- **MultiWhisk Beaters:** Ideal for whipping cream, beating eggs, mixing cake batter, and preparing light sauces. Start at a low speed and gradually increase as needed.



The Braun MultiMix 5 Hand Mixer in use with the MultiWhisk beaters in a mixing bowl.

- **Dough Hooks:** Use for kneading yeast doughs for bread, pizza, or pastries. Begin at a low speed to combine ingredients, then increase to a medium speed for kneading.
- **Chopper Attachment:** Suitable for chopping nuts, herbs, onions, or small quantities of meat. Operate in short pulses for coarse chopping or continuously for finer results.



The Braun MultiMix 5 Hand Mixer attached to the chopper, processing ingredients.

Official Product Video

This video provides a brief overview of the Braun HM5130 MultiMix Hand Mixer and its key features.

5. CLEANING AND MAINTENANCE

The Braun MultiMix 5 features an easy-clean design with a completely sealed system, preventing ingredients from entering the housing.

- Always unplug the mixer before cleaning.
- Wipe the motor unit with a damp cloth. Do not immerse it in water.
- All attachments (MultiWhisk beaters, dough hooks, chopper bowl, lid, and blade) are dishwasher-safe for convenient cleaning.
- For stubborn residue, soak attachments in warm, soapy water before washing.

6. TROUBLESHOOTING

- **Mixer does not turn on:** Ensure the appliance is properly plugged into a working power outlet. Check that the speed dial is not at the '0' position.
- **Attachments are difficult to insert/eject:** Ensure the mixer is unplugged. Verify that the correct attachment is being inserted into the corresponding opening. Press the eject button firmly to release attachments.
- **Motor seems strained:** Reduce the quantity of ingredients or switch to a lower speed setting. For very thick mixtures, ensure you are using the dough hooks.
- **Excessive noise or vibration:** Ensure attachments are securely locked in place. Check for any foreign objects in the mixing area.

7. SPECIFICATIONS

Feature	Specification
Brand	Braun
Model Name	MultiMix 5
Item Model Number	HM5130BK
Color	Black
Wattage	350.0 W
Voltage	120 V
Controls Type	Push Button (VarioControl Speed Dial)
Special Features	Smartmix Technology, VarioControl Speed Dial, Multi Whisk Attachment, One-Handed Operation
Capacity (Chopper)	2 Cups
Is Dishwasher Safe	Yes (Attachments)
Material	Plastic
Item Weight	2.2 pounds
Product Dimensions	3"D x 8.3"W x 6.4"H

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Braun Household website. Keep your purchase receipt as proof of purchase.

Related Documents - HM5130

	<p>Braun MultiMix 5 Hand Mixer (Type 4645) User Manual Comprehensive user manual for the Braun MultiMix 5 Hand Mixer (Type 4645), covering assembly, operation, safety precautions, parts and accessories, care and cleaning, and warranty information.</p>
	<p>Braun MultiMix 5 Hand Mixer: User Manual and Safety Guide Comprehensive user manual for the Braun MultiMix 5 hand mixer (HM 5100, HM 5130), detailing important safety precautions, parts, assembly, operation, accessory usage, care instructions, and warranty information.</p>
	<p>Braun MultiMix 3 HM 3000 Hand Mixer User Manual Comprehensive user manual for the Braun MultiMix 3 HM 3000 hand mixer, covering features, operation, safety precautions, cleaning, and recipe suggestions. Includes guarantee information.</p>
	<p>Braun MultiQuick 9 Hand Blender MQ 9087x User Manual Comprehensive user manual for the Braun MultiQuick 9 Hand Blender (Model MQ 9087x), covering safety precautions, parts and accessories, assembly, operation, and cleaning. Includes detailed instructions for various attachments like the ActiveBlade shaft, whisk, puree accessory, chopper, and food processor.</p>

BRAUN

DE	SONDERHEFTUNGSWERTE	2
DE	SAFETY INSTRUCTIONS	4
DE	INHALTSVERZEICHNIS	4
ES	INSTRUCCIONES DE SEGURIDAD	5
ES	INDICE DE CONTENIDOS	5
PT	INSTRUÇÕES DE SEGURANÇA	7
PT	INDÍCIO DE CONTENIDO	7
NL	VEILIGHEIDSINSTRUCTIES	9
NL	INHOUDSOPSTEL	9
NO	SAKFERHETSHINNSKJER	10
NO	INNSKJER	10
SE	SAFETYINFORMATION	10
SE	INNEHÅLLSINDEX	10
SK	SAFETYINSTRUKCIA	11
SK	INDEX	11
PL	INSTRUKCJA BEZPIECZENSTWA	12
PL	INDeks	12
HR	BEZBEĆINJENJE POKYVY	14
HR	INDICE	14
ME	SAFETYINSTRUKCIA	15
ME	INDICE	15
RO	INSTRUCTIUNI DE SECUȚIE	17
RO	INDICE	17
TR	SAFETY TALIMATLARI	18
TR	İNDİCE	18
GR	ΕΠΙΤΡΕΠΕΤΑΙ Η ΕΠΙΧΕΙΡΗΣΗ ΤΗΣ ΕΠΙΧΕΙΡΗΣΗΣ	19
GR	ΕΠΙΧΕΙΡΗΣΗ	19
ES	INSTRUCCIONES DE SEGURIDAD	20
ES	INDICE	20
RU	ИНСТРУКЦИИ ПО ТЕХНИКЕ БЕЗОПАСНОСТИ	21
RU	ИНДИКЕЙЦИИ	21
UK	ІНСТРУКЦІЇ З ТЕХНІКИ БЕЗПЕКИ	22
AR	التعليمات	22

Hand mixer

[Braun Hand Mixer Safety Instructions and User Guide](#)

Essential safety guidelines for operating your Braun hand mixer, covering precautions, usage, and disposal.



[Braun MultiQuick 9 Hand Blender MQ9195XLI User Manual](#)

User manual and guide for the Braun MultiQuick 9 Hand Blender, model MQ9195XLI, covering parts, assembly, operation, safety, troubleshooting, and care. Includes detailed instructions for various accessories like the ActiveBlade shaft, whisk, puree accessory, chopper, food processor with dicing function, and slicing/shredding attachments.