

uutensil StirrTime

StirrTime Automatic Pan Stirrer with Timer

MODEL: STIRRTIME

Brand: uutensil

Introduction

The uutensil StirrTime is an innovative, hands-free kitchen tool designed to automatically stir food in pots and pans. It helps prevent sticking and ensures even cooking for various dishes such as sauces, soups, porridges, and gravies. This device features adjustable speed settings and an integrated timer for convenient operation.

Important Safety Information

- Read all instructions before use.
- Keep the motor unit away from water and other liquids. Do not immerse the motor unit in water.
- Ensure the stirrer is placed securely in the pot or pan before activating.
- Do not use the stirrer in empty pots or pans.
- Keep hands and loose clothing away from moving parts during operation.
- The nylon legs are heat-resistant up to 120°C (248°F). Do not expose to temperatures exceeding this limit.
- Always remove the stirrer from the pot or pan before serving or tasting food.
- Batteries should be inserted with the correct polarity. Do not mix old and new batteries.
- Remove batteries if the device will not be used for an extended period.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Package Contents

- 1 x StirrTime Automatic Pan Stirrer (Motor Unit)
- 1 x Set of Removable Nylon Legs

Note: 4 AA batteries are required and not included.

Setup

1. Battery Installation

1. Gently twist the top part of the stirrer (the light gray section) counter-clockwise to open the battery compartment.
2. Insert 4 AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
3. Replace the top part by twisting it clockwise until securely closed.



Image: Battery installation diagram, showing correct and incorrect battery placement.

2. Attaching the Legs

The three nylon legs are designed to be easily attached and detached from the main motor unit. Align the slots on the legs with the corresponding grooves on the motor unit and push firmly until they click into place. Ensure all three legs are securely attached before use.

Operating Instructions

1. **Placement:** Place the StirrTime directly into your pot or pan containing the food to be stirred. Ensure the legs are fully submerged in the food and the stirrer is stable. The stirrer is suitable for non-stick pans.
2. **Power On/Off:** Press the button located on the top of the stirrer to turn it on. The stirrer will begin to rotate. Press the button again to turn it off.
3. **Speed Settings:** The StirrTime offers three adjustable speed settings. Each press of the button cycles through the speeds. The device moves both forward and backward to ensure thorough mixing.
4. **Timer Function:** The integrated timer can be set from 1 to 10 minutes. To set the timer, press and hold the button until the desired time is indicated by the flashing lights on top. The stirrer will operate for the set duration and then alert you with a gentle pulse and flashing lights when the time is up.



Image: The StirTime in operation, stirring food in a pan.



Image: Visual guide for battery level and rotation.

Maintenance

Cleaning

- **Nylon Legs:** The removable nylon legs are food-safe and dishwasher-safe. They can also be washed by hand with warm soapy water.
- **Motor Unit:** The motor unit is not waterproof. Wipe it clean with a damp cloth. Do not immerse the

motor unit in water or place it in a dishwasher.

- Ensure all parts are completely dry before reassembling or storing.

Storage

Store the StirrTime in a clean, dry place when not in use. Remove batteries if storing for an extended period to prevent leakage.

Troubleshooting

Problem	Possible Cause	Solution
Stirrer does not turn on or stops quickly.	Low or dead batteries; incorrectly inserted batteries.	Replace with fresh AA batteries, ensuring correct polarity.
Stirrer vibrates but does not rotate effectively.	Food mixture is too thick; stirrer is stuck; low battery power.	Ensure the mixture is not excessively thick. Check battery level. Reposition the stirrer. The device may not be suitable for extremely dense mixtures.
Food splashes out of the pan.	Pan is too small or overfilled.	Use a larger pan or reduce the amount of food being stirred. Ensure the stirrer legs are appropriate for the pan size.
Stirrer legs detach during operation.	Legs not securely attached.	Ensure legs are firmly clicked into place before starting.

Specifications

Model Name: StirrTime

Brand: uutensil

Color: Light Gray & Gray

Product Dimensions: 4.6"D x 4.6"W x 8.8"H (11.7 x 11.7 x 22.4 cm)

Item Weight: 7.8 ounces (221 grams)

Power Source: 4 x AA Batteries (not included)

Controls Type: Push Button

Special Feature: Adjustable Speed Control, Integrated Timer (1-10 minutes)

Leg Material: Heat-resistant Nylon (up to 120°C / 248°F)

Compatibility: Safe for non-stick pans and pots

Warranty and Support

For warranty information or product support, please contact uutensil customer service directly. Refer to the product packaging or the retailer's website for specific contact details.

Keep your purchase receipt as proof of purchase for any warranty claims.

