

Nokia 8110

Nokia 8110 (TA-1059) 4G Feature Phone User Manual

Model: TA-1059

INTRODUCTION

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your Nokia 8110 (TA-1059) 4G feature phone. Please read this guide thoroughly to ensure proper use and to maximize the device's capabilities.

SETUP

1. Package Contents

Ensure your package contains the following items:

- Nokia 8110 4G (TA-1059) Handset
- Headset
- Charger
- USB Cable
- Quick Guide

2. Inserting the SIM Card and Memory Card

The Nokia 8110 (TA-1059) uses a Micro-SIM card. It also supports a microSD card up to 64 GB for additional storage.

1. To access the SIM and memory card slots, slide down the phone's cover.
2. Carefully remove the battery.
3. Insert the Micro-SIM card into the designated slot with the gold contacts facing down.
4. If using a microSD card, insert it into the memory card slot.
5. Reinsert the battery and slide the cover back into place until it clicks.



Image: Nokia 8110 4G with the slider open, showing the keypad and the internal compartment for SIM and battery access.

3. Charging the Battery

The device is powered by a 1500 mAh battery. Before first use, fully charge the battery.

1. Connect the USB cable to the phone's Micro USB port.
2. Connect the other end of the USB cable to the charger.
3. Plug the charger into a wall outlet.
4. The battery indicator on the screen will show charging status.

4. Powering On/Off

- To power on, press and hold the Power key until the phone vibrates.
- To power off, press and hold the Power key, then select 'Power off' from the options.

5. Network Compatibility

Important Note on Network Compatibility:

This is an international stock device. Network compatibility varies by carrier. It supports 3G WCDMA B1 / B5 / B8 / B39 and 4G LTE B1 / B3 / B5 / B7 / B8 / B20 / B38 / B39 / B40 / B41. Please verify with your carrier that these bands are supported in your region before use. This device is not compatible with CDMA carriers such as Sprint, Verizon, and U.S. Cellular.

OPERATING YOUR PHONE

1. Basic Navigation

The Nokia 8110 features a 2.45-inch TFT display and a physical keypad.

- Use the directional keys and the center select key to navigate menus and select options.
- The left and right soft keys perform functions indicated on the screen directly above them.



Image: Front view of the Nokia 8110 4G with the slider open, displaying the screen and the full alphanumeric keypad.

2. Making Calls

1. From the home screen, enter the phone number using the keypad.
2. Press the Call key (green button) to initiate the call.
3. To end a call, press the End key (red button).

3. Sending Messages

1. Go to the 'Messages' application from the main menu.
2. Select 'New message'.
3. Enter the recipient's number or select from contacts.
4. Type your message using the keypad. The phone supports T9 predictive text input.

5. Press 'Send'.

4. Camera Functionality

The phone is equipped with a 2 MP main camera with LED flash.

1. Open the 'Camera' application from the main menu.
2. Frame your shot using the display.
3. Press the center select key to take a photo.

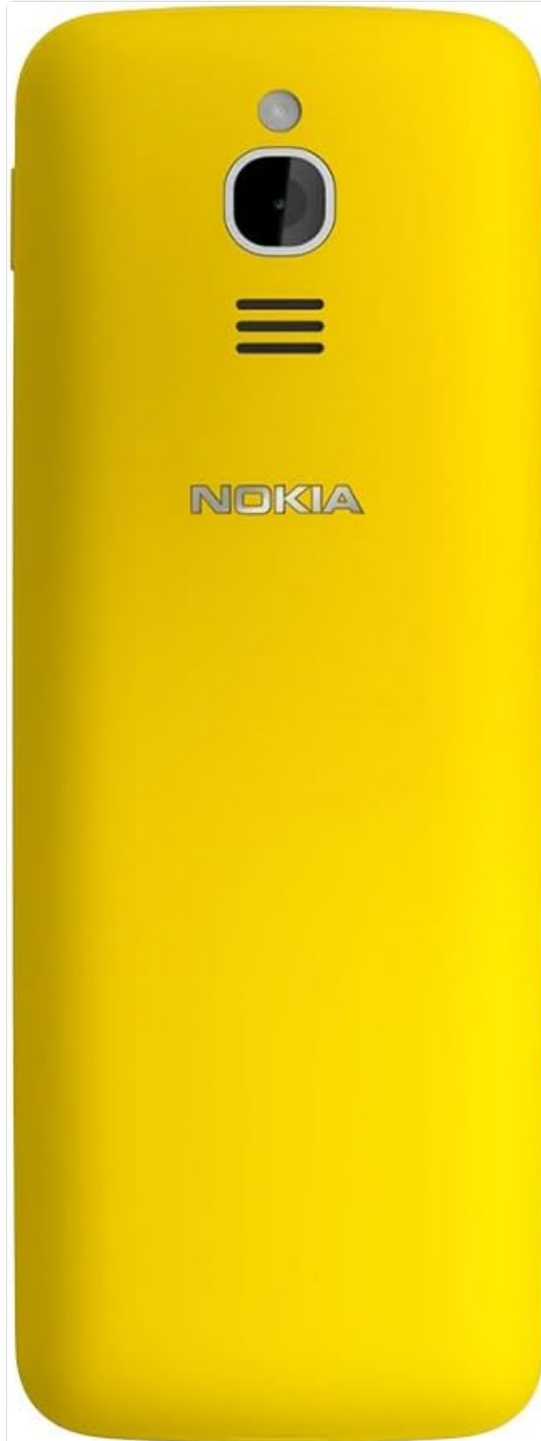


Image: Rear view of the Nokia 8110 4G, highlighting the camera module with its 2 MP lens and LED flash.

5. Connectivity

- **Wi-Fi:** Access Wi-Fi settings from the main menu to connect to available networks.
- **Bluetooth:** Pair with other Bluetooth devices like headsets or speakers.

- **4G LTE:** The phone supports 4G LTE for high-speed data access, subject to network compatibility.
- **Hotspot:** The device can function as a Wi-Fi hotspot to share its internet connection.

6. KaiOS Features

The Nokia 8110 runs on KaiOS, offering access to various smart features:

- **Google Assistant:** Use voice commands for tasks, information, and sending messages.
- **Google Maps:** Navigate and find locations.
- **Applications:** Access apps like Facebook, WhatsApp, YouTube, Twitter, and email through the KaiOS store or built-in browser.

MAINTENANCE

1. Cleaning Your Device

To keep your phone in optimal condition:

- Use a soft, clean, dry cloth to wipe the screen and body.
- Avoid using harsh chemicals, cleaning solvents, or strong detergents.
- Do not expose the phone to excessive dust or moisture.

2. Battery Care

- Avoid extreme temperatures, as they can affect battery life.
- Do not leave the battery fully discharged or fully charged for extended periods.
- Use only Nokia-approved chargers and cables.

3. Software Updates

Periodically check for software updates to ensure your phone has the latest features and security enhancements. Updates can typically be found in the phone's settings menu under 'Device' or 'About phone'.

TROUBLESHOOTING

Common Issues and Solutions

- **Phone does not power on:** Ensure the battery is charged. Connect the charger and try again. Verify the battery is correctly inserted.
- **No network service:** Check that the SIM card is correctly inserted. Verify your network settings. Ensure your carrier supports the phone's frequency bands (refer to Network Compatibility section).
- **Poor battery life:** Reduce screen brightness. Close unused applications. Limit background data usage. Ensure the battery is not old or damaged.
- **Keys register double presses:** This can sometimes occur with new keypads. Continued use may resolve it. If the issue persists, contact support.
- **Cannot connect to Wi-Fi:** Ensure Wi-Fi is enabled. Check the network password. Restart the phone and the Wi-Fi router.
- **Phone is slow or unresponsive:** Close unnecessary applications. Clear cache if possible. Consider performing a factory reset (back up your data first).

Factory Reset

Warning: A factory reset will erase all data on your phone, including contacts, messages, photos, and installed applications. Back up important data before proceeding.

To perform a factory reset, navigate to Settings > Device > Reset phone. Follow the on-screen prompts.

SPECIFICATIONS

Feature	Specification
Brand	Nokia
Model Name	Nokia 8110
Operating System	KaiOS (based on Android)
CPU Model	Qualcomm MSM8905 Snapdragon 205 Dual-core
CPU Speed	1.1 GHz
RAM Memory	512 MB
Internal Storage	4 GB
Expandable Storage	microSD, up to 64 GB
Screen Size	2.45 Inches
Display Type	TFT LCD
Display Resolution	240 x 320 pixels
Main Camera	2 MP with LED flash
SIM Card Type	Micro-SIM (Single SIM slot)
Connectivity	3G WCDMA, 4G LTE, Wi-Fi, Bluetooth
Wireless Network Technology	LTE, UMTS
Battery Capacity	1500 mAh (Lithium-Ion)
Talk Time	Up to 10 Hours
Connector Type	Micro USB
Form Factor	Bar (Slider)
Item Weight	4.16 ounces
Item Dimensions	2 x 1.1 x 0.01 inches

SAFETY INFORMATION

- Read all safety information before using your device.
- Do not use the device in prohibited areas, such as aircraft or hospitals.

- Avoid exposing the device to extreme temperatures, direct sunlight, or fire.
- Do not attempt to disassemble or modify the device.
- Dispose of the device and battery according to local regulations.

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Nokia website or contact your retailer. This specific model (TA-1059) is international stock, and warranty coverage may vary by region. Please check with your point of purchase for specific warranty terms.