

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Geko](#) /

› [Geko G71110 Garden Cart Instruction Manual](#)

## Geko G71110

# Geko G71110 Garden Cart Instruction Manual

This manual provides essential information for the safe and efficient use of your Geko G71110 Garden Cart.

## IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before assembling, operating, or maintaining the Geko G71110 Garden Cart. Failure to follow these instructions may result in serious injury or property damage. Keep this manual for future reference.

- **Maximum Load Capacity:** Do not exceed the maximum load capacity of 350 kg (770 lbs). Overloading can cause instability and damage to the cart.
- **Even Weight Distribution:** Always distribute the load evenly across the cart bed to maintain stability.
- **Secure Loads:** Ensure all items are securely placed in the cart to prevent shifting or falling during transport.
- **Stable Ground:** Operate the cart on level and stable ground. Avoid steep inclines or uneven terrain that could cause the cart to tip over.
- **Children and Pets:** Keep children and pets away from the cart during operation and storage. This cart is not a toy.
- **Personal Protective Equipment:** Wear appropriate safety footwear when operating the cart, especially when handling heavy or sharp objects.
- **Storage:** Store the cart in a dry, secure location, away from extreme temperatures and direct sunlight.

## PRODUCT OVERVIEW

The Geko G71110 Garden Cart is a robust utility wagon designed for transporting various materials in gardens, yards, and other outdoor environments. Its durable construction and high load capacity make it suitable for a wide range of tasks.



Image of the Geko G71110 Garden Cart, showcasing its robust design and green finish.

## SETUP AND ASSEMBLY

---

Follow these steps to assemble your Geko G71110 Garden Cart. Ensure all parts are present before beginning assembly.

- Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface and compare them against the parts list (not provided in this manual, refer to packaging).
- Attach Wheels:** Securely attach the wheels to the axle assemblies using the provided hardware. Ensure all nuts and bolts are tightened appropriately.
- Assemble Cart Bed:** Connect the side panels and base of the cart bed. Ensure all locking mechanisms or bolts are firmly secured.
- Install Handle:** Attach the pulling handle to the front of the cart. Verify that the handle pivots freely and is securely fastened.
- Final Check:** Before first use, inspect all connections and fasteners to ensure they are tight and secure.

## OPERATING INSTRUCTIONS

---

### Loading the Cart

- Place items carefully into the cart, starting with heavier items at the bottom and center.
- Distribute the weight as evenly as possible to prevent tipping.
- Do not exceed the 350 kg weight limit.

### Transporting Materials

- Always pull the cart using the designated handle.
- Maintain a firm grip on the handle and walk at a controlled pace.
- Be aware of your surroundings and any obstacles.

- Avoid sudden turns or movements, especially with heavy loads.

## Unloading the Cart

- Park the cart on a level surface before unloading.
- Carefully remove items, ensuring the cart remains stable.

## MAINTENANCE AND CARE

- **Cleaning:** Clean the cart regularly with a damp cloth and mild detergent. Rinse thoroughly and dry to prevent rust.
- **Lubrication:** Periodically lubricate moving parts, such as wheel axles and handle pivot points, with a suitable lubricant to ensure smooth operation.
- **Tire Pressure:** Check tire pressure regularly and inflate to the recommended PSI (if applicable, refer to tire sidewall for specific pressure).
- **Fasteners:** Periodically check all nuts, bolts, and fasteners for tightness. Tighten as necessary to prevent parts from loosening during use.
- **Storage:** Store the cart in a dry, covered area when not in use to protect it from weather elements.

## TROUBLESHOOTING

Issue	Possible Cause	Solution
Difficulty steering or pulling	Low tire pressure; uneven load; seized wheel bearing	Inflate tires to recommended PSI; redistribute load evenly; lubricate or replace wheel bearing.
Cart feels unstable	Overloaded; uneven load distribution; loose fasteners	Reduce load to within capacity; redistribute load evenly; tighten all fasteners.
Squeaking noises	Lack of lubrication on moving parts	Lubricate wheel axles and handle pivot points.

## SPECIFICATIONS

- **Brand:** Geko
- **Model Number:** G71110
- **Load Capacity:** 350 kg (770 lbs)
- **Product Weight:** 19.42 kg (42.8 lbs)
- **Package Dimensions:** 107 x 57 x 50 cm (42.1 x 22.4 x 19.7 inches)
- **ASIN:** B07FSH4FH7

## WARRANTY INFORMATION

This Geko G71110 Garden Cart comes with a standard manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region and retailer. Please retain your proof of purchase for warranty claims. For detailed warranty information, refer to the documentation provided at the time of purchase or contact your retailer.

## CUSTOMER SUPPORT

---

If you have any questions, require assistance with assembly, operation, or maintenance, or need to report a problem with your Geko G71110 Garden Cart, please contact your retailer or the manufacturer's customer service department. Have your model number (G71110) and proof of purchase ready when contacting support.