

Saachi NL-COF-7056

Saachi All-In-One Coffee Maker NL-COF-7056 Instruction Manual

Model: NL-COF-7056

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- Ensure the voltage indicated on the appliance corresponds to your mains voltage before connecting.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Always unplug the appliance from the power outlet before cleaning and when not in use.
- Keep hands and cords away from hot parts of the appliance during operation.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is for household use only. Do not use outdoors.
- Close supervision is necessary when the appliance is used by or near children.
- Use only accessories recommended by the manufacturer.
- Avoid contact with moving parts.
- Always ensure the water tank is filled to the appropriate level before operation.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Saachi All-In-One Coffee Maker.



Front view of the Saachi NL-COF-7056 coffee maker, showing the control panel, portafilter, and drip tray.



Included accessories: portafilter handle, coffee measuring scoop, and the removable drip tray with metal grid.

Key Components:

1. **Control Panel:** Buttons for power, coffee brewing, and steam function.

2. **Steam/Hot Water Knob:** Controls steam release for frothing or hot water dispensing.
3. **Portafilter:** Holds ground coffee for brewing espresso. Features a safety lock.
4. **Steam Wand:** Swivel jet for frothing milk.
5. **Drip Tray:** Removable tray to collect excess liquid.
6. **Water Tank:** Transparent, removable 1.6L tank for water supply.
7. **Cup Warming Tray:** Located on top of the appliance to keep cups warm.
8. **Coffee Scoop:** For measuring ground coffee.

3. SETUP

Follow these steps before first use.

1. **Unpacking:** Carefully remove all packaging materials and ensure all parts are present.
2. **Initial Cleaning:** Wash the water tank, portafilter, filter basket, and drip tray with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the machine with a damp cloth.
3. **Fill Water Tank:** Remove the transparent water tank from the back of the unit. Fill it with fresh, cold water up to the 'MAX' mark. Replace the tank securely.
4. **First Use / Priming:**
 - Plug the appliance into a suitable power outlet.
 - Place a cup under the coffee outlet.
 - Turn the steam/hot water knob to the 'Hot Water' position.
 - Press the coffee brewing button. Water will flow through the system. Let approximately 150ml of water run through.
 - Turn the steam/hot water knob back to the 'Off' position and press the coffee brewing button again to stop. This primes the pump and cleans the internal system.

4. OPERATING INSTRUCTIONS

4.1 Making Espresso

1. Ensure the water tank is filled.
2. Insert the desired filter basket into the portafilter.
3. Add ground coffee to the filter basket using the scoop. For a single shot, use one scoop (approx. 7g); for a double shot, use two scoops (approx. 14g). Level the coffee and tamp it gently.
4. Attach the portafilter to the brewing head by aligning it and twisting firmly to the right until it locks.
5. Place one or two espresso cups on the drip tray under the portafilter spouts.
6. Press the coffee brewing button. The machine will start extracting espresso.
7. Once the desired amount of espresso is brewed (typically 25-30ml per shot), press the coffee brewing button again to stop the flow.
8. Carefully remove the portafilter by twisting it to the left. Dispose of the used coffee grounds.

4.2 Frothing Milk for Cappuccino and Latte

The swivel steam jet allows you to froth milk for various coffee beverages.

1. Fill a stainless steel frothing pitcher with cold milk (do not fill more than one-third, as milk volume will

increase).

2. Turn the steam/hot water knob to the 'Steam' position. Wait for the steam indicator light to illuminate, indicating the machine has reached steaming temperature.
3. Position the steam wand just below the surface of the milk.
4. Slowly turn the steam/hot water knob to release steam. Move the pitcher up and down to incorporate air and create froth.
5. Once the milk has reached the desired temperature and froth consistency, turn the steam/hot water knob to the 'Off' position.
6. Wipe the steam wand immediately with a damp cloth to prevent milk residue from drying.

4.3 Using the Cup Warming Tray

The tray on top of the appliance helps keep your coffee cups warm, ensuring your coffee stays hot longer.

- Place your ceramic or glass cups on the metal tray located on the top surface of the coffee maker.
- The residual heat from the machine will gently warm the cups.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

- **Daily Cleaning:**
 - Empty and clean the drip tray and grid after each use.
 - Remove and clean the portafilter and filter basket. Rinse thoroughly to remove all coffee grounds.
 - Wipe the steam wand immediately after frothing milk to prevent blockages. If blocked, use a small pin to clear the hole.
 - Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners.
- **Water Tank Cleaning:** Clean the water tank periodically with mild detergent and rinse thoroughly.
- **Descaling:** Over time, mineral deposits can build up in the machine. Descale your coffee maker every 2-3 months, or more frequently if you have hard water. Follow the instructions of a commercial descaling solution suitable for coffee machines.

6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No coffee dispenses	No water in tank; Clogged filter; Machine not primed.	Fill water tank; Clean filter; Prime the machine as per setup instructions.
Weak coffee	Insufficient coffee grounds; Coarse grind; Insufficient tamping.	Increase coffee amount; Use finer grind; Tamp more firmly.
No steam from wand	Steam wand clogged; Machine not at steam temperature.	Clean steam wand with a pin; Wait for steam indicator light.
Water leaks from machine	Water tank not seated correctly; Portafilter not locked properly.	Ensure water tank is secure; Lock portafilter firmly.

7. SPECIFICATIONS

Detailed technical information for the Saachi NL-COF-7056 Coffee Maker.

- **Brand:** Saachi
- **Model Number:** NL-COF-7056
- **Color:** Silver
- **Product Dimensions:** 28.5 x 38 x 30 cm
- **Item Weight:** 3.58 Kilograms
- **Capacity:** 150 Milliliters (Boiler), 1.6 Liters (Water Tank)
- **Power / Wattage:** 850 Watts
- **Voltage:** 240 Volts
- **Material:** Metal
- **Steam Pressure:** 15 Bar
- **Special Features:** Aluminum coffee filter with safety lock and scale, Indicator Lights, Milk Frother, Multi-Function, Removable Tank

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Saachi customer service directly. Keep your proof of purchase for any warranty claims.