

[manuals.plus](#) /› [Acctim](#) /› [Acctim Isky Chalet Style Wall Hanging Cuckoo Clock \(Model 27615\) User Manual](#)

Acctim 27615

Acctim Isky Chalet Style Wall Hanging Cuckoo Clock (Model 27615) Instruction Manual

Your guide to setting up, operating, and maintaining your Acctim Cuckoo Clock.

1. INTRODUCTION

Thank you for choosing the Acctim Isky Chalet Style Wall Hanging Cuckoo Clock. This modern cuckoo clock combines traditional charm with contemporary design, featuring an hourly cuckoo chime and an automatic night shut-off function for undisturbed sleep. This manual provides essential information to ensure proper setup, operation, and care of your clock.

Key Features:

- Modern Wooden Cuckoo Clock design.
- Cuckoo chimes every hour.
- Automatic night shut-off (no cuckoo between 22:00 and 6:00).
- Quartz movement for accurate timekeeping.





Figure 1: Front view of the Acctim Isky Chalet Style Cuckoo Clock. This image shows the clock's minimalist design with a green face, white housing, and a pendulum.

2. SAFETY INFORMATION

- Always handle the clock with care to prevent damage.
- Keep batteries out of reach of children and pets.
- Do not mix old and new batteries, or different types of batteries.
- Ensure the clock is securely mounted to the wall to prevent it from falling.

- Avoid placing the clock in direct sunlight or near extreme temperature sources.

3. PACKAGE CONTENTS

Please check the package for the following items:

- Acctim Isky Chalet Style Cuckoo Clock Unit
- Pendulum
- Instruction Manual (this document)

If any items are missing or damaged, please contact Acctim customer support.

4. SETUP

4.1 Unpacking

1. Carefully remove the clock from its packaging.
2. Retain all packaging materials for future transport or returns.
3. Remove any protective films or inserts from the clock face or cuckoo opening.

4.2 Battery Installation

The clock requires batteries (type not specified, typically AA or C for cuckoo clocks). Please refer to the battery compartment for the correct battery type and quantity.

1. Locate the battery compartment on the back of the clock.
2. Insert the required batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

4.3 Pendulum Attachment

1. Gently attach the pendulum to the hook or slot provided at the bottom of the clock mechanism.
2. Ensure the pendulum hangs freely and can swing without obstruction.

4.4 Wall Mounting

1. Choose a suitable location on a sturdy wall, away from direct sunlight or heat sources.
2. Use an appropriate wall anchor and screw (not included) for your wall type.
3. Hang the clock securely using the hanging slot on the back.
4. Ensure the clock is level to allow the pendulum to swing correctly.

4.5 Initial Time Setting and Cuckoo Synchronization

Accurate cuckoo chiming requires careful initial setup. It is recommended to perform this setup between 6:30 AM and 7:00 AM, or 6:30 PM and 7:00 PM, for optimal synchronization.

1. **Set the Time:** Gently turn the minute hand (the longer hand) clockwise to the current time. Do not move the hour hand directly. The clock will automatically adjust the hour hand as the minute hand passes 12.
2. **Synchronize Cuckoo:** After setting the time, allow the clock to run for a few minutes. If the cuckoo chimes do not match the hour, follow these steps:
 - Move the minute hand clockwise until the clock chimes the correct number of times for the current hour. For example, if it's 3:00 and the clock chimes 5 times, continue moving the minute

hand until it chimes 3 times.

- Once the cuckoo chimes match the hour, stop.
- If the cuckoo chimes are still incorrect, remove the batteries, wait 1 minute, reinsert them, and repeat the time setting and synchronization process.





Figure 2: Side view of the Acctim Isky Chalet Style Cuckoo Clock, showing its depth and profile.

5. OPERATING INSTRUCTIONS

5.1 Timekeeping

Your Acctim Cuckoo Clock uses a precise quartz movement to keep accurate time. Once set, it will continue to display the correct time as long as the batteries have sufficient power.

5.2 Cuckoo Chime

The cuckoo will emerge and chime once for each hour, corresponding to the time displayed on the clock face. For example, at 3 o'clock, it will chime three times.

5.3 Automatic Night Shut-Off

For your convenience, the clock features an automatic night shut-off function. The cuckoo will not chime between 22:00 (10 PM) and 6:00 (6 AM) to ensure a quiet night's sleep. The cuckoo function will resume automatically at 6:00 AM.

6. MAINTENANCE

6.1 Cleaning

- Wipe the clock's exterior with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.
- Avoid getting moisture into the clock mechanism.

6.2 Battery Replacement

When the clock's timekeeping becomes inaccurate, the cuckoo chime weakens, or the pendulum stops swinging, it is time to replace the batteries. Replace all batteries at the same time with new ones of the same type.

6.3 Pendulum Care

Ensure the pendulum swings freely and is not obstructed by the wall or other objects. Periodically check that it is securely attached.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running / Time is inaccurate	Dead or weak batteries; Incorrect battery installation.	Replace all batteries with new ones, ensuring correct polarity.
Cuckoo not chiming / Chimes incorrectly	Incorrect synchronization; Weak batteries; Obstruction in cuckoo mechanism.	<ul style="list-style-type: none"> Refer to Section 4.5 for cuckoo synchronization. Replace batteries. Ensure no foreign objects are blocking the cuckoo opening.
Pendulum not swinging	Not properly attached; Obstruction; Clock not level.	<ul style="list-style-type: none"> Re-attach pendulum securely. Check for obstructions. Ensure the clock is hanging level on the wall.

8. SPECIFICATIONS

Feature	Detail
Brand	Acctim
Model Number	27615
Colour	Green
Product Dimensions (L x W x H)	27.99 x 3.81 x 59.99 cm
Weight	1.58 kg
Material	Wood
Display Type	Analogue
Special Features	Hourly Cuckoo Chime, Automatic Night Shut-Off
Power Source	Battery Operated



Figure 3: Acctim Isky Chalet Style Cuckoo Clock with indicated dimensions (59.99cm height, 27.99cm width).

9. WARRANTY AND SUPPORT

Acctim products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Acctim website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Acctim customer service. Contact details can typically be found on the product packaging or the official brand website.

Please retain your proof of purchase for any warranty claims.