

HUBERT HU591-5-13

HUBERT Display Riser Instruction Manual

Model: HU591-5-13

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the proper use and care of your HUBERT Rectangular Display Riser, Model HU591-5-13. This display riser is designed to elevate and showcase various items, such as food products, merchandise, or decorative pieces, in commercial or retail environments. Its robust construction and powder-coated finish ensure durability and a professional appearance.

The riser features a sturdy, rectangular frame with a black powder-coated finish, offering a sleek and versatile presentation solution. No assembly is required for this product, allowing for immediate use upon unpacking.

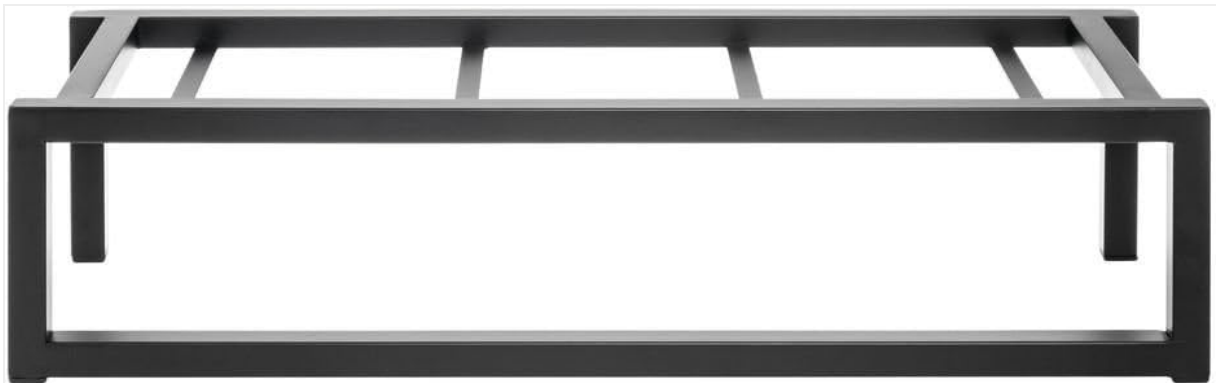


Figure 1: Front view of the HUBERT Rectangular Display Riser.

2. SETUP

The HUBERT Display Riser is designed for immediate use and requires no assembly. Follow these steps for initial setup:

- Unpacking:** Carefully remove the display riser from its packaging. Inspect the unit for any signs of damage during transit. If any damage is observed, contact your supplier immediately.
- Placement:** Place the display riser on a stable, level, and clean surface. Ensure the surface can

adequately support the weight of the riser and any items placed upon it. Avoid placing the riser on uneven surfaces to prevent instability.



Figure 2: Angled view of the HUBERT Rectangular Display Riser, ready for placement.

3. OPERATING INSTRUCTIONS

The HUBERT Display Riser is straightforward to operate. Its primary function is to elevate items for improved visibility and aesthetic presentation.

- **Item Placement:** Carefully place items onto the top surface of the riser. Distribute weight evenly to maintain stability.
- **Weight Capacity:** While designed for durability, avoid overloading the riser. Excessive weight can compromise its structural integrity and stability.
- **Temperature Considerations:** The powder-coated finish is durable, but extreme temperatures or direct heat sources should be avoided to prevent damage to the finish.
- **Stability Check:** Before leaving the display unattended, gently test the stability of the riser and its contents to ensure it is secure.

4. MAINTENANCE

Regular cleaning and proper care will extend the life and maintain the appearance of your display riser.

- **Cleaning:** Wipe the surface with a soft, damp cloth. For more stubborn marks, a mild, non-abrasive detergent can be used. Ensure to rinse thoroughly with a clean, damp cloth and dry immediately to prevent water spots.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the powder-coated finish.
- **Storage:** When not in use, store the riser in a dry, clean environment to protect its finish and prevent dust accumulation.

5. TROUBLESHOOTING

Most issues with the display riser can be resolved with simple checks.

- **Instability:** If the riser appears unstable, ensure it is placed on a completely flat and level surface. Uneven surfaces are the most common cause of instability.
- **Scratches/Dents:** Minor scratches can sometimes be touched up with appropriate paint, but prevention through careful handling and placement is recommended. Dents typically indicate impact damage.
- **Discoloration:** Ensure the riser is not exposed to direct sunlight for prolonged periods or harsh chemicals, which can cause fading or discoloration of the finish.

If you encounter issues not covered here or require further assistance, please contact HUBERT customer support.

6. SPECIFICATIONS

Feature	Detail
Brand	HUBERT
Model Number	HU591-5-13
Dimensions (L x W x H)	20 inches x 6 inches x 5.5 inches
Color	Black
Finish Type	Powder Coated
Item Weight	28 Pounds
Assembly Required	No
Shape	Rectangular

7. WARRANTY AND SUPPORT

For specific warranty information regarding your HUBERT Display Riser, please refer to the documentation provided at the time of purchase or visit the official HUBERT website. Warranty terms and conditions may vary.

Should you require technical support, replacement parts, or have any questions about your product, please contact HUBERT customer service through their official channels. Ensure you have your model number (HU591-5-13) available when contacting support.

[Visit the HUBERT Store on Amazon](#) for more information on HUBERT products.