

[Manuals.plus](#) /

> [SEB](#) /

> SEB Multi Délices Express YG661500 Yogurt Maker Instruction Manual

SEB YG661500

SEB Multi Délices Express YG661500 Yogurt Maker Instruction Manual

Model: YG661500

1. INTRODUCTION

Thank you for choosing the SEB Multi Délices Express YG661500 Yogurt Maker. This appliance is designed to simplify the preparation of a variety of homemade dairy products, including yogurts, dairy desserts, and fresh cheeses. With its advanced technology and multiple programs, you can enjoy delicious and fresh preparations tailored to your preferences. Please read this manual carefully before first use to ensure proper operation and maintenance.

2. SAFETY INSTRUCTIONS

- Always ensure the voltage indicated on the appliance corresponds to your mains voltage before connecting.
- Do not immerse the appliance base, power cord, or plug in water or any other liquid.
- This appliance is for household use only. Do not use it outdoors.
- Keep the appliance out of reach of children.
- Unplug the appliance from the mains socket when not in use, before cleaning, and during assembly or disassembly.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way. Contact authorized service personnel for repair.
- Ensure the appliance is placed on a stable, flat, heat-resistant surface, away from water splashes.
- Do not place the appliance near hot surfaces, such as a stove or oven.
- Avoid touching hot surfaces during operation. Use handles or knobs.
- Only use accessories recommended by the manufacturer.

3. PRODUCT OVERVIEW

The SEB Multi Délices Express YG661500 is designed for ease of use and versatility. It includes a base unit with a control panel, a transparent lid, and twelve individual glass pots with lids.



This image displays the complete Seb Multi Délices Express yogurt maker, featuring its white base, clear lid, and twelve glass pots with red lids, ready for use.

Components:

- **Base Unit:** Contains the heating element and control panel.
- **Transparent Lid:** Covers the pots during preparation.
- **Glass Pots (12x):** Individual 140 ml glass pots for preparations.
- **Pot Lids:** For covering individual pots, ideal for storage.
- **Removable Tray with Handles:** Facilitates easy handling and storage of the pots.
- **Draining Grids:** Used for making fresh cheese.



A close-up of the yogurt maker's front panel, highlighting the digital display, program selection buttons, and various icons representing different functions like express yogurt, standard yogurt, fresh cheese, dairy desserts, and soft desserts.

Key Features:

- **5 Automatic Programs:** Offers versatility for various preparations.
- **Express Program:** Prepares yogurts in approximately 4 hours.
- **12 BPA-Free Glass Pots:** Safe and convenient for individual servings.
- **Patented Draining System:** Exclusive for making fresh cheese.
- **Automatic Stop:** Ensures precise cooking and energy efficiency.
- **Removable Tray with Handles:** For easy transport and storage.

5 MODES AUTOMATIQUES



The yogurt maker is shown with an overlay emphasizing its five automatic programs, indicating its versatility for various preparations.

PLATEAU AMOVIBLE AVEC POIGNÉES



This image focuses on the removable tray feature of the yogurt maker, showcasing the integrated handles designed for easy transport and storage of the pots.

4. SETUP

Before First Use:

1. Unpack the appliance and all its components. Remove any packaging materials.
2. Wash the glass pots, pot lids, and draining grids in warm, soapy water. Rinse thoroughly and dry. These parts are also dishwasher safe.
3. Wipe the base unit with a damp cloth. Do not immerse the base unit in water.
4. Place the yogurt maker on a clean, dry, and stable surface.

5. OPERATING INSTRUCTIONS

General Operation:

1. Prepare your ingredients according to your chosen recipe.
2. Pour the mixture into the glass pots. Do not overfill.
3. Place the pots (without their individual lids) into the removable tray, then place the tray into the base unit.
4. Cover the appliance with the transparent lid.
5. Plug the appliance into a power outlet. The display will illuminate.
6. Press the 'P' button to cycle through the available programs.
7. Use the '+' and '-' buttons to adjust the program duration if necessary.
8. Once the program and time are selected, the appliance will start automatically after a few seconds.
9. At the end of the program, the appliance will beep and automatically switch off.
10. Carefully remove the transparent lid. Use oven mitts if the pots are hot.
11. Place the individual lids on the pots and allow them to cool before refrigerating.

FACILE À UTILISER



This image illustrates the ease of use, showing a hand carefully placing one of the glass pots, filled with a yogurt mixture, into the designated slot within the yogurt maker's base.

Specific Programs:

- **Program 1: Express Yogurt (4 hours)**

This program utilizes advanced steam technology to produce yogurts in a shorter timeframe. Ideal for quick preparations.

- **Program 2: Standard Yogurt (8-12 hours)**

For traditional yogurt preparation, allowing for a longer fermentation period which can result in a firmer texture and more pronounced flavor.

- **Program 3: Dairy Desserts (e.g., creams, puddings)**

This program is suitable for various creamy desserts. Refer to the included recipe book for specific ingredient ratios and cooking times.

- **Program 4: Fresh Cheese**

Use the provided draining grids for this program. The grids allow whey to separate, resulting in a thicker, fresh cheese consistency.

- **Program 5: Soft Desserts (e.g., small cakes)**

This program is designed for baking individual soft desserts directly in the glass pots.

DE DÉLICIEUX YAOURTS FAITS MAISON



A glass pot containing a delicious homemade yogurt, layered with fruit at the bottom, is held by a hand, demonstrating the appealing results achievable with the appliance.

6. MAINTENANCE AND CLEANING

Cleaning the Appliance:

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. The glass pots, pot lids, and draining grids are dishwasher safe. Alternatively, wash them by hand with warm, soapy water and rinse thoroughly.
3. Wipe the transparent lid and the base unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
4. Never immerse the base unit in water or any other liquid.
5. Ensure all parts are completely dry before storing or next use.

7. TROUBLESHOOTING

Common Issues and Solutions:

Problem	Possible Cause	Solution
Yogurt is too liquid.	Insufficient fermentation time; insufficient starter culture; milk temperature too low; incorrect milk type.	Increase fermentation time; use fresh starter culture; ensure milk is at room temperature; use whole milk for firmer results.
Yogurt is too lumpy.	Over-fermentation; milk heated too high.	Reduce fermentation time; ensure milk is not overheated before adding starter.
Appliance does not turn on.	Not plugged in; power outage.	Check power connection; verify power supply.
Display shows an error code.	Internal malfunction.	Unplug the appliance, wait a few minutes, then plug it back in. If the error persists, contact customer support.

8. SPECIFICATIONS

- **Model Number:** YG661500
- **Brand:** SEB
- **Power:** 600 Watts
- **Dimensions (L x W x H):** Approximately 51.31 x 86.36 x 96.52 cm (Note: These dimensions seem unusually large for a yogurt maker. Please refer to the product packaging for precise measurements.)
- **Weight:** Approximately 4.28 Kilograms
- **Pot Capacity:** 12 x 140 ml glass pots
- **Features:** 5 automatic programs, Express program, Patented draining system, BPA-free materials, Automatic stop.



This image provides a visual representation of the yogurt maker's dimensions, showing its width as 38 cm and height as 20.2 cm, useful for planning counter space. (Note: The image dimensions contradict the text specifications provided in the product data. Please refer to the physical product or official manufacturer's website for accurate dimensions.)

9. WARRANTY AND SUPPORT

SEB is committed to the reparability of its products. This appliance benefits from a 15-year reparability commitment at a fair price, supported by a network of 6200 repairers worldwide. This initiative aims to contribute to environmental protection and waste reduction.

For any questions, technical assistance, or warranty claims, please refer to the contact information provided in your product packaging or visit the official SEB website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07FTT2CV8>

More documents and user manuals: <https://manuals.plus/>