



Manuals.plus /

› KLARSTEIN /

› Klarstein Caroline Freestanding Microwave Oven User Manual

KLARSTEIN Caroline

Klarstein Caroline Freestanding Microwave Oven User Manual

Model: Caroline

1. INTRODUCTION

Thank you for choosing the Klarstein Caroline Freestanding Microwave Oven. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Liquids or other foods must not be heated in sealed containers since they are liable to explode.
- Only use utensils that are suitable for use in microwave ovens.
- When heating food in plastic or paper containers, keep a close watch on the oven due to the possibility of ignition.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode,

even after microwave heating has ended.

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The microwave oven must be operated with the decorative door open.

3. PRODUCT OVERVIEW AND FEATURES

The Klarstein Caroline microwave oven combines microwave and grill functions in a stylish retro design, offering versatile cooking options.

3.1 Key Features

Multifunctional: 700W microwave and 1000W grill for heating, baking, and grilling.

Spacious Capacity: 20-liter interior with a Ø 25.7 cm rotating glass turntable.

QuickSelect Technology: Simple operation with two control knobs.

Power Levels: 5 microwave power levels (Low, Medium Low (defrost), Medium, Medium High, High).

Combined Functions: 3 combined grill/microwave functions for versatile cooking.

Defrost Function: Weight scale for accurate defrosting times.

Retro Design: Elegant stainless steel interior and case with a 1950s retro look.

Easy Care: Stainless steel surfaces for simple cleaning.

Accessories: Includes a BBQ grill rack for crispy results.

3.2 Package Contents

1 x Klarstein Caroline Microwave Oven

1 x Glass Tray (Ø 25.7 cm)

1 x Rotating Ring

1 x BBQ Grill Rack

1 x User Manual

3.3 Product Views



Figure 3.1: Front view of the Klarstein Caroline Freestanding Microwave Oven in red, showcasing its retro design and control panel.



**700 WATT
MICROWAVE &
1000 WATT GRILL**


Powerful 2-in-1 device



**COOKING TIME OF
UP TO 35 MINUTES**

Perfect cooking with
a weight scale for
defrosting times

Figure 3.2: The microwave oven in a kitchen setting, illustrating its powerful 700W microwave and 1000W grill functions, suitable for various cooking tasks.

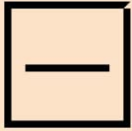

20-LITRE CAPACITY

Large interior with
Ø 25.5 cm turntable



Figure 3.3: Interior view of the microwave oven, highlighting its 20-liter capacity and the Ø 25.7 cm glass turntable, providing ample space for dishes.



QUICKSELECT TECHNOLOGY

Simple operation with only 2 controls



Figure 3.4: Close-up of the control panel, demonstrating the QuickSelect technology with two intuitive rotary knobs for power and timer/defrost settings.



STAINLESS STEEL CASE WITH A '50S RETRO LOOK

Stylish and elegant design

Figure 3.5: The Klarstein Caroline microwave oven integrated into a kitchen, showcasing its stylish stainless steel case and retro aesthetic.



Figure 3.6: Diagram illustrating the external dimensions of the microwave oven: approximately 43.5 cm (L) x 26 cm (H) x 36 cm (D).



TASTY COMBINED

3 microwave grill combi stages for perfect results
when cooking, grilling and baking.

Figure 3.7: Examples of dishes prepared using the microwave oven's combined functions, including shrimp, roasted chicken, ribs, and casserole, demonstrating its versatility.



COMPLETELY CRISPY

Including grillage for meat or sausages

Figure 3.8: The interior of the microwave oven with the included grill rack, designed for achieving crispy results on meats and sausages.

4. SETUP AND INSTALLATION

4.1 Unpacking

1. Carefully remove the microwave oven and all packing materials from the carton.
2. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged. Contact customer service immediately.
3. Remove any protective film from the surface of the cabinet and door.

4.2 Placement

- Place the oven on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in the oven.
- Ensure adequate ventilation: Leave a minimum of 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side for proper airflow.
- Do not block air vents.
- Do not place the oven near heat sources such as radiators, stoves, or other heat-producing appliances.

- Keep the oven away from strong magnetic fields.

4.3 Electrical Connection

- Ensure the power supply matches the specifications: 230 V~ 50 Hz.
- Plug the oven into a properly installed and grounded wall outlet. Do not use extension cords or adapters.

4.4 Turntable Assembly

1. Place the rotating ring inside the oven cavity.
2. Place the glass tray securely on top of the rotating ring. Ensure it sits properly in the center.

5. OPERATING INSTRUCTIONS

The Klarstein Caroline microwave oven features two main control knobs for simple operation.

5.1 Control Panel Overview



QUICKSELECT TECHNOLOGY

5 power levels, 3 grill microwave combination programmes and grill function

Figure 5.1: Close-up of the power selection dial, showing the various microwave power levels and combined grill functions.

- **Upper Knob (Power/Function Selector):** Used to select microwave power levels or combined grill functions.

- Low
- M.Low (Defrost)
- Med
- M.High
- High (700W Microwave)
- Combi.1 (Microwave + Grill)
- Combi.2 (Microwave + Grill)
- Combi.3 (Microwave + Grill)
- Grill (1000W Grill)

- **Lower Knob (Timer/Defrost Weight Selector):** Used to set cooking time (up to 35 minutes) or defrost weight.

5.2 Microwave Cooking

1. Place food in a microwave-safe container on the glass tray.
2. Close the oven door securely.
3. Turn the **Upper Knob** to select the desired microwave power level (e.g., High for full power).
4. Turn the **Lower Knob** to set the desired cooking time. The oven will start automatically once the timer is set.
5. When the cooking time is complete, the oven will chime and stop. Carefully remove the food.

5.3 Grill Cooking

1. Place food on the BBQ grill rack, then place the rack on the glass tray.
2. Close the oven door securely.
3. Turn the **Upper Knob** to select "Grill".
4. Turn the **Lower Knob** to set the desired grilling time. The oven will start automatically.
5. Monitor food closely to prevent burning.

5.4 Combined Cooking (Microwave + Grill)

1. Place food in a suitable container (or on the grill rack if appropriate) on the glass tray.
2. Close the oven door securely.
3. Turn the **Upper Knob** to select one of the "Combi.1", "Combi.2", or "Combi.3" settings. These settings combine microwave and grill power for optimal results for different food types.
4. Turn the **Lower Knob** to set the desired cooking time. The oven will start automatically.

5.5 Defrosting by Weight

1. Place the frozen food on the glass tray.
2. Close the oven door securely.
3. Turn the **Upper Knob** to "M.Low (Defrost)".
4. Turn the **Lower Knob** to the desired weight setting (e.g., 0.2 kg, 0.4 kg, etc.). The oven will automatically calculate the defrosting time and begin.
5. During defrosting, it may be necessary to turn the food over to ensure even thawing.

6. CARE AND MAINTENANCE

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your microwave oven.

6.1 Cleaning the Oven Interior

- Always unplug the oven before cleaning.
- Wipe the interior surfaces, including the stainless steel walls, with a damp cloth and mild detergent after each use.
- For stubborn stains, place a bowl of water with lemon juice inside and heat on high for 2-3 minutes. The steam will loosen the residue, making it easier to wipe away.
- The glass tray and rotating ring can be removed and washed in warm, soapy water or in a dishwasher.
- Ensure all parts are dry before reassembling and using the oven.

6.2 Cleaning the Oven Exterior

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they can damage the finish.
- Clean the door and door seals regularly to ensure proper closure and prevent food buildup.

6.3 Storage

- If storing the oven for an extended period, ensure it is clean and dry.
- Store in a cool, dry place, away from direct sunlight and moisture.

7. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Plug into outlet; Close door securely; Check fuse or reset circuit breaker.
Food not heating	Incorrect power level selected; Cooking time too short; Food not suitable for microwave.	Select higher power level; Increase cooking time; Use microwave-safe dishes.
Turntable not rotating	Turntable not properly placed on rotating ring; Obstruction under turntable.	Re-position turntable and ring; Remove any obstructions.
Oven light not working	Bulb burnt out.	Contact qualified service personnel for replacement.
Excessive noise during operation	Turntable or rotating ring not correctly positioned; Food container too large.	Adjust turntable and ring; Use a smaller, appropriate container.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model	Klarstein Caroline
Microwave Power Output	700 W
Grill Power Output	1000 W
Capacity	20 Liters
Turntable Diameter	Ø 25.7 cm
Power Levels	5 (Low, M.Low, Med, M.High, High)
Combined Functions	3 Microwave/Grill Combinations
Max. Cooking Time	35 minutes
Power Consumption	1050 W
Power Supply	230 V~ 50 Hz
Dimensions (L x H x D)	Approx. 43.5 x 26 x 36 cm
Inner Space (L x H x D)	Approx. 32 x 20 x 31 cm
Weight	Approx. 11 kg
Mains Cable Length	Approx. 1 meter

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Klarstein website. Please have your model number (Caroline) and purchase details ready when contacting support.

For general inquiries, you may also refer to the seller's information:

- Seller: Express Shipping
- Seller ID: A1V5QA53AWV1MN
- Seller Link: [View Seller Information](#)