

[manuals.plus](#) /› [Gmatrix](#) /› [Gmatrix RC280 Replacement Remote Control User Manual for Roku TVs](#)**Gmatrix RC280**

Gmatrix RC280 Replacement Remote Control User Manual

MODEL: RC280**Brand: Gmatrix**

1. INTRODUCTION

This manual provides essential information for the proper use and care of your Gmatrix RC280 Replacement Remote Control. This remote is designed to be a direct replacement for your original Roku TV remote, offering seamless functionality without complex setup.

The Gmatrix RC280 is a standard IR (Infrared) remote control. Please note that it does not support voice control or have a headphone jack. It is not an RF (Radio Frequency) remote.



Image 1: Gmatrix RC280 Replacement Remote Control for Roku TVs.

2. SAFETY INFORMATION

- Use only 2 AAA batteries. Do not mix old and new batteries, or different types of batteries.
- Ensure batteries are inserted with correct polarity (+/-).
- Remove batteries if the remote will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

3. PACKAGE CONTENTS

- 1x Gmatrix RC280 Replacement Remote Control.
- **Note:** 2 AAA batteries are required and are NOT included in the package.

4. SETUP

The Gmatrix RC280 remote control is designed for immediate use with compatible Roku TVs. No programming or pairing is required.

1. **Install Batteries:** Open the battery compartment on the back of the remote. Insert 2 AAA batteries,

ensuring correct polarity.

2. **Ready to Use:** Once batteries are installed, the remote is ready to operate your compatible Roku TV.




Image 2: Battery installation for the Gmatrix RC280 remote control.

Your browser does not support the video tag.

Video 1: A short demonstration by Gmatrix Magic showing the remote's functionality and ease of use with a TCL Roku TV.

5. OPERATING INSTRUCTIONS

The Gmatrix RC280 features intuitive buttons for easy navigation and control of your Roku TV.

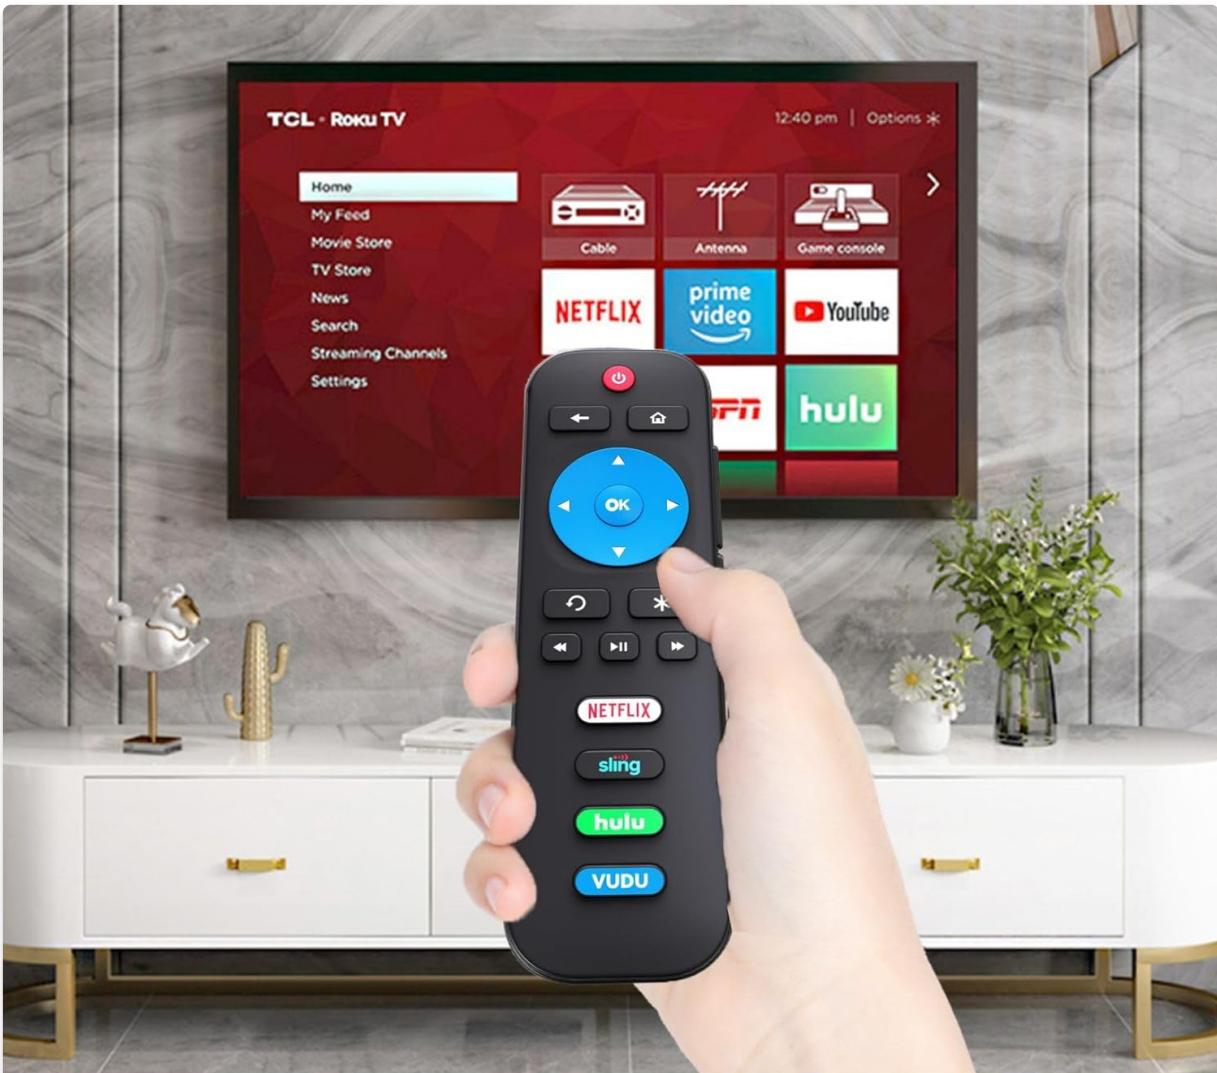

Easy to Grip

All frequently used buttons at your fingertips

Image 3: Detailed diagram of the remote control's function buttons.

- **Power Button (Red):** Turns the TV on or off.
- **Back Button (Arrow Left):** Navigates back to the previous menu or screen.
- **Home Button (House Icon):** Immediately returns to the Home screen.
- **Directional Pad (Blue Cross with OK):** Use the arrow buttons to navigate menus and content. Press **OK** to select an item.
- **Instant Replay (Curved Arrow):** Selects models streaming programs that support this feature and broadcasts TV if Live TV Pause is enabled, jumping back a few seconds with each press and resuming play. Broadcast TV if live TV pause is disabled, jumps to the previous channel. When using an on-screen keyboard, backspaces in the text you are entering.
- **Options Button (Asterisk):** Displays additional options when available.
- **Play/Pause, Rewind, Fast Forward:** Standard media playback controls.
- **Volume Up/Down/Mute (Side Buttons):** Control the TV's audio level.
- **App Shortcut Buttons (Netflix, Sling, Hulu, Vudu):** Directly access these popular streaming applications.

NO programming or pairing need

Work right out of box after putting in batteries



Image 4: The remote control in use with a TCL Roku TV, highlighting the app shortcut buttons.

6. COMPATIBILITY


The Gmatrix RC280 Replacement Remote Control is compatible with ALL Built-in Roku TV brands, including but not limited to:

- TCL Roku TV
- Hisense Roku TV
- ONN Roku TV
- INSIGNIA Roku TV
- SHARP Roku TV
- Hitachi Roku TV
- Philips Roku TV
- SANYO Roku TV
- Westinghouse Roku TV
- Element Roku TV
- JVC Roku TV

- LG Roku TV
- RCA Roku TV
- Magnavox Roku TV
- InFocus Roku TV

WARNING: This remote is NOT COMPATIBLE with Roku Stick or Roku Streaming Players.

Only For TCL Roku TV

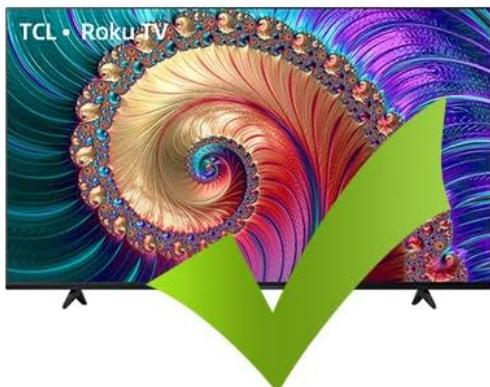

Not For Roku Player Box



Not For Roku Stick



Image 5: Visual representation of compatible Roku TVs versus incompatible Roku devices.

Compatibility for smart Roku TV

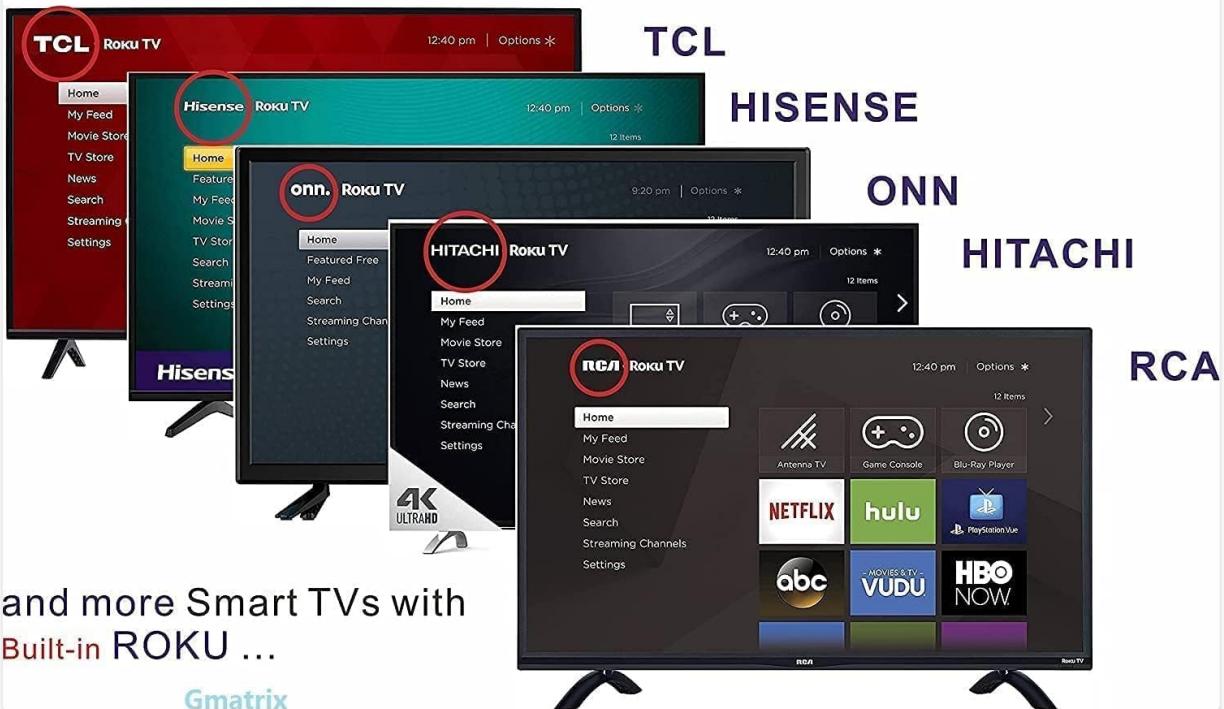


Image 6: Examples of smart Roku TV brands compatible with the remote.

7. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure fresh 2 AAA batteries are correctly installed.
 - Check for any obstructions between the remote and the TV's IR receiver.
 - Verify your TV is a compatible Roku TV model (not a Roku Stick or Player).
- **No voice control or headphone jack:** This remote is a standard IR remote and does not support these features.

8. SPECIFICATIONS

Feature	Detail
Model Number	RC280
Product Dimensions	3 x 3 x 0.5 inches
Item Weight	1.76 ounces
Batteries Required	2 AAA batteries (not included)
Connectivity Technology	Infrared (IR)
Color	Black

9. MAINTENANCE

- Clean the remote control regularly with a soft, dry cloth. Do not use liquid cleaners.
- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- Replace batteries promptly when the remote's performance declines.

10. WARRANTY AND SUPPORT

The Gmatrix RC280 Replacement Remote Control comes with a 2-Year Warranty.

We maintain a high standard of excellence and strive for 100% customer satisfaction. If you have any query regarding your order or product, please feel free to contact us. We will respond within 12 hours on working days.