

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Polaroid](#) /

› [Polaroid OneStep+ Black \(9010\) Instant Film Camera Instruction Manual](#)

## Polaroid 9010

# Polaroid OneStep+ Black (9010) Instant Film Camera Instruction Manual

Your guide to capturing instant memories with modern connectivity.

## INTRODUCTION

The Polaroid OneStep+ is an analog instant camera designed to connect with your smartphone, offering a blend of classic instant photography and modern creative tools. This manual provides essential information for setting up, operating, and maintaining your camera, ensuring you get the most out of its features.

Key features include:

- Original Polaroid Format for instant prints.
- Bluetooth connectivity for smartphone app integration.
- Dual lens system: Standard (3ft to infinity) and Portrait (1ft to 3ft).
- Integrated powerful flash and self-timer mode.
- Compatible with Polaroid i-Type and 600 film.



*Figure 1: Front view of the Polaroid OneStep+ camera with an ejecting instant photo.*

## SETUP

### 1. Unboxing and Initial Inspection

Your Polaroid OneStep+ camera package includes the camera body and essential accessories. Please inspect all components upon arrival to ensure everything is present and undamaged.

### 2. Charging the Camera

The camera is powered by a built-in Lithium Ion battery. Before first use, fully charge the camera using the provided USB cable. A full charge provides approximately 60 days of battery life, depending on usage.



*Figure 2: Back view of the camera, highlighting the charging port.*

### **3. Loading Film**

The OneStep+ is compatible with both i-Type and 600 instant film. To load film:

1. Open the film door located at the bottom front of the camera.
2. Insert a new film pack into the film compartment with the darkslide facing up.
3. Close the film door. The darkslide will automatically eject.
4. The LED counter on top of the camera will indicate the number of remaining photos.

Your browser does not support the video tag.

*Video 1: This video provides an overview of the Polaroid OneStep+ camera, demonstrating how to load film, switch between standard and portrait lenses, and use the flash override button.*

## OPERATING THE CAMERA

---

### 1. Power On/Off

To turn the camera on, slide the red 'ON' switch located on the back of the camera. To turn it off, slide the switch back to the 'OFF' position.

### 2. Taking a Photo

Frame your shot using the viewfinder. Press the red shutter button on the front of the camera to capture your image. The photo will eject from the film slot.

### 3. Flash Control

The camera features a powerful built-in flash. To disable the flash for a specific shot, press and hold the small button located on the side of the camera (near the charging port) while pressing the shutter button.

### 4. Lens Modes (Standard & Portrait)

The OneStep+ offers two fixed-focus lenses:

- **Standard Lens:** For subjects 3 feet (0.9m) and beyond.
- **Portrait Lens:** For subjects between 1 foot (0.3m) and 3 feet (0.9m).

Switch between these lenses using the toggle switch on top of the camera.

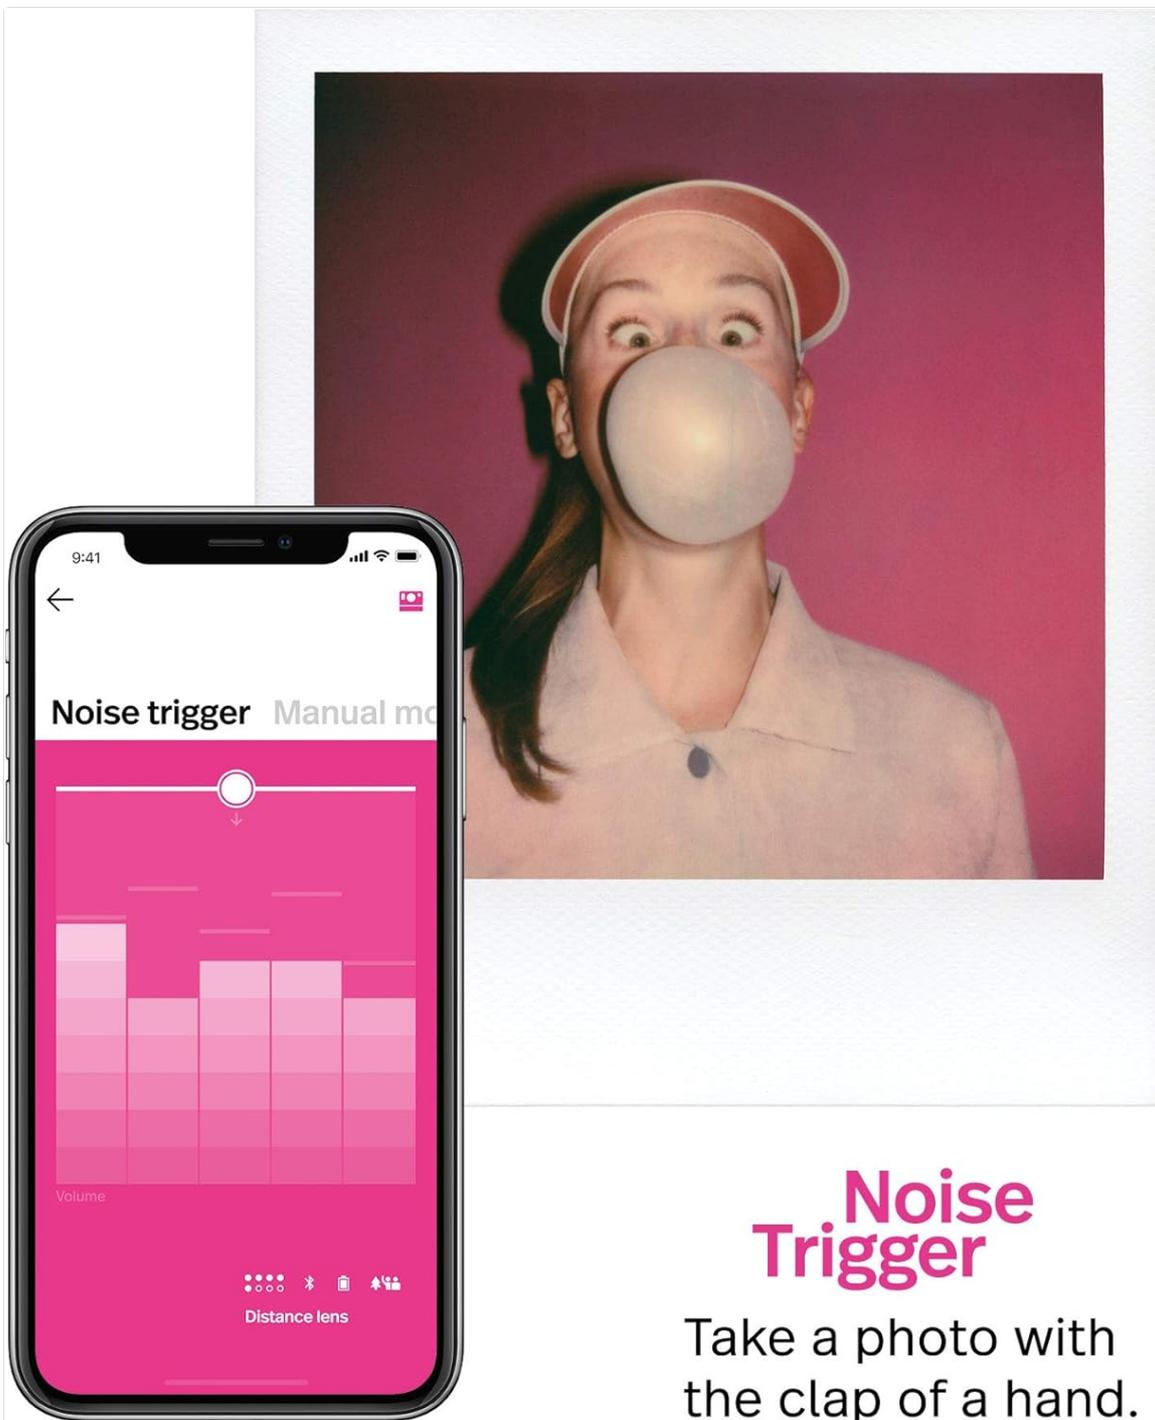


Figure 3: Example of a close-up photo taken using the Portrait Lens mode.

## 5. Exposure Adjustment

Use the light/dark toggle switch located near the flash to adjust the exposure. Move it towards '+' for brighter photos or towards '-' for darker photos, depending on lighting conditions.

## 6. Bluetooth Connection and App Features

The Polaroid OneStep+ connects to the Polaroid Originals smartphone app (available for iOS and Android) via Bluetooth, unlocking advanced creative modes:

- **Remote Trigger:** Take photos from a distance using your phone.
- **Self-Timer:** Set a timer for your shots.
- **Double Exposure:** Capture two scenes in a single frame.
- **Light Painting:** Use light sources to create unique effects.

- **Noise Trigger:** Trigger the shutter with sound.
- **Manual Mode:** Full control over aperture, shutter speed, and flash.

Your browser does not support the video tag.

*Video 2: This official video from Polaroid Originals demonstrates the key features of the OneStep+ camera, including Bluetooth connectivity, app-controlled modes like remote trigger, self-timer, double exposure, light painting, noise trigger, and manual mode, as well as the photo scanner.*

### App Feature Examples:



*Double Exposure*



*Remote Trigger*




## Double Exposure

Capture two scenes in a single frame.



*Manual Mode*

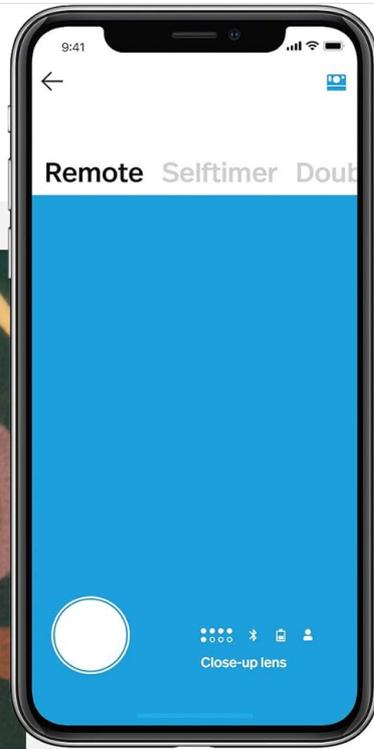

## Remote Trigger

Get lost in the moment without missing the shot.

*Noise Trigger*



## Manual Mode

Fine-tune your camera's settings to just the way you like them.

*Light Painting*



## Light Painting

Turn a torch into your paintbrush and capture it on film.



*Self Timer*

## MAINTENANCE

### 1. Cleaning the Camera

Use a soft, dry, lint-free cloth to clean the camera's exterior. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials or harsh chemicals.

### 2. Battery Care

To prolong battery life, store the camera in a cool, dry place when not in use. Recharge the battery

regularly, even if the camera is not used frequently.

### 3. Film Storage

Store film packs in a cool, dark place. Avoid exposing film to direct sunlight or extreme temperatures, as this can affect image quality.

## TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is charged. Connect the camera to a power source using the USB cable.
- **Film not ejecting:** Check if a film pack is correctly loaded and if there are any photos remaining (indicated by the LED counter).
- **Poor photo quality:** Ensure proper lighting, use the correct lens mode (Standard/Portrait), and adjust exposure settings if necessary. Keep the film shielded from light immediately after ejection.
- **Bluetooth connectivity issues:** Ensure Bluetooth is enabled on your smartphone and the camera. Try restarting both devices and re-pairing through the Polaroid Originals app.

For more detailed troubleshooting, refer to the Polaroid Originals app's help section or visit the official Polaroid support website.

## SPECIFICATIONS

| Feature            | Detail                           |
|--------------------|----------------------------------|
| Product Dimensions | 5.9 x 3.8 x 4.37 inches          |
| Item Weight        | 1.08 pounds                      |
| Item Model Number  | 9010                             |
| Batteries          | 1 Lithium Ion battery (included) |
| Special Feature    | Built-In Flash, Timer, Compact   |
| Film Format Type   | Instant (i-Type & 600 film)      |
| Connectivity       | Bluetooth                        |
| Manufacturer       | Polaroid Originals               |

## WARRANTY AND SUPPORT

---

For information regarding product warranty, please refer to the warranty card included with your purchase or visit the official Polaroid website. For further assistance, technical support, or to purchase accessories and film, please visit the [Polaroid Store](#) or contact customer service.