

[Manuals.plus](#) /

› [TECKNET](#) /

› TECKNET Bluetooth Mouse BM308 User Manual

TECKNET BM308

TECKNET Bluetooth Mouse BM308 User Manual

Model: BM308 (EWM01308)

1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your TECKNET Bluetooth Mouse BM308. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.



Image 1.1: The TECKNET Bluetooth Mouse BM308 in Red.

2. PACKAGE CONTENTS

- 1 x TECKNET Wireless Bluetooth Mouse
- 1 x User Manual
- 1 x Warranty Card

3. PRODUCT FEATURES

- **Adjustable DPI:** Six adjustable DPI levels (800/1200/1600/2400/3200/4800) for precise control.
- **6 Buttons:** Includes left, right, scroll wheel, DPI button, and two side buttons.

- **TruWave Technology:** Ensures smooth and accurate tracking on various surfaces.
- **Ergonomic Design:** Contoured shape and soft rubber grip for comfortable use.
- **Long Battery Life:** Up to 24 months of battery life with two AA batteries (not included).
- **Bluetooth Connectivity:** Connects directly to Bluetooth-enabled devices without a receiver, offering a working range of up to 15 meters.

6 DPI LEVELS



One Button to Change the Moving Speed of Pointer

Image 3.1: The mouse features six adjustable DPI levels for customized cursor speed.

BLUETOOTH 5.0 STABLE & COMPATIBLE



Image 3.2: The ergonomic design provides a comfortable grip for extended use.

4. SETUP INSTRUCTIONS

4.1 Battery Installation

1. Locate the battery compartment on the underside of the mouse.
2. Remove the battery cover.
3. Insert two AA batteries (not included) according to the polarity indicators (+/-).
4. Replace the battery cover securely.

4.2 Bluetooth Pairing

1. Turn on the mouse using the On/Off switch located on the underside.
2. Press the Bluetooth pairing button on the underside of the mouse. The indicator light on the mouse will begin to flash, indicating it is in pairing mode.
3. On your computer or device, navigate to the Bluetooth settings.
4. Enable Bluetooth and search for new devices.
5. Select "TECKNET Mouse" (or similar name) from the list of available devices to connect.
6. Once connected, the indicator light on the mouse will stop flashing and remain solid for a few seconds, then turn off to conserve power.



Image 4.1: The underside of the mouse, illustrating battery placement and the Bluetooth pairing button.

Bluetooth Wireless Mouse

Enjoy Lag-free Transmission, the working range can be up to 15 meters



Image 4.2: The mouse offers a stable Bluetooth connection with a working range of up to 15 meters.

5. OPERATING INSTRUCTIONS

5.1 DPI Adjustment

Press the DPI button located behind the scroll wheel to cycle through the six available DPI settings (800/1200/1600/2400/3200/4800). Each press will change the cursor speed, allowing you to select the sensitivity that best suits your task.

5.2 Button Functions

- **Left Button:** Standard click function.
- **Right Button:** Standard right-click function.
- **Scroll Wheel:** Scrolls up and down. Can also be pressed for middle-click functionality.
- **DPI Button:** Adjusts cursor sensitivity.
- **Side Buttons:** Typically function as 'Forward' and 'Backward' in web browsers and file explorers.

Note: The side buttons may not function on Mac OS devices due to compatibility limitations. Other buttons will operate normally.

5.3 TruWave Technology

The mouse utilizes TruWave Technology for enhanced tracking accuracy. This allows the mouse to operate smoothly on a variety of surfaces, including resin, wood, paper, cloth, and leather, without requiring a mouse pad.



Image 5.1: TruWave Technology enables the mouse to track accurately on diverse surfaces.

6. MAINTENANCE

6.1 Cleaning

To clean the mouse, use a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, ensuring no moisture enters the internal components. Avoid using harsh chemicals or abrasive cleaners.

6.2 Battery Replacement

When the mouse performance degrades or the indicator light signals low battery, replace the two AA batteries following the instructions in Section 4.1. Always use fresh batteries for optimal performance.

7. TROUBLESHOOTING

- **Mouse not connecting:**
 - Ensure the mouse is turned on.
 - Check if the batteries are correctly installed and have sufficient charge.
 - Verify that Bluetooth is enabled on your device.
 - Re-initiate the Bluetooth pairing process (Section 4.2).
 - Try connecting to a different Bluetooth-enabled device to rule out device-specific issues.
- **Cursor movement is erratic or unresponsive:**
 - Ensure the optical sensor on the underside of the mouse is clean and free from obstructions.
 - Try using the mouse on a different surface.
 - Replace the batteries.
 - Adjust the DPI setting to a suitable level.

- **Side buttons not working on Mac OS:**
 - This is a known compatibility limitation with Mac OS. The side buttons may not function as intended on these devices. Other mouse functions should work normally.
- **Mouse goes to sleep too quickly:**
 - The mouse features an automatic sleep mode to conserve battery. To wake it up, simply click any button.

8. SPECIFICATIONS

Feature	Specification
Model Number	EWM01308
Product Dimensions	2.8 x 1.69 x 4.41 inches
Item Weight	3.17 ounces
Connectivity Technology	Bluetooth, Wireless
DPI Levels	800, 1200, 1600, 2400, 3200, 4800
Movement Detection	TruWave Technology
Battery Type	2 x AA (not included)
Battery Life	Up to 24 months
Working Range	Up to 15 meters

9. WARRANTY AND SUPPORT

TECKNET offers **36 MONTHS SUPPORT** for this product. If you encounter any issues or have questions regarding your TECKNET Bluetooth Mouse, please contact our professional customer service team. Refer to the warranty card included in your package for contact details and specific warranty terms.

© 2025 TECKNET. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07FVBYTNP>

More documents and user manuals: <https://manuals.plus/>