

Beko FSE52320DWD

Beko FSE52320DWD Freestanding Gas Cooker User Manual

Model: FSE52320DWD / PAL - 7786982123

1. IMPORTANT SAFETY INFORMATION

Please read this user manual carefully before installing and using your appliance. Keep this manual for future reference. Always follow the safety instructions to prevent personal injury or damage to the appliance.

- **Gas Safety:** This appliance uses gas. Installation and servicing must be carried out by a qualified gas installer. Ensure adequate ventilation in the room where the appliance is installed.
- **Electrical Safety:** If the appliance has an electrical ignition, ensure it is properly earthed. Do not use adapter plugs or extension cords.
- **Children and Vulnerable Persons:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Hot Surfaces:** The appliance surfaces become hot during use. Do not touch hot surfaces. Use oven gloves when handling hot items.
- **Cleaning:** Always switch off the appliance and allow it to cool before cleaning.
- **Ventilation:** Ensure the kitchen is well-ventilated when the cooker is in use.

2. PRODUCT OVERVIEW

The Beko FSE52320DWD is a freestanding gas cooker designed for efficient cooking. It features a gas hob with four burners and a spacious 55-liter gas oven.

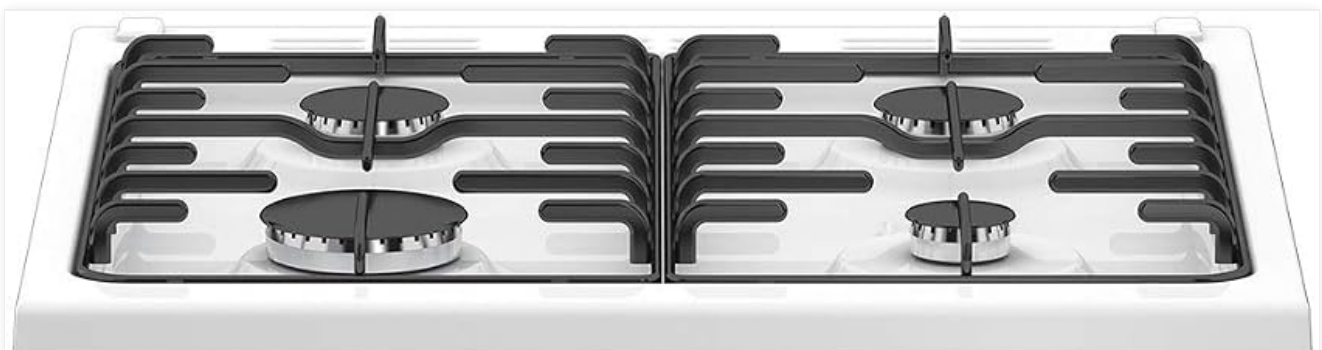




Figure 2.1: Front view of the Beko FSE52320DWD Freestanding Gas Cooker. This image displays the appliance's white exterior, the black glass oven door with a handle, and the four gas burners on the hob. Control knobs are visible on the front panel above the

Key Components:

- **Gas Hob:** Features four gas burners of varying sizes for different cooking needs.
- **Control Knobs:** Located on the front panel for precise control of hob burners and oven temperature.
- **Oven Door:** Double-glazed for insulation and safety.
- **Oven Interior:** Equipped with oven racks and an interior light for visibility.
- **Digital Display:** For time and potentially oven functions (if applicable).

3. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your cooker. It is highly recommended that installation be performed by a qualified and certified professional.

3.1 Unpacking

- Carefully remove all packaging materials.
- Inspect the cooker for any signs of damage during transit. Report any damage to your retailer immediately.
- Keep packaging materials away from children.

3.2 Positioning and Leveling

- Place the cooker on a flat, stable surface.
- Ensure there is adequate clearance from adjacent walls and cabinets as per local regulations and the appliance's specifications.
- Use the adjustable feet at the bottom of the cooker to level the appliance. A level cooker ensures even cooking and prevents spills.

3.3 Gas Connection

WARNING: Gas connection must be performed by a qualified and registered gas installer.

- Ensure the gas supply is turned off before making any connections.
- Connect the cooker to the gas supply using appropriate fittings and flexible hose, ensuring all connections are leak-free.
- After connection, check for gas leaks using a soapy water solution (never an open flame).

3.4 Electrical Connection (if applicable for ignition/light)

If your model includes an electric ignition or oven light, it will require an electrical connection.

- Ensure the power supply matches the voltage and frequency specified on the appliance's rating plate.
- Connect the appliance to a properly earthed socket.
- Do not use multi-plugs or extension cords.

4. OPERATING INSTRUCTIONS

4.1 Using the Gas Hob

1. **Selecting a Burner:** Choose the appropriate burner size for your cookware.
2. **Igniting a Burner:**
 - Push in the control knob for the desired burner and turn it counter-clockwise to the large flame symbol

(maximum setting).

- If your cooker has an integrated ignition, press the ignition button or continue to push in the knob until the burner ignites.
- Hold the knob in for a few seconds after ignition to allow the flame supervision device to activate. Release the knob; the flame should remain lit. If not, repeat the process.

3. **Adjusting Flame:** Once lit, turn the knob to adjust the flame size. Turn towards the small flame symbol for a lower heat setting.

4. **Turning Off:** Turn the control knob clockwise to the "off" position (dot symbol).

4.2 Using the Gas Oven

1. **Preheating:** For best results, preheat the oven to the desired temperature before placing food inside.

2. **Setting Temperature:** Push in the oven control knob and turn it to the desired temperature setting.

3. **Igniting the Oven:**

- Depending on the model, you may need to press an ignition button or hold the knob in for the oven burner to ignite.
- Observe the oven burner through the oven door or viewing window to ensure it has ignited.
- Hold the knob in for a few seconds after ignition to allow the flame supervision device to activate. Release the knob; the flame should remain lit.

4. **Oven Light:** If equipped, the oven light can usually be turned on/off via a separate switch or by pulling out the oven control knob.

5. **Cooking:** Place food on the appropriate oven rack. Close the oven door firmly.

6. **Turning Off:** Turn the oven control knob to the "off" position.

4.3 Using the Digital Timer (if applicable)

Your cooker may feature a digital timer for setting cooking durations or as a minute minder.

- Refer to the specific instructions in your appliance's full manual for setting the clock and timer functions, as these can vary by model.
- Typically, buttons like '+' and '-' are used to adjust time, and a 'mode' or 'clock' button to select the function.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Beko cooker.

WARNING: Always ensure the appliance is switched off and completely cool before cleaning.

5.1 Exterior Cleaning

- Wipe exterior surfaces with a soft cloth dampened with warm soapy water.
- For stubborn stains, use a non-abrasive kitchen cleaner.
- Dry thoroughly with a clean cloth.

5.2 Hob Cleaning

- Remove pan supports, burner caps, and burner crowns. Wash them in warm soapy water or in a dishwasher (if suitable).
- Clean the hob surface with a damp cloth and mild detergent.
- Ensure burner parts are completely dry before reassembling to prevent ignition issues.
- Clean the ignition points and thermocouples gently with a small brush to remove food debris.

5.3 Oven Cleaning

- Remove oven racks and wash them in warm soapy water.
- Wipe the interior of the oven with a damp cloth and a mild oven cleaner (ensure it's safe for your oven type).
- For stubborn grease, follow the instructions on your chosen oven cleaner.
- Clean the oven door glass with a glass cleaner.
- Ensure all cleaning product residues are wiped away before using the oven again.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and their potential solutions:

Problem	Possible Cause	Solution
Burner does not ignite.	No gas supply; burner parts wet or clogged; ignition electrode dirty.	Check gas supply valve. Ensure burner parts are dry and clean. Clean ignition electrode.
Flame goes out when knob is released.	Flame supervision device not activated; thermocouple dirty or faulty.	Hold knob in longer (5-10 seconds). Clean thermocouple. If problem persists, contact service.
Oven not heating.	No gas supply to oven; oven burner not ignited.	Check gas supply. Ensure oven burner ignites properly as per operating instructions.
Uneven cooking in oven.	Oven not preheated; food placed incorrectly; oven not level.	Preheat oven fully. Use correct rack position. Check if cooker is level.

If the problem persists after trying these solutions, please contact Beko customer service or a qualified technician.

7. SPECIFICATIONS

Feature	Specification
Brand	Beko
Model Number	FSE52320DWD / PAL - 7786982123
Product Dimensions (L x W x H)	50 x 60 x 85 cm
Weight	41.5 Kilograms
Oven Capacity	55 Litres
Number of Hobs	4
Energy Type	Gas
Form Factor	Freestanding
Finish Type	Polished

8. WARRANTY AND SUPPORT

Your Beko FSE52320DWD Freestanding Gas Cooker comes with a manufacturer's warranty. Please refer to the warranty

card provided with your appliance for specific terms and conditions, including the warranty period and coverage details. For technical assistance, spare parts, or to schedule a service appointment, please contact Beko customer support. You can usually find contact information on the Beko official website or on your purchase documentation. When contacting support, please have your appliance's model number (FSE52320DWD or PAL - 7786982123) and serial number ready. The serial number is typically located on a rating plate on the back or side of the appliance, or inside the oven door frame.