

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Beko](#) /

› [Beko FSM57300GX Freestanding Cooker Ceramic Stainless Steel A User Manual](#)

Beko FSM57300GX

Beko FSM57300GX Freestanding Cooker User Manual

Model: FSM57300GX | Brand: Beko

1. SAFETY INFORMATION

Please read this section carefully before installing or using your appliance to prevent personal injury or damage to the cooker.

- **Electrical Safety:** Ensure the cooker is connected to a properly earthed electrical supply by a qualified electrician. Do not use adapter plugs or extension cords.
- **Children and Vulnerable Persons:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **Hot Surfaces:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- **Overheating Hazard:** Never leave the appliance unattended during operation, especially when cooking with oil or fat, as this can lead to fire.
- **Ventilation:** Ensure adequate ventilation around the appliance. Do not obstruct ventilation openings.
- **Cleaning:** Always switch off the appliance and allow it to cool before cleaning. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- **Installation:** The appliance must be installed according to the instructions provided in this manual and in compliance with local regulations.

2. PRODUCT OVERVIEW

The Beko FSM57300GX is a freestanding electric cooker featuring a ceramic hob and a conventional oven with grill function, finished in stainless steel.





Figure 2.1: Front view of the Beko FSM57300GX Freestanding Cooker. This image displays the complete appliance, including the ceramic hob on top, the control panel below it, the oven door with a handle, and the storage compartment at the bottom.

2.1 Control Panel





Figure 2.2: Close-up of the control panel. The panel features six rotary knobs for hob and oven control, along with a digital display for the clock and timer functions, flanked by control buttons.

- **Hob Control Knobs:** Four knobs located on the left and right sides of the digital display, used to adjust the heat settings for the ceramic hob zones.
- **Oven Function Knob:** Typically located on the control panel, this knob selects the oven's cooking function (e.g., conventional, grill).
- **Oven Temperature Knob:** Used to set the desired temperature for the oven.
- **Digital Display:** Shows the current time and can be used for setting the timer or programming cooking duration.
- **Timer Buttons:** Buttons adjacent to the digital display for setting the clock and timer functions.

2.2 Ceramic Hob

The ceramic hob features four cooking zones of varying sizes, indicated by circular markings on the glass surface. These zones heat up quickly and provide even heat distribution.

2.3 Oven Interior





Figure 2.3: View of the oven interior with racks. The oven cavity includes multiple shelf positions and a removable wire rack for cooking.

- **Oven Cavity:** The main cooking compartment with a capacity of 55 litres.
- **Wire Racks:** Two removable wire racks are provided for placing cookware.
- **Grill Element:** Located at the top of the oven cavity for grilling functions.
- **Oven Light:** Illuminates the oven interior for visibility during cooking.

3. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your cooker. It is recommended that installation be carried out by a qualified professional.

3.1 Unpacking

- Carefully remove all packaging materials from the cooker.
- Inspect the appliance for any signs of damage. If damaged, do not install or use it, and contact your retailer.
- Remove all accessories (racks, trays) from inside the oven cavity.

3.2 Positioning

- Place the cooker on a firm, level surface.

- Ensure there is adequate clearance around the appliance as specified in the installation guide (refer to local regulations).
- Do not place the cooker near flammable materials or heat-sensitive surfaces.
- Adjust the leveling feet at the base of the cooker to ensure it is stable and level.

3.3 Electrical Connection

- The cooker must be connected to the mains electricity supply by a qualified electrician.
- Ensure the voltage and frequency ratings on the appliance's rating plate match your household's electrical supply.
- The appliance must be correctly earthed.
- Do not use multi-plug adapters or extension leads.

4. OPERATING INSTRUCTIONS

4.1 Initial Use

- Before first use, wipe the appliance surfaces with a damp cloth.
- Heat the empty oven at maximum temperature for approximately 30 minutes to burn off any manufacturing residues. Ensure the room is well-ventilated during this process.

4.2 Using the Ceramic Hob

1. Place a suitable pan on the desired cooking zone. Ensure the pan base covers the cooking zone completely.
2. Turn the corresponding hob control knob to the desired heat setting (typically 1-6 or 1-9).
3. The hob zone will begin to heat up. An indicator light may illuminate to show the hob is active.
4. After cooking, turn the knob back to the '0' position. The residual heat indicator will remain lit until the zone has cooled down.

4.3 Using the Oven

1. Turn the oven function knob to select the desired cooking mode (e.g., conventional cooking, bottom heat, top heat).
2. Turn the oven temperature knob to set the desired temperature.
3. Allow the oven to preheat to the set temperature. An indicator light will typically turn off when the oven has reached temperature.
4. Place your food inside the oven using appropriate ovenware.
5. Monitor cooking progress through the oven door glass.
6. Once cooking is complete, turn both oven knobs back to the '0' position.

4.4 Using the Grill

1. Turn the oven function knob to the grill setting.
2. Place food on a wire rack in the top section of the oven, ensuring it is not too close to the grill element.
3. Close the oven door (or leave slightly ajar if specified in the full manual for certain grill types).
4. Monitor food closely to prevent burning.

5. After grilling, turn the oven function knob back to the '0' position.

4.5 Timer Functions

The digital display on your cooker allows you to set the clock and utilize timer functions.

- **Setting the Clock:** Refer to the specific instructions in your full manual for setting the time (e.g., pressing a clock button and using '+' and '-' buttons). The display shows '12:00' as a default or current time.
- **Minute Minder:** This function acts as a countdown timer and does not control the oven's operation. An alarm will sound when the set time expires.
- **Cooking Duration:** This function allows you to set a specific cooking time for the oven. The oven will switch off automatically when the set time elapses.
- **End Time:** This function allows you to program the oven to switch off at a specific time of day.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Beko cooker.

5.1 General Cleaning

- Always ensure the appliance is switched off and completely cool before cleaning.
- Use a soft cloth and warm soapy water for general cleaning of exterior surfaces.
- Avoid abrasive cleaners, scouring pads, or harsh chemicals as they can damage surfaces.
- Dry all surfaces thoroughly after cleaning.

5.2 Cleaning the Ceramic Hob

- For light spills, wipe with a damp cloth and mild detergent once the hob has cooled.
- For stubborn stains or burnt-on food, use a specialized ceramic hob cleaner and a scraper designed for ceramic hobs.
- Never use abrasive sponges or powders on the ceramic surface.

5.3 Cleaning the Oven Interior

- Remove all racks and accessories from the oven. These can be washed in warm soapy water.
- For light soiling, wipe the interior with a damp cloth and mild detergent.
- For heavier grease and burnt-on food, use an oven cleaner specifically designed for electric ovens, following the product's instructions carefully.
- Ensure all cleaner residue is removed before using the oven again.

5.4 Cleaning the Oven Door

- Clean the glass panels with a soft cloth and glass cleaner or warm soapy water.
- Do not use abrasive materials or sharp objects on the glass, as this can cause scratches and potentially lead to shattering.

6. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their potential

solutions.

Problem	Possible Cause	Solution
Cooker does not switch on	No power supply; Fuse tripped; Door not closed properly (oven)	Check power outlet and circuit breaker; Ensure oven door is fully closed.
Hob not heating	Incorrect knob setting; Power issue	Ensure knob is set to a heat level; Check power supply.
Oven not heating	Incorrect function/temperature setting; Door not closed; Timer not set correctly	Verify function and temperature; Close oven door fully; Check timer settings.
Food cooking unevenly	Incorrect shelf position; Oven not preheated; Overcrowding	Use recommended shelf position; Always preheat oven; Avoid overcrowding the oven.
Oven light not working	Bulb faulty or loose	Replace oven bulb (ensure appliance is cool and disconnected from power).

If the problem persists after attempting these solutions, please contact Beko customer support or a qualified service technician.

7. TECHNICAL SPECIFICATIONS

The following specifications apply to the Beko FSM57300GX Freestanding Cooker:

Feature	Specification
Brand	Beko
Model Name	FSM57300GX
Reference Number	PAL - 7786986766
Dimensions (L x W x H)	50 x 60 x 85 cm
Weight	42.7 Kilograms
Oven Capacity	55 Litres
Installation Type	Freestanding
Control Type	Knob
Power	1700 Watts
Number of Hobs	4
Hob Material	Ceramic
Finish Material	Stainless Steel

Feature	Specification
Oven Features	Grill Function
Energy Type	Electric

8. WARRANTY AND SUPPORT

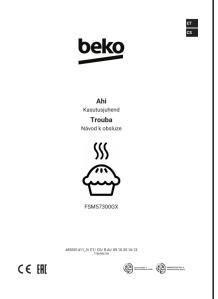
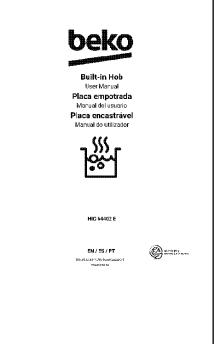
Your Beko FSM57300GX Freestanding Cooker comes with a manufacturer's warranty. Please refer to the warranty card provided with your appliance for specific terms and conditions, including warranty period and coverage.

For technical assistance, spare parts, or to schedule a service appointment, please contact Beko customer support. Ensure you have your model number (FSM57300GX) and serial number ready when contacting support.

Contact information for Beko customer service can typically be found on the Beko official website or in the documentation supplied with your appliance.

This manual is for informational purposes only. Always refer to the physical manual supplied with your product for the most accurate and up-to-date instructions.

Related Documents - FSM57300GX

	<p><u>Beko FSM57300GX Ahi Kasutusjuhend</u></p> <p>Kasutusjuhend Beko FSM57300GX aju ohutuks kasutamiseks, paigaldamiseks, hooldamiseks ja tõrkeotsinguks. Sisaldab olulist teavet ja hoiatusi.</p>
	<p><u>Beko HIC 64402 E Built-in Hob User Manual - Safety, Installation, and Operation Guide</u></p> <p>Comprehensive user manual for the Beko HIC 64402 E built-in hob. Learn about safety precautions, installation procedures, operating instructions, maintenance tips, and troubleshooting guidance for optimal performance.</p>

 <small>Oven User Manual Piekarnik Instrukcja użycia</small>  <small>FSM57300GX</small>    	<p>Beko FSM57300GX Oven User Manual: Operation, Safety, and Maintenance Guide</p> <p>Discover how to safely operate, install, and maintain your Beko FSM57300GX oven with this comprehensive user manual. Includes cooking tips, troubleshooting, and important safety information.</p>
 <small>Oven User Manual Guch Manuale di istruzione</small>  <small>FBGT62110GWO</small>    	<p>Beko FBGT62110GWO Oven User Manual</p> <p>Comprehensive user manual for the Beko FBGT62110GWO oven, covering safety instructions, installation, usage, maintenance, and troubleshooting.</p>
	<p>Beko HIC 64401 Electric Hob Specifications and Energy Consumption Data</p> <p>Technical specifications and energy consumption details for the Beko HIC 64401 electric hob, compliant with EU directive 2009/125/EC. Includes cooking zone dimensions and energy ratings.</p>
 <small>Installation Installationsanleitung Instructions d'installation Manual de instalación Инструкции за инсталация Instalace pro instalaci Instrukcja instalacyjna Өнүгүүс өндөрүүлэгч Инструкции по установке Poniekasijukseen Aanpassen Upozorak na instalaci Telepítési utasítások Instalacione uputstvo Operaty riportu ustanovki</small>    	<p>Beko Induction Hob Installation Manual</p> <p>This manual provides comprehensive installation instructions, safety guidelines, and technical specifications for Beko induction hobs, ensuring a safe and correct setup.</p>