

[Manuals.plus](#) /

> [Ferm](#) /

> Ferm GRM1024 High Pressure Washer User Manual

Ferm GRM1024

Ferm GRM1024 High Pressure Washer User Manual

Model: GRM1024

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Ferm GRM1024 High Pressure Washer. Please read this manual thoroughly before using the appliance and keep it for future reference. Proper use and maintenance will ensure optimal performance and extend the life of your pressure washer.

SAFETY INSTRUCTIONS

Always observe basic safety precautions to reduce the risk of fire, electric shock, and personal injury.

- **Read all instructions:** Familiarize yourself with the controls and proper use of the pressure washer.
- **Wear appropriate safety gear:** Always wear eye protection, hearing protection, and protective clothing when operating the unit.
- **Electrical safety:** Ensure the power supply matches the voltage specified on the product label. Use a ground fault circuit interrupter (GFCI) for electrical connections. Do not operate with damaged cords or plugs.
- **Water connections:** Connect the pressure washer to a cold water supply only. Do not use hot water. Ensure all connections are secure to prevent leaks.
- **Operating environment:** Use the pressure washer on a stable, level surface. Keep children and pets away from the operating area.
- **High pressure hazard:** The high-pressure jet can be dangerous if misused. Never direct the jet at people, animals, electrical devices, or the unit itself.
- **Chemicals:** Use only detergents recommended for pressure washers. Follow detergent manufacturer's instructions for use and disposal.
- **Maintenance:** Disconnect the power supply before performing any maintenance or cleaning.

PRODUCT OVERVIEW

The Ferm GRM1024 is a powerful high-pressure washer designed for various cleaning tasks. Key components include:

- Heavy Duty Induction Motor with Aluminium Pump
- 5 Meter Power Cable
- Auto Stop System
- 5 Meter High Pressure Hose
- Direct Drive Mechanism
- Spray Nozzle with Pressure Adjustment
- Turbo Nozzle
- Trigger Gun



Image: The main unit of the FERM GRM1024 High Pressure Washer, showing its compact design and primary components.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Check for any damage during transit.
2. **Assembly:**
 - Attach the high-pressure hose to the outlet on the pressure washer and to the trigger gun. Ensure connections are tight.
 - Connect the desired nozzle (spray or turbo) to the trigger gun.
3. **Water Supply Connection:**
 - Connect a garden hose (not supplied) to the water inlet of the pressure washer.
 - Connect the other end of the garden hose to a cold water tap.
 - Turn on the water supply fully.
 - Squeeze the trigger gun to purge air from the system until a steady stream of water emerges.
4. **Electrical Connection:** Plug the 5-meter power cable into a suitable grounded electrical outlet. Ensure the outlet is protected by a GFCI.

OPERATING INSTRUCTIONS

- 1. Starting the Unit:** Once water and electrical connections are secure and water is flowing through the gun, turn the pressure washer's power switch to the "ON" position. The auto-stop system will engage when the trigger is not pressed.
- 2. Using the Trigger Gun:** Squeeze the trigger to start the high-pressure water flow. Release the trigger to stop the flow.
- 3. Nozzle Selection:**
 - **Spray Nozzle with Pressure Adjustment:** Rotate the nozzle to adjust the spray pattern from a wide fan to a concentrated jet, allowing for varied cleaning intensity.
 - **Turbo Nozzle:** Provides a rotating jet for maximum cleaning power on stubborn dirt. Use with caution on delicate surfaces.
- 4. Applying Detergent (if applicable):** If your model includes a detergent application system, follow the specific instructions for filling and dispensing detergent. Ensure you use only pressure washer safe detergents.
- 5. Cleaning Technique:** Always start cleaning from a distance and move closer to the surface as needed. Maintain a consistent distance and angle for even cleaning.
- 6. Shutting Down:**
 - Turn the power switch to "OFF".
 - Turn off the water supply.
 - Squeeze the trigger gun to release any remaining pressure in the system.
 - Disconnect the garden hose and power cable.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- **After Each Use:**
 - Drain all water from the pump, hose, and trigger gun to prevent freezing and mineral buildup.
 - Clean the nozzles to remove any blockages.
 - Wipe down the unit with a damp cloth.
- **Storage:** Store the pressure washer in a dry, frost-free environment. Coil the high-pressure hose and power cable neatly.
- **Inlet Filter:** Periodically check and clean the water inlet filter to prevent debris from entering the pump.
- **Hose and Connections:** Inspect the high-pressure hose and all connections regularly for wear, damage, or leaks. Replace damaged parts immediately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not start	No power supply; GFCI tripped; Power switch off.	Check power connection; Reset GFCI; Turn power switch ON.

Problem	Possible Cause	Solution
Low pressure	Insufficient water supply; Clogged nozzle; Air in pump.	Ensure full water flow; Clean nozzle; Purge air by squeezing trigger with water on.
Water leaks	Loose connections; Damaged O-rings or hose.	Tighten connections; Replace damaged parts.
Motor runs continuously (no auto-stop)	Air in pump; Leak in system; Inlet filter clogged.	Purge air; Check for leaks; Clean inlet filter.

SPECIFICATIONS

Feature	Detail
Model Number	GRM1024
Power	2500 Watts
Cut Off Pressure	160 Bar
Max Water Pressure	150 Bar
Max Water Flow Rate	468 Litre/Hour
Weight	17 Kgs
Power Cable Length	5 Meters
High Pressure Hose Length	5 Meters
Motor Type	Heavy Duty Induction Motor with Aluminium Pump
Special Features	Auto Stop System, Direct Drive

WARRANTY

The Ferm GRM1024 High Pressure Washer comes with a **6-month warranty** against any manufacturing defects from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, abuse, accident, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

SUPPORT

For technical assistance, spare parts, or warranty claims, please contact Ferm customer support. Refer to the product packaging or the official Ferm website for the most current contact information.
When contacting support, please have your product model number (GRM1024) and proof of purchase readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07FVZWW9J>

More documents and user manuals: <https://manuals.plus/>