

## Beko PAL - 7787186702

# Beko PAL - 7787186702 Freestanding Gas Cooker User Manual

Model: FSG52020FW

## INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Beko PAL - 7787186702 Freestanding Gas Cooker. Please read these instructions carefully before using the appliance and keep them for future reference.

## Safety Instructions

- Ensure proper ventilation in the kitchen area.
- This appliance must be installed by a qualified technician in accordance with local regulations.
- Do not store flammable materials near the appliance.
- Supervise children when the appliance is in use.
- Always use oven gloves when handling hot items from the oven.
- Turn off the gas supply to the appliance if it will not be used for an extended period.

## PRODUCT OVERVIEW





**Figure 1:** Front view of the Beko PAL - 7787186702 Freestanding Gas Cooker. This image shows the white cooker with a black glass oven door, four gas burners on top with black pan supports, and control knobs on the front panel.

The Beko PAL - 7787186702 is a freestanding gas cooker featuring a gas hob with four burners and a gas oven. It is designed for domestic use and offers reliable performance for various cooking needs.

## SETUP AND INSTALLATION

---

### Unpacking

- Carefully remove all packaging materials.
- Check the appliance for any signs of damage. If damaged, do not install or use it, and contact your retailer.
- Ensure all accessories, such as oven racks and burner caps, are present.

## Positioning and Leveling

Place the cooker on a flat, stable surface. Use the adjustable feet to level the appliance, ensuring stability and proper operation of the hob and oven.

## Gas Connection

**Important:** The gas connection must be performed by a qualified and certified gas technician. Ensure the gas supply pressure is compatible with the appliance specifications. Use appropriate gas hoses and fittings as per local regulations.

## Electrical Connection (if applicable for ignition/oven light)

If your model includes electric ignition or an oven light, connect the appliance to a grounded electrical outlet. Refer to the rating plate for voltage and frequency requirements.

## First Use

- Before first use, clean the interior of the oven and all accessories with warm soapy water.
- To burn off any manufacturing residues, operate the oven at maximum temperature for approximately 30 minutes with the oven door slightly ajar. Ensure good ventilation during this process.

# OPERATING INSTRUCTIONS

---

## Gas Hob Operation

Your cooker is equipped with four gas burners of varying power outputs:

- **Left Front:** 2.9 kW
- **Left Rear:** 2.0 kW
- **Right Front:** 1.0 kW
- **Right Rear:** 2.0 kW

### Igniting a Burner:

1. Place a suitable pan on the desired burner.
2. Push in and turn the corresponding control knob counter-clockwise to the maximum flame setting (large flame symbol).
3. If your model has automatic ignition, the burner will ignite. If not, use a match or lighter to ignite the burner while holding the knob in.
4. Keep the knob pressed for a few seconds after ignition to allow the flame supervision device to activate. Release the knob; if the flame goes out, repeat the process.
5. Adjust the flame size by turning the knob between the maximum and minimum flame settings (small flame symbol).

### Turning Off a Burner:

Turn the control knob clockwise to the 'off' position (dot symbol).

## Gas Oven Operation

The oven has a capacity of 60 liters and operates on gas. It features an enamel coating and internal lighting.

### Igniting the Oven:

1. Open the oven door.
2. Push in and turn the oven control knob to the desired temperature setting.
3. Ignite the oven burner using the ignition button or a match/lighter, depending on your model.
4. Keep the knob pressed for a few seconds after ignition to allow the flame supervision device to activate. Release

the knob; if the flame goes out, repeat the process.

5. Close the oven door once the flame is stable.

### Oven Lighting:

The oven is equipped with internal lighting. Use the dedicated light switch (if present) or the oven control knob to turn the light on/off for viewing food during cooking.

### Timer Function:

Your cooker includes a timer function. Refer to the specific markings on the timer knob for setting cooking durations or alarms. This timer typically does not control the oven's operation directly but serves as a reminder.

## MAINTENANCE AND CLEANING

---

### General Cleaning

- Always ensure the appliance is cool and disconnected from the gas and electrical supply before cleaning.
- Use mild detergents and soft cloths. Avoid abrasive cleaners, scourers, or harsh chemicals.

### Hob Cleaning

- Remove pan supports, burner caps, and burner skirts. Wash them in warm soapy water, rinse, and dry thoroughly.
- Wipe the enamel hob surface with a damp cloth and mild detergent.
- Ensure all parts are completely dry before reassembling.

### Oven Cleaning

- The oven interior has an enamel coating for easier cleaning.
- Remove oven racks and wash them separately.
- Wipe the interior with a damp cloth and a non-abrasive oven cleaner suitable for enamel surfaces.
- The full glass oven door can be cleaned with glass cleaner. The door features two layers of glass.

### Storage Compartment

The cooker includes a storage compartment for kitchen accessories. Keep this area clean and free from flammable items.

## TROUBLESHOOTING

---

Before contacting customer service, please check the following common issues:

- **Burner not igniting:** Check if the gas supply is on. Ensure burner caps and skirts are correctly positioned. Clean any food debris from the ignition pin or burner holes.
- **Flame goes out after releasing knob:** Ensure you hold the knob pressed for a few seconds after ignition to allow the flame supervision device to heat up.
- **Oven not heating:** Verify the gas supply is on and the oven burner has ignited correctly. Check the temperature setting.
- **Uneven cooking in oven:** Ensure food is placed centrally on the oven rack. Avoid overcrowding the oven.
- **Oven light not working:** Check if the bulb needs replacement. Ensure the cooker is connected to electrical power.

If the problem persists after checking these points, please contact a qualified service technician.

## SPECIFICATIONS

---

Feature	Specification
Brand	Beko

Feature	Specification
Model Number	PAL - 7787186702 (FSG52020FW)
Type	Freestanding Gas Cooker
Dimensions (H x W x D)	85 cm x 50 cm x 60 cm
Net Weight	41.5 kg
Hob Type	Gas
Number of Burners	4
Burner Power (Left Front)	2.9 kW
Burner Power (Left Rear)	2.0 kW
Burner Power (Right Front)	1.0 kW
Burner Power (Right Rear)	2.0 kW
Oven Type	Gas
Oven Capacity	60 Liters
Oven Interior Coating	Enamel
Oven Lighting	Yes
Oven Door Glass Layers	2 (Full Glass Door)
Timer	Yes
Storage Drawer	Yes

## WARRANTY AND SUPPORT

---

### Warranty Information

Your Beko appliance comes with a manufacturer's warranty. Please refer to the warranty card provided with your product for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

### Customer Support

For technical assistance, spare parts, or service requests, please contact Beko customer support. Contact details can typically be found on the Beko official website or in the documentation supplied with your appliance.