

[manuals.plus](#) /

› [Lemax](#) /

› **Lemax Eerie-Go-Round Model 84331 Instruction Manual**

Lemax 84331

Lemax Eerie-Go-Round Model 84331 Instruction Manual

Brand: Lemax | Model: 84331

1. INTRODUCTION

The Lemax Eerie-Go-Round is an animated Halloween village accessory designed to enhance your seasonal display. This piece features a carousel with costumed figures that revolve, accompanied by haunted carnival music. It is intended for indoor decorative use.



Image: The Lemax Eerie-Go-Round, showcasing its animated figures and central pumpkin design.

2. SAFETY INFORMATION

- This product is not a toy. Keep out of reach of small children.
- For indoor use only. Do not expose to water or extreme temperatures.
- Use only the specified battery type and voltage. Incorrect batteries may cause damage or fire.
- If using an AC adapter (sold separately), ensure it is a compatible Lemax Power Adaptor.
- Do not attempt to disassemble or modify the product.
- Dispose of batteries responsibly according to local regulations.

3. PACKAGE CONTENTS

Upon unpacking, please ensure all components are present and undamaged:

- 1 x Lemax Eerie-Go-Round Animated Piece (Model 84331)

Note: Three AA size 1.5V batteries and an A/C power adaptor are not included and must be purchased separately.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the underside of the Eerie-Go-Round.
2. Open the battery compartment cover.
3. Insert three (3) AA size 1.5V batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

4.2 Optional AC Adaptor Use

The Eerie-Go-Round can also be powered by a Lemax Power Adaptor (sold separately). If using an adaptor:

1. Locate the power input jack on the back or side of the unit.
2. Connect the compatible Lemax Power Adaptor to the unit and then plug it into a standard electrical outlet.
3. When using an AC adaptor, batteries are not required and should be removed to prevent leakage.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Locate the power switch, typically on the back or side of the base. Toggle the switch to the 'ON' position to activate the Eerie-Go-Round. Toggle to 'OFF' to power down the unit.

5.2 Animated Effects and Music

Once powered on, the Eerie-Go-Round will begin its animated sequence: the costumed figures will revolve, and the unit will play haunted carnival music. The pumpkin at the top may also illuminate.

5.3 Volume Control

A volume control dial or switch is integrated into the unit. Adjust this control to set the desired audio level for the haunted carnival music.

6. MAINTENANCE

6.1 Cleaning

To clean the Eerie-Go-Round, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or excessive moisture, as these can damage the finish or electronic components.

6.2 Storage

When storing the unit for extended periods, remove all batteries to prevent potential leakage and corrosion. Store in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

- **Unit does not power on or animate:**
 - Ensure batteries are correctly installed and are fresh.
 - If using an AC adaptor, verify it is properly connected and the power outlet is functional.
 - Check that the power switch is in the 'ON' position.
- **Music is distorted or too quiet/loud:**
 - Adjust the volume control.
 - If using batteries, low battery power can affect sound quality; replace batteries if necessary.
- **Mechanical noise during operation:**
 - Some mechanical sounds are normal for animated pieces. If the noise is excessive or unusual, ensure the unit is placed on a flat, stable surface.
 - Do not attempt to lubricate internal components.

8. SPECIFICATIONS

Model Number	84331
Brand	Lemax
Year Released	2019
Village Collection	Spooky Town
Power Source	3 x AA 1.5V Batteries (not included) or Lemax Power Adaptor (4.5V, not included)
Dimensions (D x W x H)	6.3" x 6.3" x 11.02" (16 cm x 16 cm x 28 cm)
Item Weight	2.18 pounds (0.99 kg)
Material	Resin
Care Instructions	Wipe Clean
UPC	728162843319

9. WARRANTY AND SUPPORT

For specific warranty information and customer support, please refer to the documentation included with your purchase or visit the official Lemax website. Keep your proof of purchase for any warranty claims.

© 2023 Lemax. All rights reserved.