

[Manuals.plus](#) /

› [Philips](#) /

› Philips SpeedPro Max Aqua FC6904/01 User Manual

Philips FC6904/01

Philips SpeedPro Max Aqua FC6904/01 - User Manual

3-in-1 Cordless Stick Vacuum Cleaner with Vacuum and Mop Function

INTRODUCTION

Thank you for choosing the Philips SpeedPro Max Aqua FC6904/01. This versatile 3-in-1 cordless stick vacuum cleaner is designed to provide efficient cleaning by combining vacuuming and mopping functionalities. Please read this manual carefully before using the appliance to ensure safe and optimal performance.

PRODUCT OVERVIEW



The image displays the Philips SpeedPro Max Aqua FC6904/01 cordless stick vacuum cleaner in its upright configuration, highlighting its sleek design and integrated dustbin. Alongside the main unit, various accessories are shown, including a filter, a mini motorized brush for upholstery and pet hair, the AquaBoost water tank and mop pads for wet cleaning, and the 360-degree suction nozzle with LED lights. These components enable the device to perform both dry vacuuming and wet mopping tasks efficiently.

Key Components:

- **Main Unit:** Contains the motor, battery, and dust container.
- **360-degree Suction Nozzle with LED Lights:** Designed for efficient dust pickup on various floor types, illuminating hidden dust.
- **AquaBoost Mopping System:** Detachable water tank and microfiber pads for wet cleaning.
- **Mini Motorized Brush:** Ideal for cleaning upholstery, pet hair, and smaller surfaces.
- **Integrated Handheld Unit:** For quick clean-ups and hard-to-reach areas.
- **Power Adapter:** For charging the appliance.

SETUP

1. Unpacking:

1. Carefully remove all components from the packaging.
2. Check for any damage. If any parts are damaged, do not use the appliance and contact customer support.
3. Ensure all listed components are present.

2. Assembly:

- **Attaching the Tube:** Insert the tube into the main unit until it clicks into place.
- **Attaching the Nozzle:** Connect the 360-degree suction nozzle to the bottom of the tube.
- **AquaBoost System (for mopping):**
 - a. Fill the water tank with clean tap water. Do not use detergents or hot water.
 - b. Attach the microfiber pads securely to the mopping plate.
 - c. Slide the filled water tank with attached pads onto the 360-degree suction nozzle until it locks.

3. Initial Charging:

Before first use, fully charge the appliance. Connect the power adapter to the charging port on the main unit and plug it into a wall outlet. The charging indicator lights will show the charging status. A full charge takes approximately 5 hours and provides up to 75 minutes of runtime.

OPERATING INSTRUCTIONS

1. Vacuuming Only:

- Ensure the AquaBoost system is detached if you only wish to vacuum.
- Press the power button to turn on the appliance.
- Select the desired power mode (e.g., Eco, Normal, Turbo) using the mode selection button.
- Move the nozzle across the floor surface. The LED lights will illuminate dust for better visibility.

2. Vacuuming and Mopping (AquaBoost):

- Ensure the AquaBoost system is properly filled and attached.
- Press the power button. The appliance will vacuum and mop simultaneously.
- For stubborn stains, press the AquaBoost pedal (if available on your model) to release more water.
- The appliance can mop up to 60m² with one reservoir fill.

3. Using Attachments:

- **Mini Motorized Brush:** Detach the main tube and attach the mini motorized brush directly to the handheld unit for cleaning upholstery, pet hair, and stairs.

- **Crevice Tool/Brush Tool:** Use these for narrow spaces, corners, or delicate surfaces.

MAINTENANCE

1. Emptying the Dust Container:

- Regularly empty the dust container after each use or when the MAX indicator is reached.
- Press the release button to detach the dust container from the main unit.
- Open the lid and empty the contents into a waste bin.

2. Cleaning the Filter:

- Remove the filter from the dust container.
- Tap the filter gently over a waste bin to remove loose dust.
- Rinse the filter under running water. Ensure it is completely dry before reinserting (allow 24 hours).
- Replace the filter every 6-12 months, depending on usage.

3. Cleaning the Mopping Pads:

- Remove the microfiber pads from the AquaBoost system.
- Wash the pads by hand or in a washing machine (follow care label instructions).
- Allow pads to air dry completely before reattaching.

4. Cleaning the Nozzle:

- Periodically check the brush bar in the nozzle for tangled hair or debris.
- Use scissors to cut and remove any tangled hair.
- Wipe the exterior of the nozzle with a damp cloth.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Battery is depleted.	Charge the appliance fully.
Reduced suction power.	Dust container is full; Filter is clogged; Nozzle/tube is blocked.	Empty dust container; Clean or replace filter; Check and clear blockages in nozzle or tube.
No water coming from mopping system.	Water tank is empty; Mopping pads are not properly attached.	Refill water tank; Ensure pads are securely attached.
Appliance stops during use.	Overheating protection activated; Battery depleted.	Turn off and let cool down for 30 minutes; Charge the appliance.

SPECIFICATIONS

- **Model:** FC6904/01
- **Brand:** Philips
- **Type:** Cordless Stick Vacuum Cleaner (3-in-1: Vacuum, Mop, Handheld)
- **Power:** 2992 Watts

- **Voltage:** 220 Volts
- **Noise Level:** 84 dB
- **Battery Type:** Lithium-ion (7 cells, included)
- **Runtime:** Up to 75 minutes (1 hour and 15 minutes)
- **Charging Time:** Approximately 5 hours
- **Weight:** 2.73 Kilograms
- **Dimensions (L x W x H):** 12 x 23 x 41.5 cm
- **Filter Type:** Fabric
- **Special Features:** Wet/Dry, Maneuverable, AquaBoost, 360-degree suction nozzle with LED lights.

WARRANTY AND SUPPORT

Philips offers a standard manufacturer's warranty for this product. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details. For technical support, spare parts, or repair services, please visit the official Philips support website or contact their customer service line. Keep your proof of purchase for warranty claims.

Note: Information regarding the availability of spare parts is not provided in the product specifications. Please contact Philips customer support for inquiries about spare parts.

For further assistance, you may visit the Philips brand store on Amazon:[Philips Store](#)

© 2023 Philips. All rights reserved.
Model: FC6904/01

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07FWQ7KHL>

More documents and user manuals: <https://manuals.plus/>