

Lenovo 720

Lenovo Yoga 720 2-in-1 Laptop User Manual

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Lenovo Yoga 720 2-in-1 laptop. The Yoga 720 is a versatile device designed for adaptability, featuring a 360-degree hinge, touchscreen display, and integrated fingerprint reader. Please read this manual thoroughly to ensure proper use and to maximize your product's performance and longevity.

PRODUCT OVERVIEW

Key Features

- **Processor:** Intel Core i5-7200U (2.5GHz base, up to 3.1GHz with Turbo Boost).
- **Memory:** 8GB DDR4 RAM (2133 MHz).
- **Storage:** 128GB Solid State Drive (SSD).
- **Display:** 12.5-inch Full HD (1920x1080) IPS Touch-Screen.
- **Operating System:** Windows 10 Home Edition.
- **Connectivity:** USB 3.0, Thunderbolt, 802.11ac Wi-Fi, Bluetooth.
- **Security:** Integrated Fingerprint Reader.
- **Design:** 2-in-1 convertible with 360-degree hinge, aluminum finish.

Components and Ports

The Lenovo Yoga 720 offers a compact and functional design. Below are illustrations of the device in various modes and its port configurations.



Figure 1: The Lenovo Yoga 720 in tent mode, showcasing its flexible hinge and display of multiple applications, including a video call and web browser.



Figure 2: The Lenovo Yoga 720 in tablet mode, demonstrating interaction with a digital pen on a product design presentation. Note: The digital pen is sold separately.



Figure 3: Right side view of the device, featuring a USB-C Thunderbolt port, a USB 3.0 port, and the power button.



Figure 4: Left side view of the device, including the power input port, headphone jack, and volume control buttons.

1. Initial Power On

1. **Unpack:** Carefully remove the laptop and included AC adapter from its packaging.
2. **Connect Power:** Plug the AC adapter into a power outlet and then into the laptop's power input port (refer to Figure 4).
3. **Power On:** Press the power button located on the right side of the device (refer to Figure 3). The system will boot up.
4. **Initial Windows Setup:** Follow the on-screen prompts to complete the Windows 10 Home setup, including language selection, network connection, and user account creation.

2. Connecting Peripherals

You can connect various peripherals using the available ports:

- **USB Devices:** Use the USB 3.0 port (Figure 3) for external drives, mice, or keyboards.
- **USB-C / Thunderbolt Devices:** The USB-C port (Figure 3) supports Thunderbolt for high-speed data transfer and external displays.
- **Audio:** Connect headphones or external speakers to the 3.5mm audio jack (Figure 4).

OPERATING INSTRUCTIONS

1. Using 2-in-1 Modes

The Yoga 720's 360-degree hinge allows for multiple usage modes:

- **Laptop Mode:** Standard laptop configuration for typing and productivity.
- **Tablet Mode:** Fold the screen back completely to use as a tablet. Windows will automatically prompt to switch to tablet mode for optimized touch interaction.
- **Tent Mode:** Position the device like a tent (Figure 1) for media consumption or presentations.
- **Stand Mode:** Flip the keyboard face down to use the screen as a display stand.

2. Touchscreen and Pen Usage

The 12.5-inch Full HD IPS display supports multi-touch gestures. For enhanced precision, the device is compatible with the Lenovo Active Pen (sold separately). The pen allows for drawing, writing, and navigating with Windows Ink features (Figure 2).

3. Fingerprint Reader

For secure and quick login, configure the integrated fingerprint reader through Windows Hello settings. This allows you to sign into your device without typing a password.

MAINTENANCE

1. Cleaning Your Device

- **Screen:** Use a soft, lint-free cloth lightly dampened with water or a screen-cleaning solution. Avoid harsh chemicals.
- **Keyboard and Chassis:** Wipe with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, ensuring no liquid enters openings.
- **Ports:** Keep ports free of dust and debris. Use compressed air if necessary, holding the can upright.

2. Software Updates

Regularly check for and install Windows updates and Lenovo driver updates to ensure optimal performance, security, and compatibility. Access Windows updates via **Settings > Update & Security > Windows Update**.

3. Battery Care

To prolong battery life, avoid extreme temperatures and fully discharging the battery frequently. For long-term storage, charge the battery to approximately 50-60%.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Lenovo Yoga 720.

1. Device Does Not Power On

- Ensure the AC adapter is securely connected to both the laptop and a working power outlet.
- Verify the power outlet is functional by testing it with another device.
- If the battery is completely drained, allow the device to charge for at least 15-30 minutes before attempting to power it on.

2. Touchscreen Not Responding

- Restart the device.
- Check for and install any pending Windows updates or driver updates from the Lenovo support website.
- Ensure the display is clean and free of obstructions.

3. Wi-Fi or Bluetooth Connectivity Issues

- Toggle Wi-Fi or Bluetooth off and on in Windows settings.
- Restart your router/modem for Wi-Fi issues.
- Ensure drivers for wireless adapters are up to date.

4. Slow Performance

- Close unnecessary applications running in the background.
- Check for sufficient free storage space on the SSD.
- Run a system scan for malware or viruses.
- Ensure the device is not overheating; check that ventilation vents are clear.

SPECIFICATIONS

| Feature | Detail |
|------------|----------------------------------------------|
| Model Name | Lenovo Yoga 720 |
| Processor | Intel Core i5-7200U (2.5 GHz, up to 3.1 GHz) |
| RAM | 8 GB DDR4 SDRAM |

| Feature | Detail |
|-----------------------|-----------------------------------------------------------|
| Storage | 128 GB Solid State Drive (SSD) |
| Display | 12.5-inch FHD (1920 x 1080) IPS Touch-Screen |
| Graphics | Intel HD Graphics 520 (Integrated) |
| Operating System | Windows 10 Home |
| Wireless Connectivity | 802.11ac Wi-Fi, Bluetooth |
| Ports | USB 3.0, USB-C (Thunderbolt), Headphone Jack, Power Input |
| Special Features | Fingerprint Reader, 360-degree Hinge |
| Dimensions (LxWxH) | 11.5 x 8 x 0.6 inches (29.2 x 20.3 x 1.5 cm) |
| Weight | 3.35 pounds (1.52 kg) |
| Color | Iron Grey |

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the documentation included with your product or visit the official Lenovo support website. The website provides access to drivers, software updates, and customer service contact information.

Lenovo Support Website: support.lenovo.com