

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Magnasonic](#) /

› [Magnasonic FS50 All-in-One 24MP Film Scanner Instruction Manual](#)

Magnasonic FS50

Magnasonic FS50 All-in-One 24MP Film Scanner Instruction Manual

Model: FS50 | Brand: Magnasonic

INTRODUCTION


This manual provides comprehensive instructions for setting up, operating, and maintaining your Magnasonic FS50 All-in-One 24MP Film Scanner. This device is designed to convert various film types, slides, and negatives into high-resolution digital JPEG files, allowing you to preserve and share your cherished memories.

WHAT'S INCLUDED

Carefully unpack your Magnasonic FS50 Film Scanner and ensure all items listed below are present:

- FS50 Film Scanner
- 32GB SD Card
- USB Cable
- Video Out TV Cable
- AC/DC Adapter
- Negative Film Holder
- Positive Film Holder
- 110 Film Holder
- Cleaning Brush
- User's Manual (this document)

What's Included

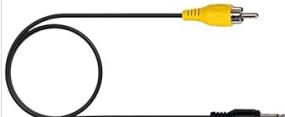

Video Out TV Cable



32 GB SD Card



USB Cable



Power Adapter



Super 8 Holder



Cleaning Brush



110 Film Holder



Negative Film Holder



110 Slide Holder



Positive Film Holder

Figure 1: All items included with the Magnasonic FS50 Film Scanner.

SETUP

Powering the Scanner

Connect the provided USB cable to the scanner's USB port and the other end to either a USB port on your computer or the included 5V 1A USB wall adapter. Press and hold the power button on the scanner to turn it on.

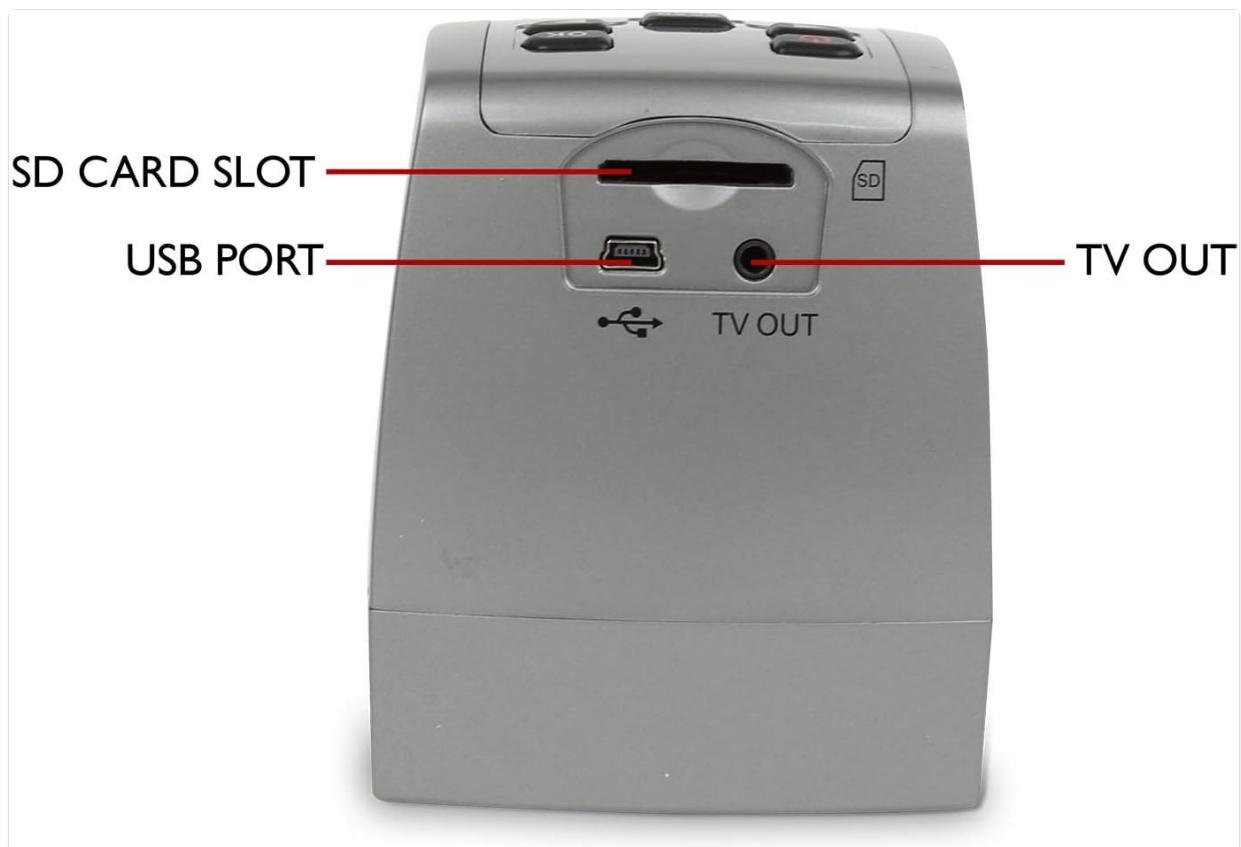


Figure 2: USB, SD, and TV Out ports on the scanner.

Inserting an SD Card

For storing a large number of images, it is recommended to use an SD card. Insert the included 32GB SD card (or another compatible SD card up to 128GB) into the SD card slot on the side of the scanner. Ensure the metal contacts are facing up.

Connecting to a TV (Optional)

To view a larger preview of your images before scanning, connect the scanner to a television using the included Video Out TV cable. The scanner's screen will turn off when connected to a TV.



**Screen will turn off when connected to a TV*

Figure 3: Scanner connected to a TV for larger image preview.

Video 1: Magnasonic FS70 Film Scanner - Setting Up and Scanning. This video demonstrates the setup and scanning process for a similar Magnasonic film scanner model.

OPERATING INSTRUCTIONS

Selecting Film Type

Upon powering on, the scanner will display the
