

HuskyTool H4CH1R

Husky 61 in. W 23 in. D 10-Drawer 1-Door Mobile Workbench

Model: H4CH1R

Introduction

Safety Information

Setup

Specifications

Operating Instructions

Warranty & Support

Maintenance

Troubleshooting

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Husky 61 in. W 23 in. D 10-Drawer 1-Door Mobile Workbench with Solid Wood Top and Flip-Up Pegboard. This robust unit is designed to provide extensive storage and a durable work surface for various tasks in your garage or workshop.



Figure 1.1: The Husky 61-inch Mobile Workbench, showcasing its overall design with the flip-up pegboard and solid wood top.



Figure 1.2: The workbench integrated into a typical workshop environment, demonstrating its practical size and appearance.

2. SAFETY INFORMATION

Please read and understand all safety warnings and instructions before assembling or operating this product. Failure to follow these instructions may result in serious injury or property damage.

- Always ensure the workbench is on a level, stable surface before loading or working on it.
- Do not exceed the maximum load capacity for drawers (120 lbs per drawer, 200 lbs for 9-inch deep drawers) or the pegboard (200 lbs).
- Distribute weight evenly within drawers and on the workbench surface to prevent tipping.
- Engage the caster brakes when the workbench is stationary to prevent unintended movement.
- Keep hands and fingers clear of moving parts, especially when opening and closing drawers.
- Use caution when moving the workbench, especially over uneven surfaces.
- Ensure the power strip is properly grounded and not overloaded. Do not use damaged cords or plugs.
- Keep children and unauthorized persons away from the workbench during use.

3. SETUP

3.1 Unpacking and Inspection

Carefully remove the workbench from its packaging. It is recommended to have at least two people for this process due to the unit's weight. Inspect the unit for any shipping damage. If damage is found, do not proceed with assembly and contact customer support immediately.

Note: The casters are pre-installed to reduce assembly time.

3.2 Pegboard and Shelf Assembly

The flip-up pegboard comes pre-attached. To raise it, carefully lift it into the upright position until it locks securely. The adjustable 48-inch shelf can be mounted to the pegboard in three different positions. Select the desired height and secure the shelf using the provided hardware.

3.3 Power Strip Connection

Locate the integrated power strip on the exterior of the unit, typically near the handle. Extend the power cord and plug it into a grounded electrical outlet. The cord hooks can be used to store the power cord when not in use.

4. OPERATING INSTRUCTIONS

4.1 Drawer Operation

The workbench features 10 drawers equipped with 120 lb. rated soft-closing ball-bearing slides. The two 9-inch deep bottom drawers have a second set of slides to accommodate heavier items up to 200 lbs. To open a drawer, gently pull the handle. To close, push the drawer until the soft-closing mechanism engages and pulls it shut completely. Each drawer includes a pre-cut premium liner.



Figure 4.1: View of the workbench with all drawers and the side cabinet open, demonstrating the full extension slides and storage capacity.

4.2 Bulk Storage Area

Behind the lockable door, there is a bulk storage area with an adjustable shelf capable of supporting 130 lbs. A door-mounted storage bin is also included for additional organization. To access, unlock and open the door.

4.3 Pegboard and Work Surface Use

The flip-up pegboard provides quick access to frequently used tools and can support up to 200 lbs. The solid wood top is over 1 inch thick and offers 1,403 square inches of workspace. Ensure tools and materials are placed securely on the work surface and pegboard.

4.4 Mobility and Locking

The workbench is equipped with six heavy-duty 5 in. x 2 in. casters and a large tubular handle for easy maneuverability. To move the unit, release the caster brakes. To secure the unit in place, engage the brakes on all casters. The internal locking mechanism allows you to secure all drawers and the bulk storage area.



Figure 4.2: Detail of the side handle and integrated power strip with outlets and USB ports.

4.5 Integrated Power Strip

The integrated power strip includes 6 outlets and 2 USB ports, allowing you to charge tools and electronic accessories directly from the workbench. Ensure the power strip is plugged into a suitable outlet before use.

5. MAINTENANCE

- **Cleaning:** Wipe down the steel surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners that could damage the textured black powder coat finish. Clean the solid wood top with a wood-safe cleaner and periodically apply a wood conditioner to maintain its integrity.
- **Drawer Slides:** Periodically inspect the ball-bearing drawer slides for smooth operation. If they become stiff, apply a small amount of silicone lubricant.
- **Casters:** Check casters regularly for debris accumulation and ensure they roll freely. Clean as needed.
- **General Inspection:** Routinely check all bolts, screws, and fasteners to ensure they are tight. Tighten any loose hardware.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Drawers are stiff or do not slide smoothly.	Accumulation of dirt/debris on slides; lack of lubrication; overloaded drawer.	Clean drawer slides and apply silicone lubricant. Reduce drawer load if overloaded.
Workbench does not move easily.	Caster brakes engaged; debris in casters; uneven floor surface.	Ensure all caster brakes are disengaged. Clean casters. Move to a level surface.
Power strip not working.	Not plugged in; circuit breaker tripped; power strip overloaded.	Verify power cord is securely plugged into a working, grounded outlet. Check household circuit breaker. Reduce number of devices plugged into the power strip.
Pegboard shelf is unstable.	Improperly secured; overloaded.	Ensure shelf is correctly installed and secured to the pegboard. Do not exceed 200 lbs load capacity on the pegboard.

7. SPECIFICATIONS

Feature	Detail
Model Number	H4CH1R
Dimensions (W x D x H)	61 in. x 23 in. x 61 in. (approximate, including pegboard height)
Material	All-welded Steel, Solid Wood Top
Finish	Textured Black Powder Coat
Drawer Count	10
Drawer Slide Capacity	120 lbs (standard), 200 lbs (9-inch deep drawers)
Storage Capacity	25,311 cu. in.
Work Surface Area	1,403 sq. in.
Pegboard Capacity	200 lbs
Casters	6 heavy-duty 5 in. x 2 in.
Power Strip	6 outlets, 2 USB ports
Assembly Required	Yes (minimal, casters pre-installed)

8. WARRANTY & SUPPORT

8.1 Warranty Information

Specific warranty details for the Husky 61 in. W 23 in. D 10-Drawer 1-Door Mobile Workbench are provided by the manufacturer. Please refer to the warranty card included with your product or visit the official HuskyTool website for the most current warranty policy and registration information.

8.2 Customer Support

For technical assistance, replacement parts, or any questions regarding your workbench, please contact HuskyTool customer support. Contact information can typically be found on the product packaging, the manufacturer's website, or the warranty documentation.

