

Kemper Group KE2008CMF

Kemper KE2008CMF Camping Stove Instruction Manual

Model: KE2008CMF

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Kemper KE2008CMF Camping Stove. Please read this manual thoroughly before using the appliance and retain it for future reference.

The Kemper KE2008CMF is a single-burner gas stove designed for outdoor use, featuring a stainless steel construction, integrated wind protection, and automatic ignition. It delivers a power output of 2.2 kW and comes in a camouflage finish.

IMPORTANT SAFETY INFORMATION

FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN FIRE, EXPLOSION, OR CARBON MONOXIDE POISONING, WHICH COULD CAUSE PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH.

- **FOR OUTDOOR USE ONLY.** Do not use this appliance inside any building, tent, vehicle, or other unventilated area.
- Ensure adequate ventilation when operating.
- Keep children and pets away from the stove during operation.
- Do not leave the operating stove unattended.
- Use only the gas cartridge type specified by the manufacturer.
- Check for gas leaks before each use. Apply soapy water to connections; bubbles indicate a leak.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Allow the stove to cool completely before handling or storing.
- Do not modify the appliance. Any modification may be dangerous and will void the warranty.

PRODUCT OVERVIEW






Figure 1: Kemper KE2008CMF Camping Stove. This image displays the complete stove unit, featuring its camouflage gas canister base, the black control knob, and the stainless steel burner head with integrated wind protection and pot supports.

Components:

- **Burner Head:** Stainless steel component where the flame is produced.
- **Pot Supports:** Integrated into the burner head to hold cookware.
- **Wind Protection:** Metal shield surrounding the burner to protect the flame from wind.
- **Control Knob:** Used to adjust gas flow and flame intensity.
- **Automatic Ignition Button:** For lighting the stove without external flame.
- **Gas Cartridge Connection:** Point where the gas cartridge is attached.
- **Gas Cartridge (Integrated Base):** The camouflage-patterned base houses the gas cartridge.

SETUP

1. **Choose a Location:** Select a flat, stable, non-flammable surface outdoors, away from any combustible materials, buildings, or tents. Ensure good ventilation.
2. **Prepare the Stove:** Unpack the stove and ensure all components are present and undamaged.
3. **Connect the Gas Cartridge:**
 - Ensure the control knob is in the "OFF" position (fully clockwise).
 - Carefully screw the appropriate gas cartridge (e.g., pierceable or threaded, depending on model variant) into the stove's connection point until hand-tight. Do not overtighten.
 - Check for leaks: Apply a small amount of soapy water to the connection. If bubbles appear, there is a leak. Tighten the connection slightly or replace the cartridge if necessary. Do not use the stove if a leak is detected.
4. **Position Cookware:** Place your pot or pan securely on the pot supports.

OPERATING INSTRUCTIONS

1. **Lighting the Stove:**
 - Slowly turn the control knob counter-clockwise to release a small amount of gas. You should hear a faint hissing sound.
 - Immediately press the automatic ignition button repeatedly until the gas ignites.
 - If the stove does not light after several attempts, turn the control knob to "OFF", wait a few moments for gas to dissipate, and then repeat the lighting procedure.
 - If automatic ignition fails, use a long-stemmed lighter or match to ignite the gas while slowly turning the control knob.
2. **Adjusting the Flame:**
 - Turn the control knob counter-clockwise to increase the flame intensity.
 - Turn the control knob clockwise to decrease the flame intensity.
3. **Turning Off the Stove:**
 - Turn the control knob fully clockwise to the "OFF" position. The flame should extinguish.

- Ensure the flame is completely out before leaving the stove unattended.

MAINTENANCE

- **Cleaning:**

- Allow the stove to cool completely before cleaning.
- Wipe the exterior surfaces with a damp cloth. For stubborn stains, use a mild detergent.
- Do not use abrasive cleaners or scouring pads, as these can damage the finish.
- Ensure the burner ports are clear of debris. Use a soft brush if necessary.

- **Storage:**

- Disconnect the gas cartridge when the stove is not in use or before storing.
- Store the stove in a cool, dry place, away from direct sunlight and heat sources.
- Store gas cartridges separately in a well-ventilated area, away from ignition sources.

- **Inspection:**

- Regularly inspect the stove for any signs of damage, wear, or corrosion.
- If any damage is found, do not use the stove and contact customer support.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stove does not light.	Gas cartridge empty or improperly connected. Ignition button faulty. Gas flow blocked.	Check/replace gas cartridge, ensure secure connection. Use a long-stemmed lighter or match. Ensure burner ports are clear.
Flame is weak or inconsistent.	Low gas level in cartridge. Partial blockage in gas line or burner. Cold weather affecting gas pressure.	Replace gas cartridge. Clean burner ports. Warm the gas cartridge slightly (e.g., in a pocket, not over flame).
Gas leak detected (smell of gas, hissing sound).	Loose connection. Damaged O-ring or cartridge.	Immediately turn off gas. Disconnect cartridge in a well-ventilated area. Re-connect securely or replace cartridge/O-ring. Do not use if leak persists.

SPECIFICATIONS

Brand	Kemper Group
--------------	--------------

Model Number	KE2008CMF
Material	Stainless Steel
Power Source	Gas Powered
Power Output	2.2 kW
Product Dimensions (L x W x H)	13 x 13 x 22 cm
Item Weight	400 g
Color	Multi-color (Camouflage)
Manufacturer	Kemper Srl
International Article Code (EAN/UPC)	08008004127114

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. Kemper Srl products are manufactured to high standards, and specific warranty terms may vary by region and retailer.

For technical support, spare parts inquiries, or further assistance, please contact Kemper Srl customer service or your local distributor. Contact details are typically available on the product packaging or the manufacturer's official website.

Spare Parts Availability: Information regarding the availability of spare parts for this specific model is currently unavailable.

© 2023 Kemper Srl. All rights reserved.

This manual is subject to change without notice.