

Manuals.plus /

› **IKEA** /

› IKEA BRIMNES TV Bench 180x41x53 cm Instruction Manual (Model 504.098.93)

IKEA BRIMNES 504.098.93

IKEA BRIMNES TV Bench Instruction Manual

Model: 504.098.93

INTRODUCTION

This manual provides essential information for the safe and proper assembly, operation, and maintenance of your IKEA BRIMNES TV Bench. Please read these instructions carefully before beginning assembly and retain them for future reference.

SETUP AND ASSEMBLY

The IKEA BRIMNES TV Bench requires assembly. Follow the detailed instructions provided in the packaging for step-by-step guidance. Ensure all components are present before starting.

Anti-Tip Safety

To prevent tipping, which can cause serious or fatal crushing injuries, this furniture must be securely fastened to the wall using the provided wall attachment device. The type of screws required for wall fastening depends on your wall material. Please use screws and wall plugs appropriate for your specific wall type (not included with the product).

Materials

- **Basic material / Leg / Drawer side / Drawer back:** Particleboard, Foil
- **Top panel:** Particleboard, Foil, ABS plastic
- **Back panel / Drawer bottom:** Fiberboard, Printed acrylic paint
- **Drawer front:** Reinforced glass, Fiberboard, Particleboard, Foil, ABS plastic

OPERATING AND USAGE

The BRIMNES TV Bench is designed to hold your television and media devices, offering convenient storage solutions.

Cable Management

The unit features a cable outlet at the back to help you organize and conceal cables, keeping your media area tidy.

Storage Drawers

Utilize the integrated drawers for storing media accessories, remote controls, or other items. The drawers are designed for smooth operation.



The BRIMNES TV bench features spacious drawers for organizing media accessories and open shelves for electronic devices.

Maximum Load

The maximum load capacity for the top surface of the TV bench is 30 kg. Do not exceed this weight to ensure stability and prevent damage.

CARE AND MAINTENANCE

Proper care will help maintain the appearance and longevity of your TV bench.

Cleaning

Wipe clean with a damp cloth. For best results, use a mild cleaner if necessary, then wipe dry with a clean cloth.

Reinforced Glass Handling

Handle reinforced glass with care. A damaged edge or scratched surface can cause the glass to crack or break suddenly. Reinforced glass is particularly vulnerable to impact from the sides. Avoid striking the edges of the glass with hard objects.

TROUBLESHOOTING

If you encounter any issues with your BRIMNES TV Bench, consider the following:

- **Assembly Issues:** Double-check all connections and ensure that all parts are assembled according to the instructions. Loose fittings can cause instability.
- **Drawer Operation:** If drawers are not sliding smoothly, ensure they are correctly installed on their runners and that no obstructions are present.
- **Stability:** Confirm the unit is placed on a level surface and securely fastened to the wall as instructed in the 'Setup and Assembly' section.

For persistent problems, please refer to the 'Customer Support' section.

PRODUCT SPECIFICATIONS

Brand	IKEA
Model Name	BRIMNES
Product Number	504.098.93
Color	White
Width	180 cm (70 7/8 inches)
Depth	41 cm (16 1/8 inches)
Height	53 cm (20 7/8 inches)
Maximum Load	30 kg (66 lbs)
ASIN	B07FZGLCRW

WARRANTY INFORMATION

For detailed information regarding the warranty for your IKEA BRIMNES TV Bench, please refer to the official IKEA website or contact IKEA customer service directly. Warranty terms and conditions may vary by region and product.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report a missing or damaged part, please contact IKEA customer support. You can find contact information and frequently asked questions on the official IKEA website (www.ikea.com).

