

[Manuals.plus](#) /

› [Bestol](#) /

› Bestol RJ48 Modular Plug (10P10C) Instruction Manual

Bestol 8846985143774

Bestol RJ48 Modular Plug (10P10C) Instruction Manual

Model: 8846985143774

INTRODUCTION

This manual provides instructions for the proper use and installation of Bestol RJ48 Modular Plugs (10P10C). These connectors are designed for terminating stranded round cables in various networking and telecommunication applications.



Image Description: A pile of clear plastic RJ48 modular plugs, showcasing their transparent housing and gold-plated contacts.

PRODUCT OVERVIEW

The Bestol RJ48 Modular Plugs are high-quality connectors designed for reliable data transmission. Each plug features 10 positions and 10 contacts (10P10C), commonly used for specific telecommunication and data applications.

Key Features

- **10P10C Configuration:** Designed for specific networking and telecommunication requirements.
- **Gold-Plated Contacts:** Ensures stable and durable connections, resisting corrosion.
- **Transparent Housing:** Allows for easy verification of wire sequence during termination.
- **Stranded Cable Compatibility:** Optimized for use with stranded round cables.



Image Description: A close-up view of a single RJ48 modular plug, highlighting the gold-plated pins and the clear plastic housing.

SETUP AND INSTALLATION

Follow these steps to properly terminate a stranded round cable with the Bestol RJ48 Modular Plug.

1. **Prepare the Cable:** Carefully strip approximately 1/2 inch (1.27 cm) of the cable jacket, exposing the individual insulated wires. Ensure not to nick the wire insulation.
2. **Arrange Wires:** Untwist the wire pairs and arrange them according to the desired wiring standard (e.g., T568A or T568B for Ethernet, or specific RJ48 pinouts). Ensure the wires are straight and parallel.
3. **Trim Wires:** Trim the arranged wires evenly, leaving about 1/2 inch (1.27 cm) of exposed wire from the jacket.
4. **Insert Wires into Plug:** Carefully insert the trimmed and arranged wires into the RJ48 modular plug. Ensure each wire slides into its correct channel and extends to the front of the plug. The cable jacket should be seated firmly inside the plug's strain relief area.
5. **Crimp the Connector:** Place the loaded modular plug into a suitable crimping tool. Squeeze the crimping tool handles firmly until the connector is fully crimped. This action pushes the gold-plated contacts through the wire insulation, establishing electrical connection, and secures the cable jacket.
6. **Verify Connection:** Visually inspect the crimped connector to ensure all wires are properly seated, the contacts have pierced the insulation, and the cable jacket is securely held. Use a cable tester to confirm continuity and correct wiring.



Image Description: Various views of the RJ48 modular plugs, illustrating the different angles and components, including the latch and the contact pins, which are crucial for proper cable termination.

OPERATING INSTRUCTIONS

Once terminated, the RJ48 modular plug functions as a standard connector for compatible devices.

- **Connection:** Insert the crimped RJ48 plug into a compatible RJ48 or RJ45 port on a network device (e.g., hub, modem, router, switch, printer, server).
- **Secure Latch:** Ensure the plug's latch clicks into place, indicating a secure connection.
- **Disconnection:** To disconnect, gently press down on the latch tab of the plug and pull the connector straight out from the port. Avoid pulling the cable directly without releasing the latch to prevent damage to the plug or port.

MAINTENANCE

Bestol RJ48 Modular Plugs require minimal maintenance.

- **Storage:** Store unused plugs in a dry, dust-free environment to prevent contamination of the contacts.
- **Cleaning:** If contacts appear dirty, gently clean them with a lint-free cloth and a small amount of isopropyl alcohol. Ensure the plug is completely dry before use.
- **Inspection:** Periodically inspect crimped plugs for any signs of damage, such as bent pins or cracked housing, especially in high-traffic areas.

TROUBLESHOOTING

No Network Connection

- **Check Crimp:** Ensure the plug is properly crimped and all wires are making contact. Re-crimp if necessary.
- **Verify Wiring:** Confirm the wire sequence matches the required standard (e.g., T568A/B).
- **Inspect Cable:** Check the cable for any damage or breaks.
- **Test Port:** Try connecting to a different port on the device to rule out a faulty port.

Intermittent Connection

- **Secure Connection:** Ensure the plug is fully inserted and the latch is engaged.
- **Cable Movement:** Check if movement of the cable causes the connection to drop. This may indicate a loose crimp or internal cable damage.

SPECIFICATIONS

Feature	Detail
Brand	Bestol
Model Number	8846985143774
Connector Type	RJ48 (10P10C)
Cable Type Compatibility	Stranded Round Cable
Contact Material	Gold-plated
Housing Material	Plastic
Compatible Devices	Hub, Modem, NAS, Printer, Router, Server, Switch
Unit Count	100

SUPPORT

For further assistance or inquiries regarding your Bestol RJ48 Modular Plugs, please contact Bestol customer support. Refer to the product packaging or the retailer's website for specific contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07FZJJSL6>

More documents and user manuals: **<https://manuals.plus/>**