

- Manuals.plus /
- › Paw Patrol /
 - › Paw Patrol Ultimate Rescue Skye's Rescue Helicopter (Model 6053626) Instruction Manual

Paw Patrol 6053626

Paw Patrol Ultimate Rescue Skye's Rescue Helicopter (Model 6053626) Instruction Manual

- Overview
- Setup
- Operation
- Maintenance
- Troubleshooting
- Specifications
- Support

1. PRODUCT OVERVIEW

The Paw Patrol Ultimate Rescue Skye's Rescue Helicopter is designed for children aged 3 years and up, offering interactive play with sound effects and movable parts. This toy helicopter allows children to embark on rescue missions with their favorite Paw Patrol characters.

The set includes the rescue helicopter and two Paw Patrol figures. The helicopter features a movable propeller, a functional rescue hook, and space to accommodate up to six Paw Patrol puppy figures (additional figures sold separately).



Figure 1: Front view of the Paw Patrol Skye's Ultimate Rescue Helicopter with Skye and Marshall figures in the cockpit. The rescue hook is visible on the left side.

2. SETUP INSTRUCTIONS

2.1. Battery Installation

The Skye's Rescue Helicopter requires **2 x AAA batteries** for its sound effects and lights. A demo battery set is included with the product. Follow these steps to install or replace batteries:

1. Locate the battery compartment on the underside of the helicopter.
2. Using a Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert 2 new AAA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

***Note:** Always use fresh batteries and dispose of old batteries responsibly. Do not mix old and new batteries, or different types of batteries.*

2.2. Initial Inspection

Before first use, inspect the helicopter for any loose parts or damage. Ensure all components are securely attached. This product is designed for indoor use.

3. OPERATING YOUR HELICOPTER

3.1. Power On/Off

To activate the helicopter's sound effects and lights, locate and press the power button. Press it again to turn off the effects.

3.2. Movable Propeller

The helicopter features a movable propeller. Manually rotate the propeller to simulate flight. The engines on the side also have movable parts.



Figure 2: Top-down view of the helicopter, showing Skye in the cockpit and arrows indicating the movable propellers on the engine pods.

3.3. Rescue Hook Function

The helicopter is equipped with a functional rescue hook. To operate:

1. Locate the rescue hook mechanism on the side of the helicopter.
2. Extend the rescue hook by pulling it down.
3. Use the hook to simulate lifting and rescuing small objects or figures.
4. Retract the hook when not in use.



Figure 3: Side view of the helicopter, illustrating the open side door and the extendable rescue hook.

3.4. Character Placement

The helicopter has designated seating for Skye and Marshall in the cockpit. Additionally, there is an internal compartment designed to hold up to six Paw Patrol puppy figures, allowing for imaginative group rescue missions.

4. CARE AND MAINTENANCE

4.1. Cleaning

To clean the helicopter, wipe it with a soft, damp cloth. Do not immerse the toy in water or use harsh cleaning agents, as this may damage the electronic components and paint finish.

4.2. Storage

Store the helicopter in a cool, dry place away from direct sunlight and extreme temperatures. If the toy will not be used for an extended period, remove the batteries to prevent leakage and corrosion.

4.3. Battery Replacement

Replace batteries when sound effects become faint or lights dim. Refer to section 2.1 for battery installation instructions.

5. TROUBLESHOOTING

If you encounter issues with your Skye's Rescue Helicopter, please refer to the following common problems and solutions:

- **No Sound or Lights:**
 - Ensure the power button is pressed.
 - Check if the batteries are installed correctly with the correct polarity.
 - Replace old or depleted batteries with new AAA batteries.
- **Propeller Not Moving Smoothly:**
 - Check for any obstructions or debris caught in the propeller mechanism.
 - Ensure the propeller is securely attached.
- **Rescue Hook Not Extending/Retracting:**
 - Verify there are no obstructions preventing the hook's movement.
 - Gently pull or push the hook to ensure it moves freely. Do not force it.

If the problem persists after attempting these solutions, please contact customer support.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Paw Patrol
Model Number	6053626
Manufacturer	Spin Master
Age Range	3-10 years (Manufacturer Minimum Age: 36 months, Maximum Age: 60 months)
Batteries Required	2 x AAA (included for demo)
Power Source	Battery Powered
Included Components	Helicopter with movable propeller and rescue hook, 2 figures
Additional Features	Sound Effects, Movable Propeller
Material Type	PP (Polypropylene)
Item Weight	1.26 Kilograms
Indoor/Outdoor Use	Indoor

7. WARRANTY INFORMATION

This product is covered by the manufacturer's standard warranty. For specific details regarding warranty coverage, duration, and claims process, please refer to the documentation included with your purchase or visit the official Spin Master website. Please retain your proof of purchase for any warranty claims.

8. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries not covered in this manual, please contact the manufacturer, Spin Master. You can typically find their contact information on the product packaging or their official website.

Manufacturer: *Spin Master*

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I retract the handle on the bottom of the Paw Patrol Skye Ultimate Rescue Helicopter?

Based on the manual for the Paw Patrol Skye Ultimate Rescue Helicopter (Model 6053626), the primary movable mechanism on the exterior is the rescue hook. If the "handle" you are referring to is the...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B07G1D6T1P>

More documents and user manuals: <https://manuals.plus/>