

[Manuals.plus](#) /

› [KUTCHINA](#) /

› Kutchina Cosmic DLX 2000 Watt Copper Induction Cooker User Manual

KUTCHINA Cosmic DLX

Kutchina Cosmic DLX 2000 Watt Copper Induction Cooker User Manual

Model: Cosmic DLX

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Kutchina Cosmic DLX 2000 Watt Copper Induction Cooker. Please read these instructions thoroughly before first use and retain them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To prevent injury or damage, always observe basic safety precautions when using electrical appliances. This includes, but is not limited to:

- Do not touch the hot surface immediately after use. The surface remains hot.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep out of reach of children.
- Use only induction-compatible cookware.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Kutchina Cosmic DLX Induction Cooker.



Image: Top view of the Kutchina Cosmic DLX Induction Cooker, showing the cooking surface and the touch control panel. The brand name KUTCHINA and model COSMIC DLX are visible on the cooking surface. Warning text "SURFACE REMAINS HOT AFTER USE, DO NOT TOUCH" is also visible.

Control Panel Functions:

- **ON/OFF:** Powers the induction cooker on or off.
- **Function:** Selects different cooking modes or power levels.
- **Up (+):** Increases power, temperature, or timer settings.
- **Down (-):** Decreases power, temperature, or timer settings.
- **Timer:** Sets the cooking duration.
- **Voltage:** Displays the current voltage.
- **Preset Cooking Modes:** Includes options for All Cooking, Soup, Rice, Milk, Deep Fry, and Stir-Fry.
- **Hot Indicator Lamp:** Illuminates when the surface is hot.

SETUP

1. **Unpacking:** Carefully remove the induction cooker from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the cooker on a flat, stable, and heat-resistant surface. Ensure there is adequate ventilation around the unit (at least 10-15 cm clearance from walls or other appliances).
3. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the appliance.
4. **Initial Cleaning:** Before first use, wipe the cooking surface with a damp cloth. Do not use abrasive cleaners.

OPERATING INSTRUCTIONS

General Operation:

1. **Power On:** Place an induction-compatible pot or pan centrally on the cooking zone. Press the **ON/OFF** button. The display will illuminate.
2. **Select Function:** Press the **Function** button to cycle through available cooking modes or power levels. Use the **Up**

(+) and **Down (-)** buttons to adjust the power or temperature as desired.

- 3. **Using Preset Modes:** Select a specific preset mode (e.g., Soup, Rice, Milk) by pressing the **Function** button until the desired mode is active. The cooker will automatically adjust power/temperature for that mode.
- 4. **Setting the Timer:** While cooking, press the **Timer** button. Use the **Up (+)** and **Down (-)** buttons to set the desired cooking duration. The cooker will automatically switch off when the timer expires.
- 5. **Power Off:** After cooking, press the **ON/OFF** button to turn off the cooker. The "Hot Indicator Lamp" may remain lit until the surface cools down.

Cookware Compatibility:

Only use cookware made of ferromagnetic materials such as cast iron, enameled iron, or stainless steel with a magnetic bottom. Cookware with a flat bottom and a diameter between 12 cm and 26 cm is recommended. Non-magnetic materials like glass, ceramic, aluminum, or copper without a magnetic base are not compatible.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your induction cooker.

- **Before Cleaning:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- **Cleaning the Surface:** Wipe the ceramic glass surface with a soft, damp cloth and a mild detergent. For stubborn stains, use a specialized ceramic hob cleaner. Avoid abrasive pads or harsh chemicals.
- **Cleaning the Body:** Wipe the exterior body with a soft, damp cloth. Do not allow water to enter the internal components.
- **Ventilation Openings:** Ensure the ventilation openings on the bottom and sides are free from dust and debris. Use a soft brush or vacuum cleaner to clean them if necessary.
- **Storage:** Store the cooker in a dry place when not in use.

TROUBLESHOOTING

Refer to this section for common issues and their potential solutions.

Problem	Possible Cause	Solution
Cooker does not turn on.	No power supply; power cord not properly plugged in.	Check power outlet and ensure the plug is securely inserted.
Cooker turns on but does not heat.	Incompatible cookware; cookware not centered; no cookware present.	Use induction-compatible cookware. Ensure the pot is centered on the cooking zone.
Display shows an error code.	Overheating; internal fault; voltage fluctuation.	Turn off and unplug the cooker, let it cool down. If the problem persists, contact customer support.
Fan noise is loud.	Normal operation; ventilation blocked.	The cooling fan operates during and after cooking. Ensure ventilation openings are clear.

SPECIFICATIONS

- **Model:** Kutchina Cosmic DLX

- **Power:** 2000 Watts
- **Material:** Copper Coil
- **Color:** Black
- **Net Weight:** 1.98 Kg
- **Gross Weight:** 2.42 Kg
- **Product Dimension (L x B x H):** 290 x 360 x 65 mm (29 x 36 x 6.5 cm)
- **Special Features:** Temperature Control
- **Controls Type:** Touch
- **Heating Element:** Radiant
- **Power Source Type:** Induction

WARRANTY AND SUPPORT

For warranty information, service, or technical support, please refer to the warranty card included with your product or contact Kutchina customer service directly. Keep your purchase receipt as proof of purchase.

You can visit the official Kutchina store for more information: [KUTCHINA Store on Amazon](#)

© 2023 KUTCHINA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07G25YF1V>

More documents and user manuals: <https://manuals.plus/>