

## CHENXI CHX021

# CHENXI CHX021 Women's Quartz Watch Instruction Manual

Model: CHX021

## 1. INTRODUCTION

Thank you for choosing the CHENXI CHX021 Women's Quartz Watch. This manual provides essential information for the proper setup, operation, and maintenance of your timepiece. This watch features a reliable Japanese quartz movement for accurate timekeeping, an elegant dial with crystal accents, and a durable stainless steel construction.



Image 1.1: Front view of the CHENXI CHX021 Women's Quartz Watch, showcasing the pink dial with crystal markers and stainless steel band.

## 2. SETUP

---

### 2.1 Setting the Time

1. Locate the crown on the right side of the watch case.
2. Gently pull the crown outwards to the first position.
3. Rotate the crown clockwise or counter-clockwise to adjust the hour and minute hands to the correct time.
4. Once the time is set, push the crown back into its original position to secure the setting and start the watch movement.



Image 2.1: Diagram illustrating key features of the watch, including the crown for time adjustment.

## 2.2 Adjusting the Stainless Steel Band

The stainless steel band is adjustable to ensure a comfortable fit. A watch band adjustment tool is typically included with the watch.

1. Identify the removable links on the watch band. These usually have small arrows indicating the direction to push the pins.
2. Using the provided tool or a small pin, push the pin out in the direction of the arrow to remove a link.
3. Remove links one at a time until the desired fit is achieved.
4. Reinsert the pin to secure the band. Ensure the clasp operates correctly.



Image 2.2: Close-up view of the watch band and its butterfly clasp mechanism.

### 3. OPERATING INSTRUCTIONS

#### 3.1 Wearing the Watch

Place the watch on your wrist and secure the butterfly clasp. Ensure the fit is snug but comfortable, allowing for proper blood circulation.



Image 3.1: The CHENXI watch displayed on a wrist, showing its fit and appearance.

#### 3.2 Water Resistance (3ATM)

This watch is water-resistant up to 3 ATM (30 meters / 100 feet). This means it is suitable for daily use and can withstand splashes or brief immersion in water.

- **Suitable for:** Daily splashes, rain, hand washing.
- **Not suitable for:** Swimming, showering, diving, or any prolonged water activities.

**Important:** Do not operate the crown or push buttons while the watch is wet or submerged in water. This can compromise the water resistance seal.

## PRODUCT DISPLAY



Image 3.2: Product parameters diagram, indicating 30M water resistance.

## 4. MAINTENANCE

### 4.1 Cleaning Your Watch

- Wipe the watch case and band regularly with a soft, dry cloth to remove dust and fingerprints.
- For stainless steel bands, a slightly damp cloth can be used, followed by immediate drying.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish and seals.

### 4.2 Battery Replacement

The quartz movement is powered by a battery. When the watch stops or the timekeeping becomes erratic, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance is maintained.

### 4.3 Storage

When not wearing the watch, store it in a dry place away from direct sunlight, extreme temperatures, and strong magnetic fields.

## 5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch stops or runs intermittently.	Depleted battery.	Replace the battery (recommended by a professional).
Time is incorrect.	Crown is not fully pushed in, or time was not set correctly.	Ensure the crown is fully pushed in. Reset the time as per Section 2.1.
Condensation inside the watch.	Exposure to extreme temperature changes or compromised water resistance.	Seek professional inspection immediately to prevent damage to the movement.

## 6. SPECIFICATIONS

Feature	Detail
Model Number	CHX021
Movement	Japanese Quartz Movement
Display Type	Analog
Band Material	Stainless Steel
Clasp Type	Foldover Clasp (Butterfly Clasp)
Water Resistance	3 ATM (30 meters / 100 feet)
Watch Band Length (Approx.)	19 cm (7.48 inches)
Watch Band Width (Approx.)	1.6 cm (0.63 inches)
Watch Case Diameter (Approx.)	2.8 cm (1.10 inches)

Feature	Detail
Watch Case Thickness (Approx.)	0.9 cm (0.35 inches)
Weight (Approx.)	60 g (2.12 ounces)

## PRODUCT DISPLAY

**1** Clearly visible dial



**2** Folding clasp with safety

**3** Crown with waterproof design



**4** Imitation silver Plating buckle

**5** Stainless steel back



**6** High quality full stainless steel strap



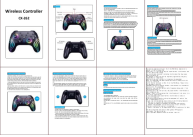


Image 6.1: Visual representation of the watch's dimensions and key specifications.

## 7. WARRANTY AND SUPPORT

For warranty information or any questions regarding your CHENXI CHX021 watch, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific warranty terms and contact details. If you have any questions or require assistance, please feel free to contact us via email. We are committed to providing support for our products.



### Related Documents - CHX021

	<p><a href="#">Wireless Controller CX-262 User Manual and Features</a></p> <p>Detailed guide for the CX-262 Wireless Controller, covering Bluetooth pairing, USB wired mode, button programming, turbo functions, lighting effects, and FCC compliance. Learn how to use and customize your controller.</p>
	<p><a href="#">CX-270L Wireless Controller User Guide</a></p> <p>Comprehensive user guide for the CX-270L wireless controller, detailing setup, features like Turbo mode, customizable lighting, vibration control, and calibration for Nintendo Switch and PC gaming.</p>
	<p><a href="#">Shenzhen Chenxi Electronic Technology Co., Ltd. Game Controller Model Statement</a></p> <p>Statement from Shenzhen Chenxi Electronic Technology Co., Ltd. declaring that various models of their Game Controllers (CX-X1, CX-269, CX-9038, CX-9116, CX-9115) are identical in interior structure, electrical circuits, and components, with only model names differing for marketing purposes.</p>