

T&G TG117

T-Star TG117 Wireless Speaker User Manual

Model: TG117

INTRODUCTION

Thank you for purchasing the T-Star TG117 Wireless Speaker. This portable Bluetooth speaker is designed for outdoor sports and general use, offering high-quality audio and versatile connectivity options. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. This will void the warranty.
- Keep the speaker away from water and liquids, despite its waterproof rating, to prevent damage to internal components.
- Use only the provided or certified charging cables.
- Clean the speaker with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.

PACKAGE CONTENTS

Please check the package for the following items:

- 1 x T-Star TG117 Wireless Speaker
- 1 x USB Charging Cable
- 1 x AUX Audio Cable



Image: Front view of the T-Star TG117 Wireless Speaker in blue, showcasing its mesh design and T&G logo.

PRODUCT OVERVIEW

The TG117 speaker features a compact, portable design with intuitive controls and multiple connectivity options.

Controls and Interfaces:

- **Power Button:** Press and hold to turn on/off.
- **Play/Pause Button:** Press to play or pause music. Press to answer/end calls.

- **Volume Up/Next Track:** Press to increase volume. Press and hold for next track.
- **Volume Down/Previous Track:** Press to decrease volume. Press and hold for previous track.
- **Mode Button (M):** Press to switch between Bluetooth, TF Card, USB, AUX, and FM Radio modes.
- **Micro USB Port:** For charging the speaker.
- **TF Card Slot:** Insert a TF (MicroSD) card for music playback.
- **AUX Input (3.5mm):** Connect external audio devices via AUX cable.
- **USB 2.0 Port:** Insert a USB drive for music playback.



Image: A collection of T-Star TG117 Wireless Speakers in different colors and patterns, highlighting the product's design versatility.

SETUP

1. Charging the Speaker:

1. Connect the provided USB charging cable to the Micro USB port on the speaker.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. It takes approximately 4 hours for a full charge.
4. The indicator light will turn off or change color once fully charged.

2. Powering On/Off:

- To power on, press and hold the Power button until you hear an audible prompt.
- To power off, press and hold the Power button again until you hear an audible prompt.

OPERATING INSTRUCTIONS

1. Bluetooth Mode:

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light.
2. Enable Bluetooth on your device (smartphone, tablet, etc.).
3. Search for "TG117" in the list of available Bluetooth devices and select it to pair.
4. Once successfully paired, the LED light will stop flashing, and you will hear a confirmation sound.
5. You can now play music from your device through the speaker.

2. TF Card / USB Playback:

- Insert a TF (MicroSD) card or USB drive with MP3 audio files into the respective slot.
- The speaker will automatically switch to TF Card or USB mode and begin playing music.
- Use the Play/Pause, Volume Up/Next, and Volume Down/Previous buttons to control playback.

3. AUX Audio Input:

- Connect one end of the 3.5mm AUX cable to the speaker's AUX input port.
- Connect the other end to the audio output jack of your external device (e.g., MP3 player, computer).
- The speaker will automatically switch to AUX mode. Control playback from your connected device.

4. FM Radio Function:

- Press the "M" (Mode) button to switch to FM Radio mode.
- To auto-scan and save available stations, press the Play/Pause button. The speaker will scan and store stations automatically.
- Use the Volume Up/Next and Volume Down/Previous buttons to navigate between saved stations.

5. Hands-Free Calling:

- When connected via Bluetooth, incoming calls will be announced.
- Press the Play/Pause button to answer an incoming call.
- Press the Play/Pause button again to end the call.
- Press and hold the Play/Pause button to reject an incoming call.

MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, dry, lint-free cloth. Do not use liquid cleaners or aerosols.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is low or dead.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker is not in pairing mode; device Bluetooth is off; too far from speaker.	Ensure speaker is in pairing mode (flashing LED). Turn on device Bluetooth. Move device closer to speaker (within 10m). Forget "TG117" on your device and try pairing again.
No sound.	Volume is too low; incorrect mode selected; cable not connected properly.	Increase volume on both speaker and connected device. Press "M" button to select correct mode (Bluetooth, AUX, TF, USB, FM). Ensure AUX cable is fully inserted.
FM radio reception is poor.	Weak signal; environmental interference.	Relocate the speaker to an area with better signal. Re-scan for stations.

SPECIFICATIONS

Model Name	TG117
Brand	T&G
Bluetooth Version	V4.2
Transmission Distance	Up to 10 meters (33 feet)
Speaker Output Power	3 Watts
Frequency Response	120Hz - 20kHz
Signal-to-Noise Ratio (SNR)	≥90dB
Battery Capacity	1200mAh
Music Playback Time	3-4 hours
Charging Time	Approx. 4 hours
Interfaces	Micro USB, TF Card Slot, 3.5mm AUX, USB 2.0
Additional Functions	FM Radio, Hands-free Call
Dimensions (L x W x H)	7.95"D x 2.72"W x 6.3"H (approx. 6.9 x 6.9 x 16 cm)
Item Weight	0.37 kg (13.1 ounces)
Water Resistance Level	Waterproof




Image: Another view of multiple T-Star TG117 Wireless Speakers in different colors, showcasing their cylindrical form factor.

WARRANTY AND SUPPORT

The T-Star TG117 Wireless Speaker comes with a **Limited Warranty**. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact your retailer or the manufacturer directly. Keep your purchase receipt as proof of purchase.

Manufacturer: T&G

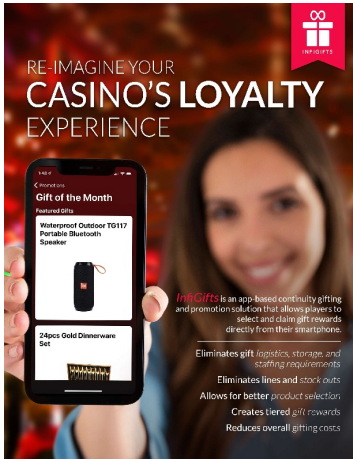


[pdf] Borchure

Inf Gifts Brochure Untitled Waterproof Outdoor TG117 Portable Bluetooth Speaker T G 24pcs Gold Dinnerware Set is an app based continuity gifting and promotion solution that Inf Gifts Brochure pub mediabox storage rxweb prd exhibitor document exh 157af266 db16 42d6 8b6a d75225faf148 1195fef6 f2bd 4eda a82a 88555c6da2b7 |||

...

lang: score:8 filesize: 2.95 M page_count: 6 document date: 2023-09-12

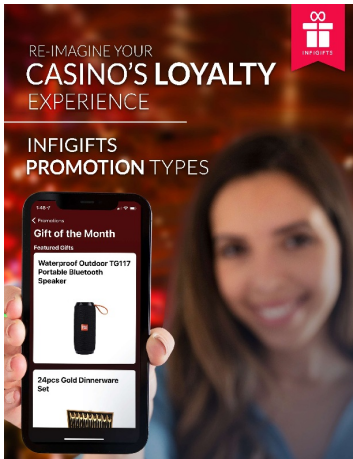

[pdf]

Inf Gifts Promotion Types Untitled Waterproof Outdoor TG117 Portable Bluetooth Speaker T G 24pcs Gold Dinnerware Set Page 2 4 CASINO VIP PARTIES Casino parties are used to thank Inf Gifts Promotion Types pub mediabox storage rxweb prd exhibitor document exh 157af266 db16 42d6 8b6a d75225faf148 d9090f10 656a 4bdc a0fd 7c6d67550555 |||

...

lang: score:8 filesize: 2.75 M page_count: 6 document date: 2022-10-21