

Casio W-218H

Casio W218H Series Digital Watch Instruction Manual

Model: W-218H-4BVCF

1. INTRODUCTION

Thank you for choosing the Casio W218H Series Digital Watch. This manual provides essential information regarding the setup, operation, and maintenance of your new timepiece. Designed for durability and functionality, this watch features a clear digital display, 50-meter water resistance, a 1/100-second stopwatch, daily alarm, hourly time signal, LED backlight, and a long-lasting 7-year battery.



Figure 1: Front view of the Casio W218H Series Digital Watch.

2. SETUP

2.1 Setting the Time and Date

1. In the Timekeeping Mode (normal time display), press and hold the **MODE** button (bottom-left) until the seconds digits begin to flash. This indicates the setting mode.
2. Press the **LIGHT** button (top-right) to cycle through the settings: seconds → hour → minutes → year → month → day.

3. Use the **START/STOP** button (top-left) to adjust the flashing value. For seconds, pressing **START/STOP** resets them to 00.
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

2.2 12/24-Hour Format Selection

In the Timekeeping Mode, press the **START/STOP** button to toggle between 12-hour and 24-hour time formats.

3. OPERATING INSTRUCTIONS

3.1 Mode Navigation

Press the **MODE** button to cycle through the watch's functions in the following order:

- Timekeeping Mode (normal time display)
- Alarm Mode
- Stopwatch Mode

3.2 Alarm Mode

1. Navigate to the Alarm Mode using the **MODE** button. The alarm time will be displayed.
2. Press and hold the **MODE** button until the hour digits begin to flash.
3. Use the **START/STOP** button to adjust the hour.
4. Press the **LIGHT** button to select the minute digits, then use **START/STOP** to adjust the minutes.
5. Press the **MODE** button to exit the alarm setting mode.
6. To turn the daily alarm ON/OFF, press the **START/STOP** button in Alarm Mode. An indicator will show if the alarm is active.
7. To activate/deactivate the Hourly Time Signal, press the **LIGHT** button in Alarm Mode. An indicator will show if the hourly signal is active.



Figure 2: Alarm setting display.

3.3 Stopwatch Mode

The stopwatch measures elapsed time, split times, and two finishes with 1/100-second accuracy.

1. Navigate to the Stopwatch Mode using the **MODE** button. The display will show 00:00:00.
2. Press the **START/STOP** button to start the stopwatch.
3. Press **START/STOP** again to stop the stopwatch.
4. To reset the stopwatch to 00:00:00, press the **LIGHT** button while the stopwatch is stopped.

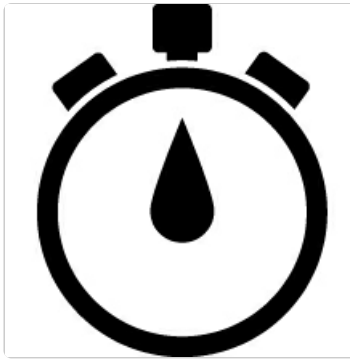


Figure 3: Stopwatch display.

3.4 LED Backlight

Press the **LIGHT** button to illuminate the display for easy viewing in low-light conditions. The backlight will remain active as long as the button is pressed.



Figure 4: Watch display with LED backlight activated.

4. MAINTENANCE

4.1 Water Resistance

Your Casio W218H watch is water resistant to 50 meters (165 feet). This means it is suitable for short periods of recreational swimming, showering, and washing hands. It is **not** suitable for diving or snorkeling. Avoid operating buttons while the watch is wet or submerged to prevent water ingress.



Figure 5: Water resistance indicator.

4.2 Battery Life

The watch is powered by a product-specific battery designed to last approximately 7 years under normal use. When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should be performed by a qualified technician.

4.3 Cleaning

Wipe the watch with a soft, dry cloth. For stubborn dirt, use a soft cloth dampened with water and a mild neutral detergent, then wipe dry. Avoid using volatile agents like thinner or benzine, as they may damage the resin components.

5. TROUBLESHOOTING

- **Incorrect Time/Date:** Ensure the time and date are set correctly as per Section 2.1. If the issue persists after resetting, the battery may be low.
- **Display is Dim or Blank:** This typically indicates a low battery. Replace the battery promptly.
- **Buttons Not Responding:** Check if the watch is wet. If so, dry it thoroughly. If the issue continues, the watch may require servicing.
- **Alarm Not Sounding:** Verify that the alarm is activated in Alarm Mode (Section 3.2). Check the volume settings if applicable (though this model typically has a fixed alarm tone).

6. SPECIFICATIONS

Model Number	W-218H-4BVCF
Case Material	Resin, Stainless Steel Back
Band Material	Resin
Display Type	Digital
Movement Type	Quartz
Water Resistance	50 Meters (165 Feet)
Case Diameter	46 Millimeters
Case Thickness	11 Millimeters
Item Weight	0.09 Pounds
Battery Life	Approx. 7 years
Accuracy	±30 seconds per month

7. OFFICIAL PRODUCT VIDEOS

7.1 Simple Digital Watch: Quick Demo

Your browser does not support the video tag.

This video provides a quick demonstration of the Casio W218H digital watch, showcasing its basic functions and ease of use. It highlights the watch's simple interface and key features.

7.2 Casio W-218H Review

Your browser does not support the video tag.

This video offers a detailed review of the Casio W-218H, covering its design, features, and overall performance. It provides insights into the watch's practical aspects and user experience.

8. WARRANTY AND SUPPORT

Your Casio W218H watch comes with a manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Casio website. For further assistance, technical support, or service inquiries, please contact Casio customer service.

You can visit the official Casio Store for more information:[Casio Store on Amazon](#)