Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Wuloo /
- > Wuloo WL666 Wireless Intercom System User Manual

Wuloo WL666

Wuloo WL666 Wireless Intercom System User Manual

Comprehensive instructions for setup, operation, and maintenance of your Wuloo WL666 intercom system.

Package

Introduction Features Contents Setup Operation Maintenance

Troubleshooting Specifications Support

1. Introduction

This manual provides detailed instructions for the Wuloo WL666 Wireless Intercom System. Please read this manual thoroughly before operating the device to ensure proper use and to maximize its functionality. The Wuloo WL666 is designed for reliable, clear communication within homes, offices, and businesses, offering a wireless solution without the need for Wi-Fi.



Figure 1: Wuloo WL666 Wireless Intercom System (3-pack)

2. PRODUCT FEATURES

- Wireless Communication: Operates on FM wireless technology, eliminating the need for Wi-Fi or complex wiring.
- Extended Range: Offers a communication range of up to 5280 feet (approximately 1 mile) in open areas, ensuring clear sound quality over long distances.
- Multi-Channel & Code System: Features 10 channels and 3 digital codes (A/B/C) to enhance privacy and prevent interference from other intercoms.
- Versatile Functions: Includes Monitor, Talk, VOX (Voice Operated Exchange), Group, and Calling functions for various communication needs.
- **Portable Power Option:** Compatible with 5V 1A power banks for outdoor or mobile use (power bank not included).
- Easy Installation: Designed with a back hole for convenient wall mounting.



Figure 2: Key features of the Wuloo WL666 Intercom System.

Your browser does not support the video tag.

Video 1: Overview of the features of the Wuloo WL666 intercom system.

3. PACKAGE CONTENTS

The Wuloo WL666 Wireless Intercom System (3-pack) includes the following items:

- 3 x Wuloo WL666 Intercom Units
- 3 x Power Cords (USB to DC 5V)
- 3 x AC Adapters (5V 1A)
- 1 x User Manual (this document)

Package Include 3 Stations West Windows 6.50 inch Adapted 50 1k.) Note: Support Power Bank Supply, and can't work with the battery.

Figure 3: Contents of the Wuloo WL666 3-station package.

4. SETUP INSTRUCTIONS

Follow these steps to set up your Wuloo WL666 Wireless Intercom System:

4.1. Connect AC Power

- 1. Connect the provided USB power cord to the DC 5V port on the back of each intercom unit.
- 2. Plug the AC adapter into a standard wall outlet.
- 3. Ensure all units are powered on.

Note: This intercom system does not support batteries. It requires continuous AC power or a compatible power bank (DC 5V 1A) for operation.

Your browser does not support the video tag.

Video 2: Step-by-step guide on how to use the Wuloo WL666 intercom, including power connection.

4.2. Code Setting (A/B/C)

Each intercom unit has a switch near the power port to select a digital code (A, B, or C). For secure communication, ensure all intercoms intended to communicate with each other are set to the same code.

- 1. Locate the A/B/C switch on the side of each intercom unit.
- 2. Slide the switch to select your desired code (A, B, or C). All units in your system should use the same code.



Figure 4: Intercom unit layout with digital code switch highlighted.

4.3. Channel Setting

Each intercom unit can be assigned a unique channel number (0-9). This allows for direct communication between specific units within your system.

- 1. On each intercom unit, press and hold any channel number key (0-9) for 3 seconds to set its channel. The display will show the selected channel.
- 2. Assign a different channel number to each unit for individual calling.
- 3. It is recommended to set all stations to the same code (A, B, or C) but with different channel numbers. This allows you to simply adjust the channel to make calls without needing to set a new code each time.

How to set an intercom system Code Settings Channel Settings 1st Step: Set the channel and code for each sta-Long press channel key to set your channel. Short press channel key to call other intercom station (A minute later will automatically re-store the original channel). We suggest set-ting all the stations with the same code, then clicking other channels to communicate. You do not need to set a new code every time you call a different user 2nd Step: 3rd Step: Distribute different station for different user Use it to communication with multi-func-After you set a different channel for each user please mark the channel for each user you wish to call. Then, distribute to each user. (Note: please keep intercom at least 5 meters away to avoid in-After every user has been assigned their intercom station, you can now make calls by simply clicking the channel of whom you wish to call. terference while setting different stations).

Figure 5: Visual guide for code and channel settings.

4.4. Address List (Optional for Large Systems)

For larger intercom systems with many units, creating an address list can help you remember which intercoms belong to which users or locations. Record the channel number for each user.

Example: Member A: Code A Channel 1, Member B: Code A Channel 2, etc.

5. OPERATING INSTRUCTIONS

5.1. Basic Communication (Call & Talk)

- 1. **To Call Another Unit:** Short press the channel number key (0-9) of the intercom unit you wish to communicate with. The receiving unit will ring.
- 2. To Talk: After the call rings, press and hold the TALK button to speak. Release the button to listen.
- 3. Volume Adjustment: Use the VOL+ and VOL- buttons to adjust the speaker volume.

5.2. VOX (Voice Operated Exchange) Mode

VOX mode allows for hands-free communication without continuously pressing the TALK button. It activates when it detects a voice within a close speaking range.

- 1. Activate VOX: Press the VOX button on your unit. The channel number key will flash blue.
- 2. **Speaking in VOX:** Speak close to the microphone to activate VOX mode. The indicator light will turn red, and the number key will stop flashing. You can then speak, and the other unit will receive your voice message.
- 3. Listening in VOX: The other user can press and hold the TALK button to reply.

Note: VOX mode has a 24-hour time limit. If there are no manual changes to other channels, VOX mode will automatically exit after 24 hours. You need to reset it again every 24 hours for continuous use.

Communication in VOX mode may have a slight delay, and it's recommended to speak one by one.

Your browser does not support the video tag.

Video 3: Explanation and demonstration of the VOX function on the Wuloo WL666 intercom system.

5.3. Monitor Mode

Monitor mode allows you to listen to audio from a specific room (e.g., a baby's room) without needing voice activation.

- Activate Monitor: Place the intercom unit you wish to monitor in the desired room. Press the MONITOR button on this unit. The light on the device will turn red, indicating it's in monitored state.
- 2. **Listening:** On your listening unit, press and hold the Channel number key for 3 seconds to set the same channel as the monitored unit. You will then receive audio from the monitored room.

Note: The monitored unit will stay in transmit mode and cannot receive any information unless you exit this mode. Keep the device as close as possible to the person being monitored to pick up voice clearly. Monitor mode has a 10-hour time limit. If you need to monitor for a longer period, please reset it every 10 hours.

Your browser does not support the video tag.

Video 4: Demonstration of the MONITOR function of the Wuloo WL666 intercom system.

5.4. Group Mode

Group mode allows you to broadcast your voice to all intercom stations simultaneously within your system, even if they are on different channels but the same code.

- 1. Activate Group Call: Press and hold the GROUP button.
- 2. **Speaking in Group:** While holding the **GROUP** button, speak into your unit. Your message will be transmitted to all other units in the system.

Note: To confirm if an intercom station is part of your system, check its frequency and code using the frequency table in the detailed manual.

Your browser does not support the video tag.

Video 5: Explanation of the GROUP function of the Wuloo WL666 intercom system.

6. MAINTENANCE

- Cleaning: Use a soft, dry cloth to clean the exterior of the intercom units. Do not use liquid cleaners
 or aerosols
- **Storage:** Store the units in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Power Supply:** Always use the original power adapters provided with the system. Using incompatible adapters may damage the device.
- Antenna Care: Handle the antenna gently to avoid bending or breaking it, which could affect signal quality.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
No power to the unit.	Power cord not properly connected or power outlet is not working.	Ensure the power cord is securely plugged into the unit and the AC adapter. Test the outlet with another device.
Cannot communicate between units.	Units are on different digital codes or channels.	Verify that all units are set to the same digital code (A, B, or C). Ensure you are calling the correct channel number for the desired unit.
Poor sound quality or static.	Interference from other devices, units are too far apart, or obstructions.	Move units away from other electronic devices. Ensure units are within the effective range. Reduce physical obstructions between units.
VOX mode not activating.	Not speaking close enough to the microphone or VOX mode timed out.	Speak directly into the microphone. If VOX mode has been active for 24 hours, reset it by briefly changing the channel and then re-activating VOX.
Monitor mode not working.	Monitored unit is not in monitor mode or monitor mode out.	Ensure the monitored unit has its MONITOR button pressed (red light). If monitor mode has been active for 10 hours, reset it.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact Wuloo customer support for assistance.

8. SPECIFICATIONS

Feature	Detail
Model Number	WL666
Brand	Wuloo
Product Dimensions	6.4 x 4.3 x 1.6 inches
Item Weight	2.31 pounds
Number of Channels	10
Digital Codes	3 (A, B, C)
Talking Range Maximum	1 Mile (5280 feet)
Voltage	5 Volts
Power Compatibility	AC 100-240V (via adapter), DC 5V 1A (via power bank)
Water Resistance Level	Water Resistant
Included Components	Power Cord

9. WARRANTY AND SUPPORT

9.1. Warranty Information

Wuloo products are designed for durability and reliability. For specific warranty details, please refer to the warranty card included with your product or visit the official Wuloo website. Keep your purchase receipt as proof of purchase for warranty claims.

9.2. Customer Support

For technical assistance, troubleshooting, or any questions regarding your Wuloo WL666 Wireless Intercom System, please contact Wuloo customer support:

- Online Support: Visit the Wuloo Store on Amazon for FAQs and contact options.
- **Email:** Refer to your product packaging or the Wuloo website for the most current email contact information.

Please have your model number (WL666) and purchase date ready when contacting support.

© 2025 Wuloo. All rights reserved.

Related Documents - WL666



Wuloo Wireless Intercom System Quick Start Guide

This Quick Start Guide provides essential information for setting up and using the Wuloo Wireless Intercom System. It covers product overview, step-by-step setup instructions, channel and code configuration, multi-function usage, important notes, and feature introductions, ensuring efficient communication for home and business.



Wuloo Wireless Intercom System Quick Start Guide

A quick start guide for the Wuloo Wireless Intercom System, detailing setup, channel and code setting, usage, and features for effective room-to-room communication.

Wuloo Wireless Intercom Syste



Wuloo WL-666 Wireless Intercom System User Manual

A comprehensive user manual for the Wuloo WL-666 Wireless Intercom System. This guide covers setup, features like TALK, GROUP, MONITOR, VOX, and CALL, troubleshooting common issues, and warranty information.

No. dat 191. 666 FCC10: 2905R 666 E mail support@vantee@clatico Facebook page: @YVsto-00@clat



Model VII. 685. FCC IV 24089-666. I met supportfesioofficialcom facebook juge (PMUsoCfficial

Wuloo WL-666 Wireless Intercom System User Manual

User manual for the Wuloo WL-666 Wireless Intercom System, detailing setup, features like long-range communication and VOX mode, troubleshooting, and usage scenarios. Learn how to connect, set channels, and communicate effectively.

Wuloo
Full Duplex Intercom System



5-mail: support@wwicoofficial.com Web: www.wicoofficial.com Teoroot page: @Wydoofficial

Wuloo Full Duplex Intercom System User Manual

This user manual provides comprehensive instructions for setting up, operating, and troubleshooting the Wuloo Full Duplex Intercom System. Learn about its features, advanced settings, and warranty information.



Wuloo Full Duplex Intercom System: Quick Start Guide

This guide provides essential information for setting up and using the Wuloo Full Duplex Intercom System, including product overview, function details, and step-by-step instructions for wireless communication.