

ieGeek B07G2YY62J

ieGeek Portable DVD Player (Model B07G2YY62J) Instruction Manual

1. INTRODUCTION

Thank you for purchasing the ieGeek Portable DVD Player. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

Safety Information

- Do not expose the device to rain or moisture.
- Do not disassemble the device. Refer all servicing to qualified personnel.
- Use only the specified power adapters and accessories.
- Avoid extreme temperatures and direct sunlight.
- Keep the device away from strong magnetic fields.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- ieGeek Portable DVD Player
- Remote Control
- Car Charger
- AC Power Adapter
- 3-in-1 AV Cable
- User Manual



Figure 2.1: Included Accessories

3. PRODUCT OVERVIEW

The ieGeek Portable DVD Player features a 10.5-inch HD swivel screen and supports various media formats for versatile entertainment.



Figure 3.1: ieGeek Portable DVD Player

Controls and Ports

Portable and User-Friendly

Lightweight, compact, and easy to operate, making it ideal for travel and everyday use.



Figure 3.2: Side Ports and Controls

- **USB Port:** For connecting USB flash drives.
- **SD Card Slot:** For inserting SD memory cards.
- **Earphone Jack:** For connecting headphones.
- **AV OUT:** Connects to a TV or projector for larger screen viewing.
- **AV IN:** Connects to another portable DVD player for synchronized viewing.
- **ON/OFF Switch:** Powers the device on or off.
- **DC IN 12V:** Power input for AC adapter or car charger.
- **GAME Port:** For connecting a game controller (if supported).

4. SETUP

4.1 Initial Charging

Before first use, fully charge the portable DVD player. The built-in rechargeable battery provides approximately 5 hours of video playback.

- Connect the AC Power Adapter to the DC IN 12V port and a power outlet.
- Alternatively, use the Car Charger to power the device in a vehicle.

Rechargeable Lithium Battery

Built-in 5-hour rechargeable lithium battery, lasts for 2 movies.



Power Adapter



2500mAh Battery



Car Charger

Figure 4.1: Charging Options

4.2 Loading a Disc

1. Slide the 'OPEN' latch to open the disc lid.
2. Place the DVD or CD onto the spindle, ensuring it clicks into place.
3. Close the disc lid firmly. The player will begin loading automatically.

Note: Blu-ray discs are not supported.

4.3 Inserting USB/SD Card

- Insert a USB flash drive into the USB port.
- Insert an SD card into the SD Card slot.

The player will detect the media and allow you to select files for playback.



Figure 4.2: USB and SD Card Insertion

5. OPERATING INSTRUCTIONS

5.1 Basic Playback

- **Power On/Off:** Use the ON/OFF switch on the side of the device.
- **Play/Pause:** Press the Play/Pause button on the device or remote to start or pause playback.
- **Stop:** Press the Stop button to end playback.
- **Skip:** Use the Previous/Next buttons to skip tracks or chapters.
- **Volume Control:** Adjust the volume using the VOL+ and VOL- buttons on the device or remote.

5.2 Screen Rotation

The 10.5-inch HD screen can rotate 270° and flip 180°, allowing for multiple viewing angles or folding into a tablet-like form.



Figure 5.1: Screen Rotation Capabilities

5.3 Remote Control

The included remote control provides full functionality for convenient operation from a distance.

5.4 External Connections (SYNC Screen Playing)

- **Connect to TV:** Use the AV to RCA cable (3-in-1 AV Cable) to connect the AV OUT port of the DVD player to the AV IN ports of a television. This allows you to view content on a larger screen.
- **Connect to Another Player:** Use an AV to AV cable (not included) to connect the AV OUT of one player to the AV IN of another, enabling synchronized viewing across two devices.

5.5 Special Features

- **Last Memory Function:** The player automatically resumes playback from where it was last stopped, even after powering off.
- **Loop Playback:** Enable the repeat function to play files on a continuous loop.
- **Anti-Shake Function:** Designed to minimize disc skip issues during movement, ideal for car travel.

6. MEDIA COMPATIBILITY

This portable DVD player supports a wide range of media formats and is region-free for DVD playback.

Support Multiple Media & All Regions



Figure 6.1: Supported Media Types

6.1 Supported Disc Formats

- CD, DVD, VCD, DVD±R, DVD±RW, CD-R, CD-RW, CVD, SVCD.
- Not compatible with Blu-ray discs.

6.2 Supported Digital Media (USB/SD Card)

Supports USB and SD cards up to 32GB.

- **Video:** AVI, MPG, MPVG4, VOB, FLV, RMVB (resolution within 720*576).
- **Audio:** MP3, WMA, OGG, AAC.

7. TROUBLESHOOTING

If you encounter issues with your ieGeek Portable DVD Player, refer to the following common solutions:

- **No Power:** Ensure the device is fully charged or connected to a power source. Check the ON/OFF switch.
- **No Disc Detected:** Verify the disc is inserted correctly and is a supported format (not Blu-ray). Clean the disc if necessary.

- **No Picture/Sound on TV:** Check the AV cable connections between the DVD player and the TV. Ensure the TV input is set to the correct AV channel.
- **Poor Picture Quality:** Ensure the disc is clean and free of scratches. Adjust screen settings if available.
- **Remote Control Not Working:** Check the remote's batteries. Ensure there are no obstructions between the remote and the player's sensor.

Game Functionality

The ieGeek Portable DVD Player supports game playback via the USB port. Connect a compatible game controller to the USB port to access pre-loaded games or games from a USB drive.

Video 7.1: Demonstrating game play on the ieGeek Portable DVD Player by connecting a game controller via USB and playing a classic game.

8. SPECIFICATIONS

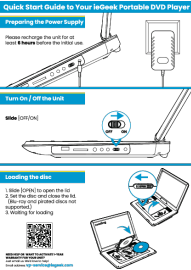




Product Dimensions	5.5 x 10.33 x 5.5 inches
Item Weight	3.25 pounds
Batteries	1 Lithium Polymer batteries required (included)
Brand	ieGeek
Media Type	DVD, VCD, CD, MP3, MPEG, AVI, VOB, USB, SD
Color	Purple
Screen Size	10.5 Inches
Display Type	LCD

9. WARRANTY AND SUPPORT

The ieGeek Portable DVD Player typically comes with a 1-year warranty from the date of purchase. For technical support, warranty claims, or any inquiries, please contact ieGeek customer service.

- **Contact Email:** vp-service@iegeek.com
- **Support:** Lifetime Technical Support is available.
- **Returns/Exchanges:** 24 Months Return and Exchange policy.

Related Documents - B07G2YY62J

 <p>Quick Start Guide to Your ieGeek Portable DVD Player</p> <p>Recharge the battery before using the ieGeek Portable DVD Player.</p> <p>Turn On / Off the unit</p> <p>Loading the disc</p> <p>1. Place DVD(s) to open the lid. 2. Put the disc and close the lid. 3. Press the play button. (The disc will start playing.)</p> <p>Sales Email: service@iegeek.com Official website: http://www.iegeek.com</p>	<p>ieGeek Portable DVD Player Quick Start Guide</p> <p>Get started quickly with your ieGeek portable DVD player. This guide covers essential setup, power, operation, and disc loading instructions for a seamless user experience.</p>
 <p>ieGeek PORTABLE VIDEO PLAYER User manual</p> <p>IK-702</p> <p>Sales Email: service@iegeek.com Official website: http://www.iegeek.com</p>	<p>ieGeek IK-702 Portable Video Player User Manual</p> <p>User manual for the ieGeek IK-702 portable video player, covering setup, usage, specifications, troubleshooting, safety, and warranty information.</p>
 <p>ieGeek User Manual Portable Video Player IK-902</p> <p>Sales Email: service@iegeek.com Official website: http://www.iegeek.com</p>	<p>ieGeek IK-902 Portable Video Player User Manual</p> <p>Comprehensive user manual for the ieGeek IK-902 Portable Video Player. Learn about setup, features, troubleshooting, specifications, and warranty information for your portable DVD player.</p>
 <p>ieGeek Wire-free Battery Camera User manual</p> <p>ZS-GX3S</p> <p>Sales Email: service@iegeek.com Official website: http://www.iegeek.com</p>	<p>ieGeek ZS-GX3S Wire-free Battery Camera User Manual</p> <p>Comprehensive user manual for the ieGeek ZS-GX3S wire-free battery camera. Learn about camera introduction, app download and registration, Wi-Fi connection, and troubleshooting.</p>
 <p>ieGeek Wire-free Battery Camera User manual</p> <p>Sales Email: service@iegeek.com</p>	<p>ieGeek S2 Wire-free Battery Camera User Manual - Setup and Operation Guide</p> <p>Comprehensive user manual for the ieGeek S2 wire-free battery camera. Includes setup instructions, app guide, installation tips, warranty information, and technical support details for optimal security camera performance.</p>

ieGeek
K301
CAR MP3 PLAYER



make your life better

[ieGeek K301 Car MP3 Player User Manual](#)

Comprehensive user manual for the ieGeek K301 Car MP3 Player, covering features, specifications, installation, operation, and troubleshooting. This guide provides detailed instructions for using the device's radio, media playback, Bluetooth connectivity, and more.