

[Manuals.plus](#) /

› [HomGarden](#) /

› HomGarden Foldable Indoor Basketball Arcade Game Instruction Manual

HomGarden HomGaBY1106BY

HomGarden Foldable Indoor Basketball Arcade Game Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and correct assembly, operation, and maintenance of your HomGarden Foldable Indoor Basketball Arcade Game. Please read all instructions carefully before assembly and use. Retain this manual for future reference.



Image 1.1: Overview of the HomGarden Foldable Indoor Basketball Arcade Game.

2. SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, observe the following safety guidelines:

- Adult assembly is required. Keep small parts away from children during assembly.
- Ensure all connections are secure and stable before use. Regularly check for loose bolts or components.
- Do not hang on the rims or frame. This product is designed for shooting basketballs only.
- Use only the provided basketballs or similar soft, lightweight balls.
- Place the game on a flat, stable surface to prevent tipping.
- Keep hands and fingers clear of moving parts during folding and unfolding.

3. PACKAGE CONTENTS

Verify that all components listed below are present in your package:

 
- 1 x Double Shot Electronic Basketball Frame
- 1 x Electronic Scorer (Battery NOT Included)
- 2 x Basketball Rim
- 2 x Basketball Rim Net (Red, White, Blue, Three Color Gradation)
- 4 x Basketball Ball
- 1 x Inflator
- Assembly Hardware (bolts, nuts, washers, etc.)

4. SETUP AND ASSEMBLY

Follow these steps to assemble your basketball arcade game. It is recommended to have two adults for assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify against the package contents list.
2. **Assemble Base Frame:** Connect the steel poles to form the base structure. Ensure all locking pins or screws are securely fastened.
3. **Attach Backboard:** Secure the MDF backboard to the upper frame using the provided hardware. Ensure it is firmly attached and level.
4. **Install Hoops and Nets:** Attach the two basketball rims to the backboard. Then, secure the basketball nets to the rims.
5. **Mount Ball Return Ramp:** Connect the tear-resistant Oxford ramp to the frame, ensuring it forms a smooth path for returned balls.
6. **Install Electronic Scorer:** Mount the electronic scorer unit in its designated position on the backboard. Insert the required batteries (not included) into the scorer.
7. **Inflate Basketballs:** Use the provided inflator to inflate the four rubber basketballs to the recommended pressure.
8. **Final Check:** Review all connections and ensure the entire structure is stable and secure before first use.

⇒ **Stable & Durable Construction** ⇐

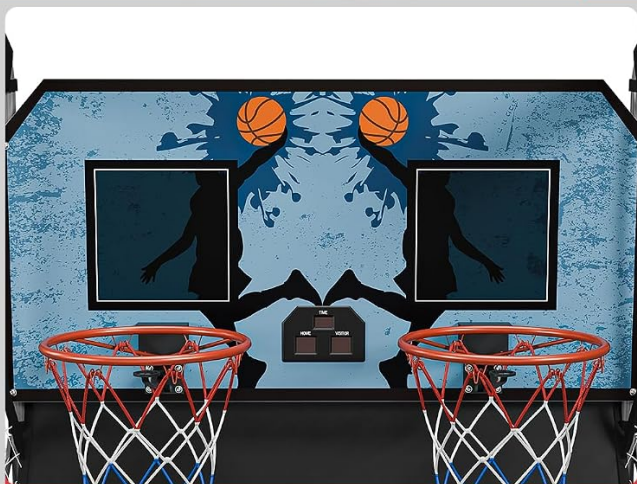


Shatterproof MDF Backboard



Tear-resistant Oxford Ramp



 Reinforced Hoop Connection

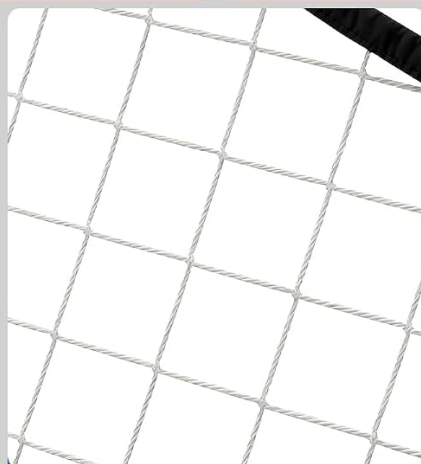

Wear-resistant Protective Net



Non-slip Foot Pads

Image 4.1: Illustration of stable and durable construction features, including the shatterproof MDF backboard, tear-resistant Oxford ramp, reinforced hoop connection, wear-resistant protective net, and non-slip foot pads.

5. OPERATING INSTRUCTIONS

5.1 Electronic Scoring Board

The electronic scoring board features dual LED displays and infrared optical sensors for accurate score tracking. It also provides real arcade sound effects.

- **Power On/Off:** Locate the power button on the scorer unit to turn the system on or off.
- **Volume Adjustment:** Use the designated buttons on the scorer to adjust the volume of the sound effects.
- **Scoring:** The infrared sensors detect successful shots through the hoops and automatically update the score on the LED display.



Image 5.1: The electronic scoring board displaying score and time, accompanied by cheerful sound effects.

5.2 Game Modes

The system offers 8 different interactive game options for varied play:

1. Beat The Time Clock
2. 3 Point Beat The Time Clock
3. Battle Back
4. Horse
5. Check Point
6. Around The World
7. Left And Right Shoot
8. One To One

Refer to the electronic scorer's specific instructions for selecting and starting each game mode.

⇒ 8 Playing Methods ⇐



Image 5.2: Visual representation of the 8 available playing methods, including Beat The Time Clock, 3 Point Beat The Time Clock, Battle Back, Horse, Check Point, Around The World, Left And Right Shoot, and One To One.

6. MAINTENANCE

6.1 Cleaning

- Wipe down the steel frame and backboard with a damp cloth. Avoid abrasive cleaners.
- Clean the ball return ramp and nets as needed to remove dust or debris.
- Keep the electronic scorer dry and clean.

6.2 Storage and Folding

The HomGarden basketball arcade game is designed for convenient folding to save space when not in use.

- To fold, carefully follow the instructions provided with your product to disengage the locking mechanisms and collapse the frame.
- Ensure the lock pins are inserted when folded to secure the unit in its compact position.

- Store in a dry, cool place away from direct sunlight.



Image 6.1: A person demonstrating the quick folding mechanism of the basketball arcade game for space-saving storage, highlighting the importance of inserting lock pins when folded.

7. TROUBLESHOOTING

If you encounter issues with your HomGarden Basketball Arcade Game, refer to the following common solutions:

- **Electronic Scorer Not Working:**
 - Check if batteries are correctly installed and not depleted. Replace batteries if necessary.
 - Ensure all connections to the scorer unit are secure.
 - Verify that the infrared sensors are clean and unobstructed.
- **Unstable Frame:**
 - Re-check all bolts and fasteners to ensure they are tightened securely.
 - Ensure the game is placed on a level surface.

- **Balls Not Returning Properly:**
 - Inspect the ball return ramp for any obstructions or damage.
 - Ensure the ramp is correctly attached and tensioned.

8. SPECIFICATIONS

Feature	Specification
Model Number	HomGaBY1106BY
Material	Steel Poles, MDF Panel, Polyester Net, 210D Oxford with PU Coating Ball Return
Overall Size (Before Folded)	80.7" (H) x 80.7" (D) x 43.3" (W)
Overall Folded Size	80.7" (H) x 43.3" (W)
Weight	33 lbs / 15kg
Backboard Size	42" x 20.5" x 0.35" (L x W x H)
Rim Diameter	12"
Basketball Diameter	7" rubber balls
Steel Tube Diameter	0.87" with powder coating

Product Dimensions

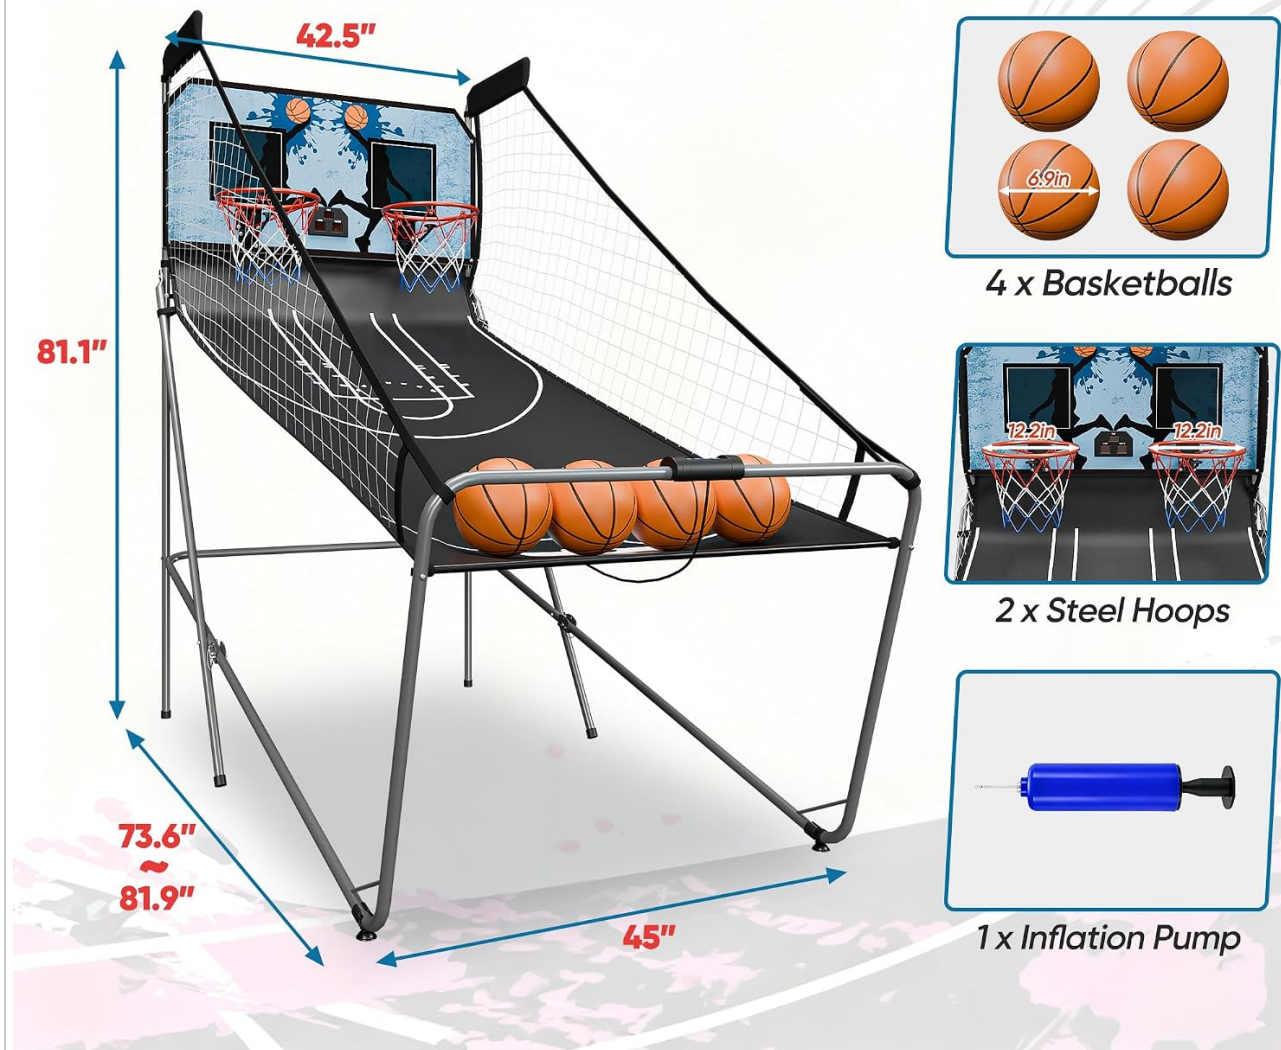 


Image 8.1: Detailed product dimensions, including overall height, width, depth, and sizes of basketballs and hoops.

9. SUPPORT

For further assistance, questions, or to report missing/damaged parts, please contact HomGarden customer support. Refer to your purchase documentation for specific contact details or visit the official HomGarden website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question