

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Dirt Devil](#) /

› [Dirt Devil Endura Max XL Upright Bagless Vacuum Cleaner \(Model UD70182\) Instruction Manual](#)

Dirt Devil UD70182

Dirt Devil Endura Max XL Upright Bagless Vacuum Cleaner

Model: UD70182

PRODUCT OVERVIEW

The Dirt Devil Endura Max XL Upright Bagless Vacuum Cleaner is designed for powerful and efficient cleaning across various floor types, including carpets and hard floors. It features an advanced Endura filtration system to prevent suction loss and an easy-empty XL dirt cup for convenient disposal.



Image: Dirt Devil Endura Max XL Upright Bagless Vacuum Cleaner, showcasing its design and features.

SETUP

Assembly

Your Dirt Devil Endura Max XL vacuum cleaner requires minimal assembly. Follow these steps to prepare your unit for use:

- 1. Attach the Handle:** Insert the handle into the main vacuum body until it clicks securely into place.
- 2. Connect the Hose:** Secure the flexible hose to the designated port on the vacuum body. Ensure a snug fit to maintain suction.

3. **Attach On-Board Tools:** Place the quick-release wand, turbo tool, and 2-in-1 dusting brush/crevice tool onto their designated storage clips on the vacuum body for easy access during cleaning.



Image: The Dirt Devil Endura Max XL vacuum cleaner with its various attachments stored on the unit, illustrating its compact design and readiness for use.

OPERATING INSTRUCTIONS

Powering On/Off

To turn the vacuum cleaner on or off, locate the power switch on the main body. Press it once to activate the vacuum. Press again to turn it off.

Floor Type Adjustment

The vacuum features a 4-level floor height adjustment to optimize cleaning for different surfaces:

- **Low Setting:** Ideal for bare floors and low-pile carpets.
- **Medium Setting:** Suitable for medium-pile carpets.

- **High Setting:** Recommended for high-pile carpets.

Using the Quick Release Wand and Tools

For extended reach and detailed cleaning, detach the quick-release wand. Attach the desired tool (turbo tool, 2-in-1 dusting brush/crevice tool) to the end of the wand or directly to the hose. This allows you to clean upholstery, stairs, corners, and high surfaces effectively.



Image: The Dirt Devil Endura Max XL vacuum cleaner with its quick-release extension wand and hose extended, demonstrating its reach for cleaning high or difficult-to-access areas.

Video: A complete review of the Dirt Devil vacuum, highlighting its features and performance in various cleaning scenarios.

MAINTENANCE

Emptying the XL Dirt Cup

The XL dirt cup is designed for easy, one-touch release. To empty, simply press the release button located on the dirt cup, hold it over a trash receptacle, and allow the contents to fall out. Close the cup securely before reattaching to the vacuum.

Image: A person demonstrating the one-touch release mechanism of the XL dirt cup, emptying collected debris into a trash bin.

Cleaning the Endura Filtration System

The Endura filtration system helps maintain powerful suction. Regularly check and clean the filters to ensure optimal performance. The filters are rinsable; remove them from the dirt cup and rinse under running water until clean. Allow them to air dry completely before reinserting.



Image: A hand rinsing the vacuum's filter under running water, illustrating the easy cleaning process for the Endura filtration system.



Image: A diagram illustrating the components of the Endura Filtration System, including the rinsable filter and odor trapping filter, designed for advanced performance.

TROUBLESHOOTING

- Loss of Suction:** Check the dirt cup to ensure it is not full. Empty if necessary. Inspect filters for clogs and clean as per maintenance instructions. Verify all hose connections are secure.
- Brush Roll Not Spinning:** Ensure the vacuum is in the correct floor height setting for your surface. Check for any obstructions (hair, debris) wrapped around the brush roll and remove them.
- Vacuum Not Turning On:** Confirm the power cord is securely plugged into a working outlet. Check the power switch for proper engagement.

SPECIFICATIONS

Feature	Specification
Brand	Dirt Devil
Model Name	Endura Max XL

Item Model Number	UD70182
Special Feature	Bagless, Endura Filtration System, Large Dirt Cup, Quick Release Extension Wand
Filter Type	Disk
Included Components	Brush, Crevice Tool
Power Source	Corded Electric
Capacity	2 Liters
Wattage	1200 watts
Hose Length	12 Feet
Item Weight	13 pounds
Product Dimensions	14"L x 13"W x 45"H
Surface Recommendation	Upholstery, Hard Floor, Carpet, Stairs

WARRANTY & SUPPORT

This Dirt Devil Endura Max XL Upright Bagless Vacuum Cleaner comes with a **2-year limited warranty**. For warranty claims, technical support, or replacement parts, please visit the official Dirt Devil website or contact customer service using the information provided in your product packaging.