

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY Replacement Remote Control for ELEMENT JX-8036A and Compatible TV Models

ECONTROLLY RCEC-ELEMENT3

ECONTROLLY Replacement Remote Control Instruction Manual

Model: RCEC-ELEMENT3 | Brand: ECONTROLLY

INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY Replacement Remote Control, model RCEC-ELEMENT3. This remote is designed to be compatible with various ELEMENT brand television models. Please read this manual thoroughly before use to ensure proper operation and to maximize your experience.

PACKAGE CONTENTS

- 1 x ECONTROLLY Replacement Remote Control (Model: RCEC-ELEMENT3)

SETUP

1. Battery Installation

The remote control requires two (2) AAA alkaline batteries for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating the correct orientation for AAA battery insertion.

2. Initial Use

This ECONTROLLY replacement remote control is pre-programmed for compatible ELEMENT TV models. No additional programming or setup is required. Once batteries are installed, the remote is ready for immediate use with your television.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control. The following section describes the primary

functions of each button.

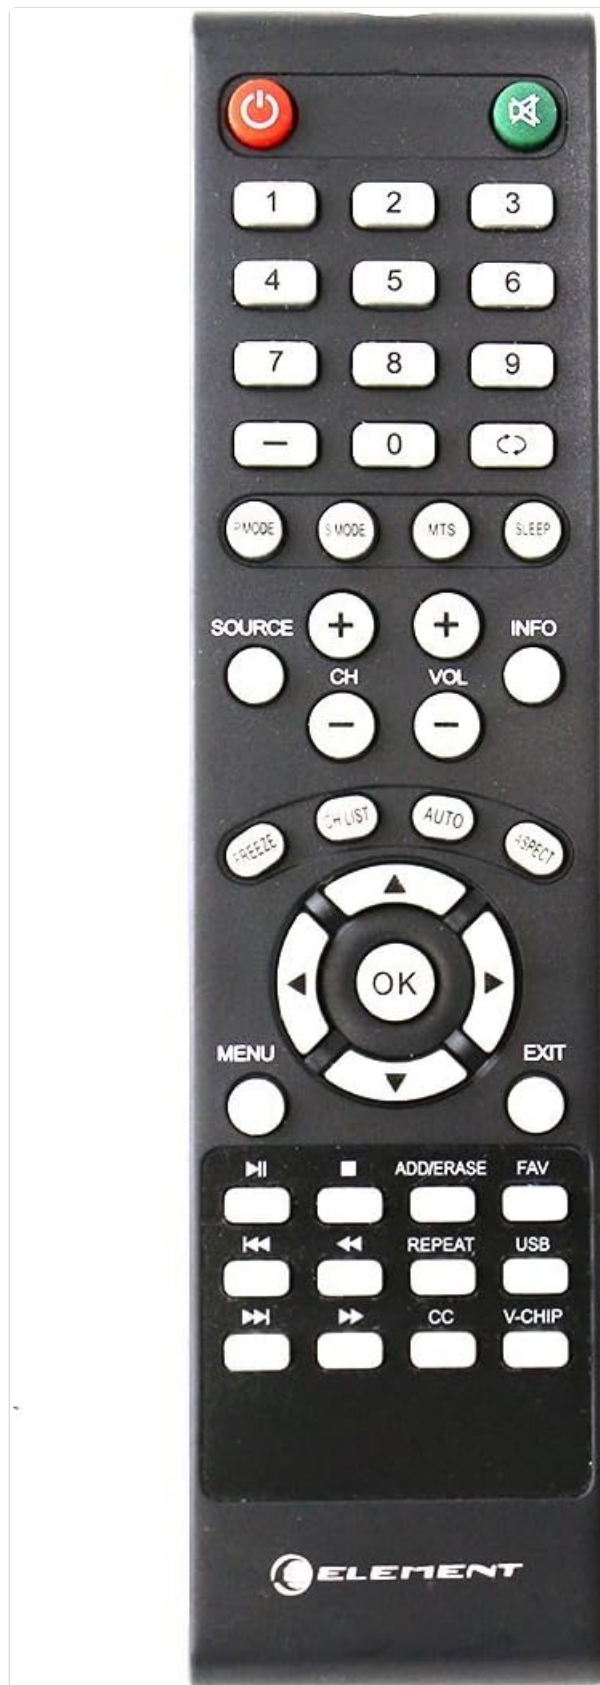


Image: Front view of the remote control, showing the layout of all functional buttons.

Power (Red Button): Turns the television on or off.

Number Buttons (0-9): Used to directly select channels or input numerical values.

CH +/- (Channel Up/Down): Navigates through channels sequentially.

VOL +/- (Volume Up/Down): Adjusts the audio volume level.

Mute: Silences or restores the television audio.

Source: Cycles through available input sources (e.g., HDMI 1, AV, Component).

Navigation Pad (Up, Down, Left, Right, OK): Used to navigate menus and confirm selections.

Menu: Opens the television's main menu for settings and options.

Exit: Closes the current menu or on-screen display.

Info: Displays information about the current program or input.

Aspect: Changes the screen aspect ratio.

Sleep: Sets a timer for the television to automatically turn off.

MTS: Selects Multi-channel Television Sound options (e.g., Stereo, SAP).

Freeze: Pauses the current video frame.

CH List: Displays the channel list.

Auto: Initiates automatic channel scanning.

Add/Erase: Manages favorite channels.

Fav: Accesses favorite channels.

Repeat: Repeats a media playback segment (if supported by the TV).

USB: Switches to USB input mode.

CC (Closed Caption): Toggles closed captions on or off.

V-Chip: Accesses V-Chip parental control settings.

MAINTENANCE

Cleaning

To maintain the remote control's appearance and functionality, wipe it regularly with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or chemical sprays, as these can damage the surface or internal components.

Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both AAA batteries at the same time with new alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace with fresh AAA alkaline batteries.

- **Line of Sight:** Make sure there is a clear line of sight between the remote control and the TV's infrared sensor. Obstructions can block the signal.
- **Distance:** Ensure you are within the effective operating range of the TV's IR receiver.
- **TV Power:** Confirm that the television is powered on and not in standby mode.

Limited Functionality

- **Compatibility:** While this remote is designed for many ELEMENT TVs, specific advanced functions may vary or not be supported on all models. Refer to your TV's original manual for model-specific features.
- **TV Settings:** Some functions might require specific settings within your TV's menu.

COMPATIBLE TV MODELS

This remote control is compatible with a wide range of ELEMENT TV models, including but not limited to:

- JX-8036A Version 3
- ELCFQ324N
- ELCFT194
- ELCFT262
- ELCFW324
- ELCFW324R
- ELCFW328
- ELCFW329
- ELDFC322
- ELDFC551J
- ELDFC601JA
- ELDFQ322
- ELDFQ501J
- ELDFT395J
- ELDFT404
- ELDFT456J
- ELDFT465J
- ELDFW322
- ELDFW374
- ELDFW406
- ELDFW407
- ELDFW464
- ELDFW501
- ELEFC242
- ELEFC321
- ELEFC401
- ELEFC461
- ELEFC463JA
- ELEFC701
- ELEFJ191
- ELEFJ243

- ELEFJ321
- ELEFJ391
- ELEFQ391J
- ELEFQ402
- ELEFQ462
- ELEFQ501J
- ELEFS241
- ELEFS321
- ELEFS421A
- ELEFT193
- ELEFT195
- ELEFT326
- ELEFT405
- ELEFT426
- ELEFT506
- ELEFT556
- ELEFW193
- ELEFW195
- ELEFW264
- ELEFW325
- ELEFW328
- ELEFW328R
- ELEFW401A
- ELEFW408
- ELEFW462
- ELEFW504A
- ELEFW605
- ELEFW606
- ELEFW705
- ELEFW5016
- ELGFT551
- ELGFT554
- ELGFW601
- LC22G77A / LC-22G77A
- LC26G77A / LC-26G77A
- LC32G85 / LC-32G85
- LC32GL12 / LC-32GL12
- LC39GJ01 / LC-39GJ01
- LC39GJ11 / LC-39GJ11
- LC40GL12 / LC-40GL12
- LC46G91 / LC-46G91
- LC50GL12 / LC-50GL12
- LC60G77A / LC-60G77A

- LE19GAK / LE-19GAK
- LE24GAK / LE-24GAK
- LE24GBRB / LE-24GBR-B
- LE28GA2 / LE-28GA2
- LE32GB5 / LE-32GB5
- LE50G77C / LE-50G77C
- LE55GA01 / LE-55GA01

SPECIFICATIONS

Technical Details

Model Number	RCEC-ELEMENT3
Brand	ECONTROLLY
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	1 ounces
Power Source	2 x AAA Batteries (not included)
Connectivity Technology	Infrared (IR)
Compatible Devices	Television
Max Number of Supported Devices	1

WARRANTY AND SUPPORT

Specific warranty information for this ECONTROLLY replacement remote control is not provided in the product details. For any inquiries regarding warranty or product support, please refer to the seller or manufacturer directly.

If you encounter issues not covered in this manual, please contact the retailer or manufacturer for assistance. When contacting support, please have your product model number (RCEC-ELEMENT3) and purchase information readily available.