

[Manuals.plus](#) /

› [KLARSTEIN](#) /

› Klarstein Amazonia Mini Dishwasher Instruction Manual - Model DSM-Amazonia-Mini-SL

KLARSTEIN DSM-Amazonia-Mini-SL

Klarstein Amazonia Mini Dishwasher Instruction Manual

Model: DSM-Amazonia-Mini-SL

1. INTRODUCTION

Thank you for choosing the Klarstein Amazonia Mini Dishwasher. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read these instructions thoroughly before use and retain them for future reference.



Image 1.1: Front view of the Klarstein Amazonia Mini Dishwasher.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to reduce the risk of fire, electric shock, injury, or damage when using this appliance.

- Read all instructions before using the dishwasher.
- Ensure the power supply matches the voltage specified on the rating plate.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children away from the dishwasher, especially when the door is open.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Do not open the door during operation, as hot water may spray out.
- Unplug the appliance before cleaning or maintenance.
- Do not operate the dishwasher if it is damaged or malfunctioning. Contact customer support.

3. PRODUCT OVERVIEW

3.1 Components

The Klarstein Amazonia Mini Dishwasher includes the following components:

- Dishwasher Unit
- Fruit Basket
- Baby Bottle Holder
- Cutlery Tray
- 2 x Hoses (Inlet and Drain)
- Funnel
- Multilingual User Manual (this document)



SPACIOUS YET COMPACT

Space for 2 place settings in a small amount of space

Image 3.1: Internal view with dish rack, cutlery tray, fruit basket, and baby bottle holder.

3.2 Key Features

- **Compact Design:** Ideal for small kitchens, apartments, or RVs.
- **2 Place Settings Capacity:** Accommodates dishes for two people.

- **6 Wash Programs:** Eco, 60 Minutes, Fast, Fruit, Hot Disinfection, Glass.
- **Low Water Consumption:** Requires only 5 liters of water per cycle.
- **LED Display & Touch Controls:** For easy program selection and monitoring.
- **360° Wash:** Thorough cleaning with spray arms above and below.
- **Drying Function:** Circulates fresh air to eliminate odors and dry dishes.



COMFORTABLE OPERATION

With LED display and touch control panel

Image 3.2: LED display and touch control panel.



360° WASH

Thorough cleaning with spray arms
on ceiling and floor



Image 3.3: Illustration of the 360° wash system with spray arms.

4. SETUP

4.1 Unpacking

Carefully remove the dishwasher from its packaging. Inspect for any damage during transit. Retain packaging materials for future transport if needed.

4.2 Placement

Place the dishwasher on a stable, level surface. Ensure there is adequate space around the unit for ventilation and door opening. This is a freestanding unit and does not require permanent installation.

4.3 Water Connection

The dishwasher can be operated in two ways:

1. **Manual Fill:** Pour 5 liters of water directly into the designated water inlet at the top of the unit using the provided funnel. The dishwasher will beep when the correct water level is reached.
2. **Direct Connection:** Connect the inlet hose to a water tap and the drain hose to a sink or bucket. Ensure all connections are secure to prevent leaks.



Image 4.1: Manual water filling process with funnel and hoses.

4.4 Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the outlet meets the appliance's power requirements (220 Volts, 700 Watts).

5. OPERATING INSTRUCTIONS

5.1 Loading Dishes

Arrange dishes in the rack, ensuring they do not block the spray arms. Place larger items towards the back and sides. Use the cutlery tray for silverware and the specialized baskets for fruit or baby bottles.



SPACIOUS YET COMPACT

Space for 2 place settings in a small amount of space

Image 5.1: Example of properly loaded dishes and accessories.

5.2 Adding Detergent

Add the recommended amount of dishwasher detergent to the dispenser. For optimal results, use detergent specifically formulated for automatic dishwashers. This model does not have a separate rinse aid dispenser; if desired, a small amount of liquid rinse aid can be added directly to the tub.

5.3 Starting a Wash Cycle

1. Close the dishwasher door securely.
2. Press the Power button to turn on the appliance.
3. Use the Program selection button to choose your desired wash cycle (P1-P6).
4. Press the Start/Pause button to begin the cycle.

5.4 Drying Function

After a wash cycle, the dishwasher automatically activates a drying function. This circulates fresh air to help dry dishes and prevent odors. The drying function typically runs for a period after the wash cycle completes.



DRYER FUNCTION

Circulation of fresh air eliminates
odours and dries dishes

Image 5.2: The dishwasher's integrated drying function.

6. WASH PROGRAMS

The Klarstein Amazonia Mini Dishwasher offers six distinct wash programs:



VARIOUS CLEANING PROGRAMMES

Eco, one hour, fast, fruit, hot disinfection and glass

Image 6.1: Examples of items suitable for various wash programs.

Program	Description	Approx. Duration	Water Usage
P1 Eco	Standard program for normally soiled dishes, energy-saving.	2 hours 40 minutes	5 Liters
P2 60 Minutes	For lightly soiled dishes requiring a quick wash.	1 hour	5 Liters
P3 Fast	Very quick wash for minimal soil, no drying.	30 minutes	5 Liters
P4 Fruit	Gentle wash for fruits and vegetables.	18 minutes	5 Liters
P5 Hot Disinfection	High-temperature wash for sterilizing baby bottles and heavily soiled items.	1 hour 50 minutes	5 Liters
P6 Glass	Delicate wash for glassware.	1 hour 20 minutes	5 Liters

7. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure optimal performance and longevity of your dishwasher.

7.1 Cleaning the Filters

The filter system prevents larger food particles from entering the pump. Clean the filters regularly (e.g., weekly) to prevent blockages and ensure efficient washing.

1. Turn off and unplug the dishwasher.
2. Remove the lower spray arm and then the filter assembly from the bottom of the tub.
3. Rinse the filters under running water to remove any trapped food particles. Use a soft brush if necessary.
4. Reassemble the filters and place them back into the dishwasher, ensuring they are securely locked in place.

7.2 Cleaning the Spray Arms

Check the spray arm nozzles for blockages. If clogged, remove the spray arms and clear the holes with a thin wire or toothpick. Rinse thoroughly and reattach.

7.3 Cleaning the Exterior and Interior

Wipe the exterior of the dishwasher with a damp cloth. For the interior, periodically run an empty cycle with a dishwasher cleaner to remove grease and limescale buildup.

8. TROUBLESHOOTING

Before contacting customer support, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Program not selected.	Ensure power cord is securely plugged in; Close the door firmly; Select a wash program and press Start.
Error Code "EF"	Water reservoir issue (e.g., not enough water, or sensor error).	Check water level and refill if necessary. If manually filling, ensure 5 liters are added. If connected to a tap, check water supply. Restart the dishwasher.
Dishes are not clean	Improper loading; Clogged spray arms; Insufficient detergent; Incorrect program.	Reload dishes ensuring spray arms are not blocked; Clean spray arm nozzles; Add correct amount of detergent; Select a more intensive wash program.
Water not draining	Clogged drain hose or filter; Drain hose kinked.	Clean the filter system; Check drain hose for kinks or blockages.
Excessive noise	Dishes rattling; Foreign object in pump; Dishwasher not level.	Rearrange dishes; Inspect pump area for foreign objects (after unplugging); Ensure dishwasher is on a level surface.

9. TECHNICAL SPECIFICATIONS

Specification	Value
Brand	KLARSTEIN

Specification	Value
Model Name	DSM-Amazonia-Mini
Model Number	DSM-Amazonia-Mini-SL
Form Factor	Freestanding
Capacity	2 Place Settings / 5 Liters
Product Dimensions (D x W x H)	21.65 x 22.05 x 20.87 inches (55 x 56 x 53 cm)
Item Weight	30.8 pounds (14 kg)
Voltage	220 Volts
Wattage	700 watts
Energy Consumption	0.43 Kilowatt Hours (per cycle)
Water Consumption	5 Liters (per cycle)
Number of Programs	6
Controls Type	Touch
Noise Level	58 Decibels
Material Type	Stainless Steel
Color	Metalic Silver
Special Features	Compact, Digital Display

10. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Klarstein website. Please have your model number (DSM-Amazonia-Mini-SL) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07G4B3Z7G>

More documents and user manuals: <https://manuals.plus/>