

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Mega Motion](#) /
- › [Mega Motion MM3250-PLA-A01 Polo Power Recline/Lift Chair User Manual](#)

Mega Motion MM3250-PLA-A01

Mega Motion MM3250-PLA-A01 Polo Power Recline/Lift Chair User Manual

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Mega Motion MM3250-PLA-A01 Polo Power Recline/Lift Chair. Please read this manual thoroughly before assembly, operation, or maintenance to ensure proper function and longevity of your product. Keep this manual for future reference.

2. SAFETY INFORMATION

Your safety and the safety of others are paramount. Observe all warnings and instructions.

- **Weight Limit:** Do not exceed the maximum occupant weight limit of **375 pounds (170 kg)**. Exceeding this limit can cause damage to the chair and potential injury.
- **Clearance:** Ensure a minimum reclined clearance distance of **16 inches (40.6 cm)** behind the chair to allow for full recline without obstruction.
- **Electrical Safety:** Always unplug the chair from the power outlet before cleaning or performing any maintenance. Keep liquids away from electrical components. Do not operate the chair with a damaged power cord or plug.
- **Children and Pets:** Keep children and pets away from the chair's moving parts. Do not allow them to play on or around the chair.
- **Proposition 65 Warning:** This product can expose you to chemicals including wood dust, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov.
- **Intended Use:** This chair is designed for personal use to assist with sitting, reclining, and standing. Do not use it for any other purpose.

3. PACKAGE CONTENTS

Carefully unpack all components and inspect for any damage. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Chair Base
- Backrest

- Handwand with USB Port
- Power Supply Cord
- Emergency Battery Backup (9V batteries not included)

4. SETUP

Assembly of your Mega Motion Polo Power Recline/Lift Chair is designed to be straightforward. Follow these steps:

1. **Unpack Components:** Remove all parts from the packaging. Place the chair base in the desired location, ensuring adequate clearance around the chair.
2. **Attach Backrest:** Align the metal receivers on the backrest with the posts on the chair base. Slide the backrest down firmly until it locks into place. You should hear a click.
3. **Connect Handwand:** Locate the handwand cable and connect it securely to the corresponding port on the chair's control box, usually located under the seat.
4. **Connect Power Supply:** Plug the power supply cord into the chair's control box, then plug the other end into a grounded electrical outlet.
5. **Install Emergency Battery Backup:** Open the battery compartment (typically located on the power transformer or control box) and insert two 9V batteries (not included). This feature provides a single-use lift function during a power outage.



Image: The Mega Motion Polo Power Recline/Lift Chair with its overall dimensions (34"W x 40.5"H x 36.5"D) clearly marked, illustrating the

chair's physical footprint for setup planning.

5. OPERATING INSTRUCTIONS

Your Mega Motion Polo Power Recline/Lift Chair features a simple handwand for easy control of its functions.

5.1 Handwand Operation

The handwand has intuitive buttons to control the chair's movement:

- **To Recline:** Press and hold the button with the 'recline' or 'down' arrow. The chair will smoothly move into a reclined position. Release the button when the desired angle is reached.
- **To Lift/Stand Assist:** Press and hold the button with the 'lift' or 'up' arrow. The chair will gently tilt forward and rise, assisting you to a standing position. Release the button when you are comfortable to stand.
- **To Return to Seated Position:** From a reclined position, press the 'up' arrow. From a lifted position, press the 'down' arrow.



Image: The Mega Motion Polo Power Recline/Lift Chair in its standard upright, seated position, showcasing the Lapis finish and the handwand resting on the seat.



Image: A user comfortably seated in the Mega Motion Polo Power Recline/Lift Chair, demonstrating the reclined position and the ease of use with the handwand.



Image: The Mega Motion Polo Power Recline/Lift Chair shown in a partially reclined position, illustrating the smooth transition and comfort provided by the power recline function.



Image: The Mega Motion Polo Power Recline/Lift Chair in its full lift assist position, demonstrating how it gently raises the user to an almost standing posture for easy egress.

5.2 USB Port

The handwand includes a convenient USB port for charging your mobile devices such as phones or tablets while you relax.

5.3 Emergency Battery Backup

In the event of a power outage, the installed 9V batteries (not included) will provide enough power for one full lift cycle to allow you to exit the chair. This is a single-use function for emergencies only. Replace batteries after use or annually.

6. MAINTENANCE

Proper care will extend the life of your chair.

- **Cleaning:** The fabric has a cleaning code 'W', meaning it should be cleaned with a **water-based cleaner**. Use a mild soap solution and a soft cloth. Do not saturate the fabric. Test in an inconspicuous area first.
- **Inspection:** Periodically check all connections and fasteners to ensure they are secure. Inspect the power cord for any damage.
- **Moving the Chair:** When moving the chair, always lift it rather than dragging it to prevent damage to the base and flooring.

7. TROUBLESHOOTING

If you experience issues with your chair, refer to the following common problems and solutions:

- **Chair Does Not Operate:**
 - Ensure the power cord is securely plugged into both the chair and a working electrical outlet.
 - Check if the handwand cable is firmly connected to the control box.
 - Verify that the wall outlet is functional by plugging in another appliance.
- **Chair Moves Slowly or Jerkily:**
 - Ensure the chair is not overloaded beyond its weight capacity.
 - Check for any obstructions around the chair's moving parts.
- **Emergency Battery Backup Not Working:**
 - Confirm that fresh 9V batteries are correctly installed in the battery compartment.
 - Remember this feature is for a single-use lift cycle during a power outage.

If these steps do not resolve the issue, please contact Mega Motion customer support for assistance.

8. SPECIFICATIONS

Detailed specifications for the Mega Motion MM3250-PLA-A01 Polo Power Recline/Lift Chair:

Feature	Specification
Model Number	MM3250-PLA-A01
Brand	Mega Motion
Color	Lapis
Overall Dimensions (W x H x D)	34" x 40.5" x 36.5"
Seat Dimensions (W x H x D)	22.5" x 20.5" x 20.5"
Weight Capacity	375 lbs (170 kg)

Feature	Specification
Ideal User Height	5'4" to 5'10"
Reclined Clearance Distance	16" (40.6 cm)
Reclining Positions	3 Position
Motor Type	Whisper Power motors
Frame Material	Heavy Duty all steel reclining/lift mechanism, furniture grade laminated wood and some solid wood components
Upholstery Material	Fabric (Lapis Finish)
Cleaning Code	W (Water-based cleaner)
Special Features	USB Port in Handwand, Emergency Battery Backup, Storage Pockets on both outside arm panels, Wider Seat Surface, Chaise Pad Construction
Item Weight	119 lbs (54 kg)
UPC	606509528191

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Mega Motion customer service directly. Refer to your purchase documentation for specific warranty terms and contact details. It is recommended to have your model number (MM3250-PLA-A01) and date of purchase available when contacting support.

© 2023 Mega Motion. All rights reserved.