

Mount-It! MI-376

Mount-It! No Stud TV Wall Mount User Manual

MODEL: MI-376

[Product Overview](#) [Safety Information](#) [Package Contents](#) [Setup Instructions](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. Product Overview

The Mount-It! No Stud TV Wall Mount (Model MI-376) offers a revolutionary way to hang your television without the need for drilling into wall studs. This innovative TV hanger is designed for most 40-80 inch televisions, supporting weights up to 110 lbs. Its unique design allows for easy installation directly onto drywall, functioning much like a picture frame hanger. The mount features universal VESA pattern compatibility, including 200x200, 300x200, 300x300, 400x200, 400x300, 400x400, and 600x400. It boasts a low-profile tilting design, keeping your TV close to the wall (1.2 inches away) while offering -5 or 0 degree tilt options for optimal viewing angles. The spring-loaded locks ensure quick and secure TV attachment and detachment.



Figure 1.1: The Mount-It! No Stud TV Wall Mount, showing the main wall plate, TV brackets, and included spacers.

2. Safety Information

WARNING: Failure to read and follow all instructions may result in property damage, personal injury, or death. If you do not understand these instructions or have doubts about the safety of the installation, contact a qualified installer or Mount-It! customer support.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 110 lbs (50 kg). This mount is designed for televisions between 40 and 80 inches. Exceeding the weight limit may result in instability causing possible injury.
- **Wall Type:** This mount is specifically designed for drywall installation. Do not install on plaster, concrete, brick, or other wall types without appropriate alternative hardware and professional consultation.
- **Installation Tools:** Use only the tools specified in the installation guide. Ensure all nails are fully hammered into the wall plate for secure attachment.

- **Children:** Keep children away from the installation area during setup. Do not allow children to play with the mount or attached television.
- **Regular Inspection:** Periodically check that the mount and TV are securely attached and that all fasteners are tight.

3. Package Contents

Verify that all components are present and undamaged before beginning installation. If any parts are missing or defective, contact Mount-It! customer service for assistance.



Figure 3.1: All hardware included with the Mount-It! No Stud TV Wall Mount, including the wall mount, TV bracket, various screws, nails, and spacers.

Included Components:

- Wall Mount Plate
- TV Bracket (Horizontal Mounting Plate)
- Various Screws (M-A, M-B, M-C, M-D, M-F, M-G)
- Nails for Drywall Installation
- Spacers (2 different sizes for tilt adjustment)
- Wall Anchors and Fasteners (for alternative mounting, if needed)
- Spring-loaded release cord

4. Setup Instructions

Follow these steps carefully to install your Mount-It! No Stud TV Wall Mount. It is recommended to have a second person assist with hanging the TV.

4.1. Mount Wall Plate to Drywall

1. **Position the Wall Mount:** Hold the wall mount plate against the desired location on your drywall. Ensure it is at the correct height for your TV.

NO STUDS NO DRILLING REQUIRED

HANGS LIKE A PICTURE FRAME



SECURELY MOUNTS ON DRYWALL USING NAILS

Figure 4.1.1: A person positioning the wall mount plate on the drywall, preparing to secure it.

2. **Nail in One End:** While maintaining your hand on the center base of the mount, nail in one end of the wall mount plate. This will temporarily secure it.



Figure 4.1.2: Close-up of a nail being hammered into the wall mount plate, securing it to the drywall. This mount requires no drilling into studs.

3. **Level the Mount:** Use a level (not included) to ensure the wall mount plate is perfectly horizontal. Adjust as needed.

QUICK AND EASY INSTALLATION

NAIL IN ONE END

*ADJUST LEVEL

NAIL IN OPPOSITE END



HAMMER IN REMAINING NAILS



* HAMMER AND LEVEL NOT INCLUDED

Figure 4.1.3: A person using a spirit level to ensure the wall mount is perfectly horizontal before fully securing it.

4. **Secure Remaining Nails:** Once leveled, hammer in the nail on the opposite end of the wall mount. Then, proceed to hammer in all remaining nails along the wall plate. Some nails may require more applied force to fully seat. Ensure all nails are flush with the mount.

MOUNTING YOUR TV

- 1 Attach TV Bracket
- 2 Attach Desired Spacers
- 3 Place TV onto Wall Mount
- 4 Pull Spring Locking Latch to Secure into Place



PLACE TV ONTO
WALL MOUNT



PULL SPRING LOCK
TO SECURE



Figure 4.1.4: A person hammering the remaining nails into the wall mount plate to fully secure it to the drywall. The mount is now

ready for the TV.

Note: This mount is designed for drywall installation and does not require drilling into studs. It hangs like a picture frame using multiple nails for secure support.

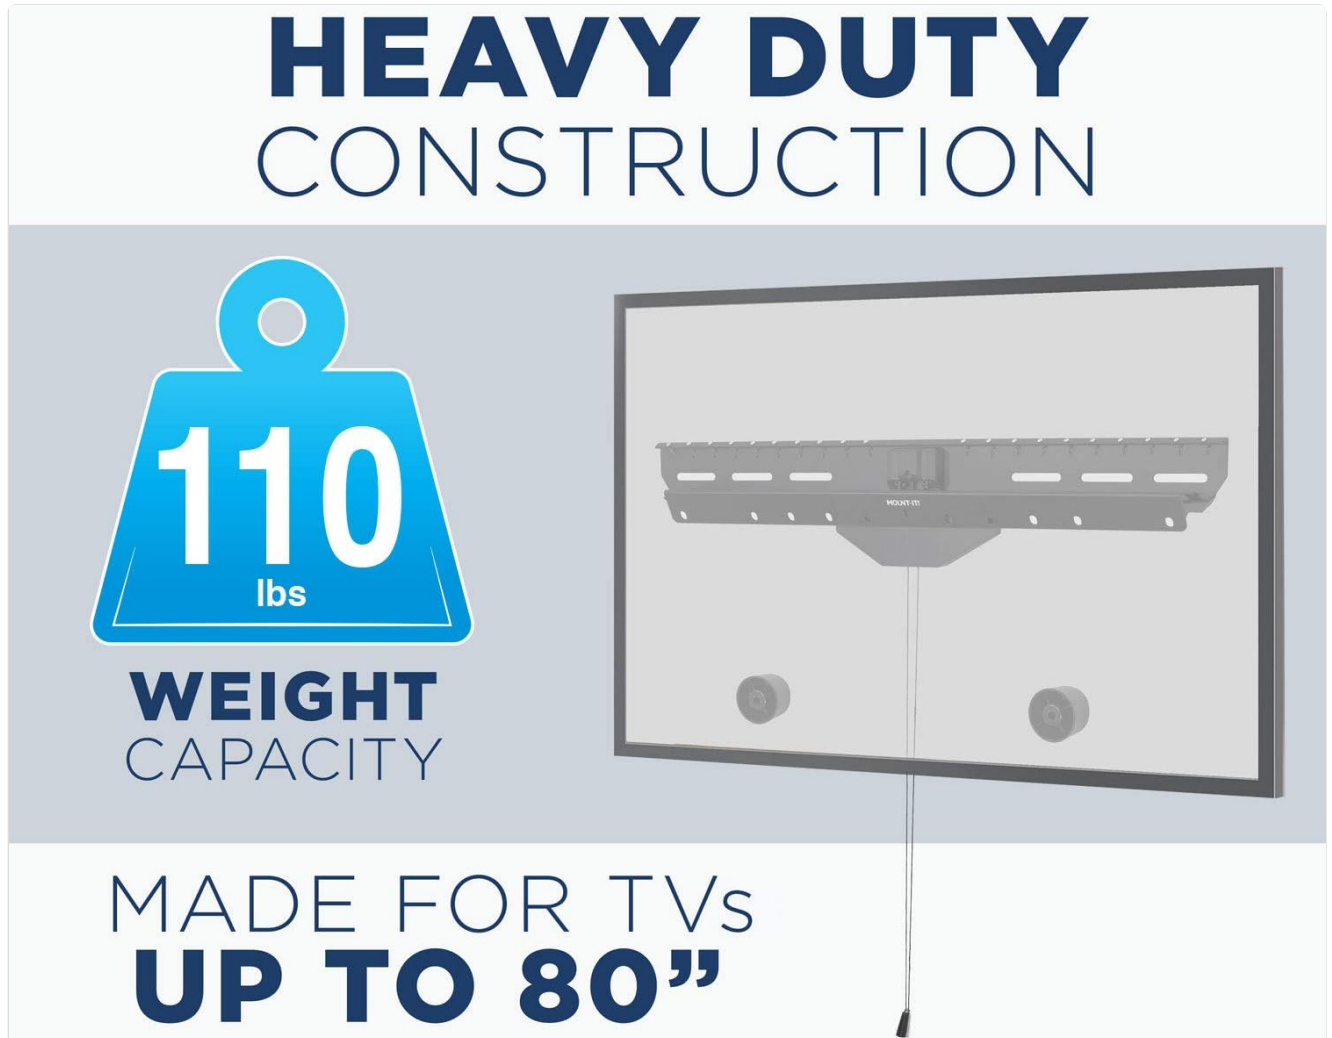


Figure 4.1.5: An illustration highlighting that no drilling or wall studs are required for the installation of this TV mount, emphasizing its ease of use.

4.2. Attach TV Bracket to Television

1. **Fasten VESA Bracket:** Place your TV face down on a soft, clean surface. Attach the horizontal TV bracket to the back of your TV using the appropriate screws from the included hardware kit. This mount fits VESA spacing 100mm, 200mm, 300mm, 400mm, and 600mm.

2 SETS OF SPACERS INCLUDED



CONNECT TO THE BACK OF YOUR TV

2 TILT SETTINGS 0° and -5°



Figure 4.2.1: A person fastening the VESA bracket to the back of a television using a screwdriver, ensuring it aligns with the TV's VESA mounting holes.

2. **Select Desired Spacers (for Tilt):** If you desire a tilt angle for your TV, attach the appropriate spacers to the lower VESA holes on your TV. The mount includes two sets of spacers: one for a 0-degree tilt (flush with the wall) and another for a -5-degree tilt.

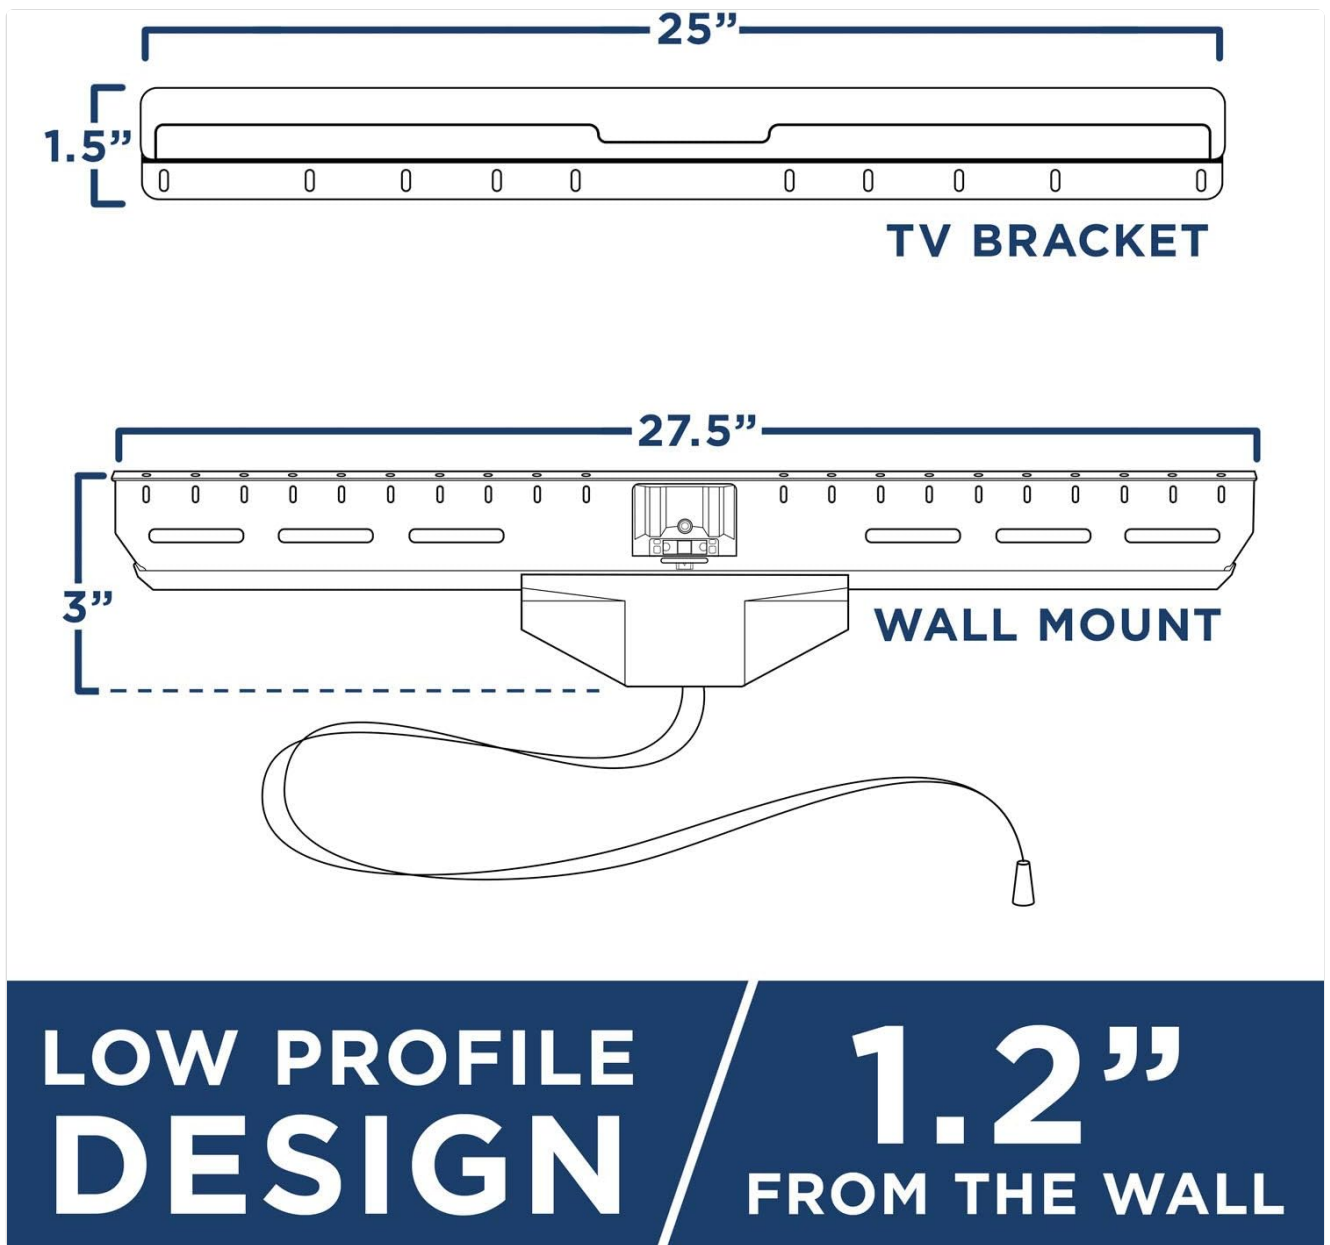


Figure 4.2.2: A person selecting and attaching the desired spacers to the lower VESA holes on the TV, which will determine the tilt angle of the mounted television.

4.3. Hang Television on Wall Mount

1. **Unlatch Spring Lock:** Before hanging the TV, pull the cord hanging from the wall mount to unlatch the spring lock mechanism. This prepares the mount to receive the TV bracket.

WILL THIS MOUNT FIT MY TV?

VESA COMPATIBLE
WITH THE FOLLOWING VESA SIZES:



VESA 100_{MM}

VESA 200_{MM}

VESA 300_{MM}

VESA 400_{MM}

VESA 600_{MM}

**IF YOUR TV'S MOUNTING
DIMENSIONS ARE NOT
SHOWN**

**DON'T WORRY
CHECK OUT ONE OF OUR
MANY OTHER TV MOUNTS!**

Figure 4.3.1: A person pulling the cord from the wall mount to unlatch the spring lock, which is necessary before hanging the television.

2. **Hang the TV:** With assistance, carefully lift the television and align the TV bracket with the wall mount. Gently lower the TV so the bracket hooks onto the wall mount.



Figure 4.3.2: Two individuals carefully lifting and hanging the television onto the installed wall mount, ensuring the TV bracket engages correctly with the mount.

3. **Secure the TV:** Once the TV is properly seated on the mount, pull the cord again to re-latch the spring lock. This will securely hold the TV in place.



Figure 4.3.3: A person pulling the cord to re-engage the spring lock, securing the television firmly to the wall mount.

Installation Video Guide:

Your browser does not support the video tag.

Video 4.3.4: Official installation guide for the Mount-It! No Stud TV Wall Mount. This video demonstrates the step-by-step process of mounting the unit and securing your television.

5. Operating Instructions

Once installed, the Mount-It! No Stud TV Wall Mount offers simple operation for viewing and maintenance.

5.1. Adjusting Tilt Angle

The tilt angle of your television is determined by the spacers used during installation. You can choose between a 0-degree tilt (TV flush with the wall) or a -5-degree tilt (TV angled slightly downwards). To change the tilt, you will need to unmount the TV, replace the spacers on the lower VESA holes, and then remount the TV.



Figure 5.1.1: Illustration showing the two available tilt settings (0° and -5°) and the corresponding spacers used to achieve them.

5.2. Quick Release Mechanism

The mount features a spring-loaded quick release mechanism. To temporarily unmount your TV (e.g., for cable access or moving), simply pull the hanging cord to unlatch the spring lock. This allows the TV to be lifted off the wall mount. To re-secure, place the TV back on the mount and pull the cord again to re-latch the spring lock.



Figure 5.2.1: Diagram illustrating the spring lock and quick release feature, which allows for easy and secure mounting or unmounting of the TV.

6. Maintenance

To ensure the longevity and safe operation of your Mount-It! No Stud TV Wall Mount, periodic maintenance is recommended:

- **Check Fasteners:** Every 6-12 months, visually inspect all nails and screws to ensure they remain tight and secure. If any appear loose, gently re-tighten them.
- **Clean Surfaces:** Use a soft, dry cloth to wipe down the mount and TV bracket to remove dust and debris. Avoid abrasive cleaners or solvents.
- **Inspect for Damage:** Check for any signs of wear, corrosion, or damage to the mount components. If any damage is observed, discontinue use and contact Mount-It! customer support.

7. Troubleshooting

If you encounter issues with your Mount-It! No Stud TV Wall Mount, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
TV is not level after installation.	Wall mount was not perfectly level during installation.	Carefully unmount the TV. Re-check the wall mount with a level and adjust by gently tapping the mount until level. Re-secure all nails.
TV feels unstable or loose on the mount.	Spring lock not fully engaged, or nails not fully seated.	Ensure the spring lock cord is pulled to secure the TV. Verify all nails are fully hammered into the wall plate. Ensure TV weight is within limits.
TV bracket does not fit the TV.	Incorrect VESA pattern or TV size.	Verify your TV's VESA pattern matches the mount's compatibility (100, 200, 300, 400, 600mm). Ensure your TV size is between 40-80 inches.
Cannot achieve desired tilt.	Incorrect spacers used or no spacers used.	Unmount the TV and ensure the correct spacers are attached to the lower VESA holes for either 0° or -5° tilt.

If the problem persists, please contact Mount-It! customer support for further assistance.

8. Specifications

Feature	Detail
Brand	Mount-It!
Model Number	MI-376
Item Weight	5.54 pounds
Product Dimensions	30.25 x 7.9 x 2 inches
Color	Grey
Material	Plastic
Mounting Type	Wall Mount (No Stud, Drywall)
Movement Type	Tilt
Maximum Compatible Size	80 Inches
Minimum Compatible Size	40 Inches
Maximum Weight Capacity	110 lbs
Compatible Devices	Television
Maximum Tilt Angle	5 Degrees (Adjustable to 0° or -5°)
VESA Compatibility	200x200, 300x200, 300x300, 400x200, 400x300, 400x400, 600x400

9. Warranty & Support

Specific warranty details for the Mount-It! No Stud TV Wall Mount (Model MI-376) are not provided in this manual. For warranty information, product support, or to inquire about replacement parts, please contact Mount-It! directly through their official website or customer service channels.




Documents - Mount-It! – MI-376



[\[pdf\]](#) User Manual Specifications Accessories Catalog

Product Catalog Mount It! Manual Height Range 12 17 75 Worksurface Size 31 5 x 21 6 Weight Capacity 44 lbs Material Steel Wood MI 7933 SPECIFICATIONS Lift Mechanism 2020 mount it pub media 2020 Product Catalog CONTENTS TV Articulating Mounts 4 Co ... 32 - 60 100x100 - 750x450 1 175 lbs Steel MI-305L 42 - 70 100x100 - 850x450 1 220 lbs Steel **MI-376** SPECIFICATIONS Screen Size VESA Compatible mm Tilt Profile Weight Capacity Material 37 - ... lang:en score:12 filesize: 24.9 M page_count: 113 document date: 2020-12-30

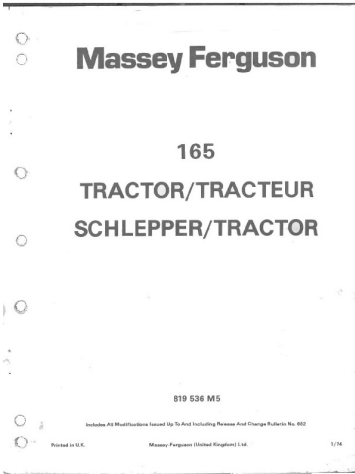

[\[pdf\]](#) User Manual Catalog

MF 165 Parts Manual Steve Massey Ferguson Tractor Catalog s361cdb04b9b96078 jimcontent version 1622801492 module 9978983286 name ||| o o Massey Ferguson 165 o TRACTOR/TRACTEUR o SCH LEPPER/TRACTOR o , , . ,. o O 819536 M5 Includ All Modifkationsl ..ued Up To And Including ReMa.. And Changa Bull.tin No. 682 Printed in U.K. M-f.rguton Untled Kingdom Ltd. - 1/14 ... o o GENERAL 1 N F O R H A T IO... lang:i-klngon score:11 filesize: 29.08 M page_count: 520 document date: 2021-06-04



[\[pdf\]](#) User Manual Owner's Manual Specifications Catalog

Untitled Unknown FORD FOCUS Owner s Manual CG3929en 202201 20220606124635

fordservicecontent Ford Content Catalog owner information |||

FORD FOCUS Owner s Manual The information contained in this publication was correct at the time of release. In the interest of continuous development, we reserve the right to change specifications, design or equipment at any time without notice or obligation. No part of this publication may be re...

lang:en **score:10** filesize: 8.84 M page_count: 622 document date: 2022-10-11



[\[pdf\]](#) User Manual Owner's Manual Specifications Catalog

Untitled Unknown FORD FOCUS Owner s manual CG3929en 202303 20230418120547

fordservicecontent Ford Content Catalog owner information |||

FORD FOCUS Owner s manual The information contained in this publication was correct at the time of release. In the interest of continuous development, we reserve the right to change specifications, design or equipment at any time without notice or obligation. No part of this publication may be re...

lang:en **score:10** filesize: 9.94 M page_count: 634 document date: 2023-05-15