

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [INTEMPO](#) /

> [Intempo Bluetooth Speaker with FM Radio and Leather Carry Strap, Model EE3332BLUSTKEU](#)

INTEMPO EE3332BLUSTKEU

Intempo Bluetooth Speaker with FM Radio

Model: EE3332BLUSTKEU

INTRODUCTION

Thank you for purchasing the Intempo Bluetooth Speaker with FM Radio. This manual provides important information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.



Figure 1: Front view of the Intempo Bluetooth Speaker.

IMPORTANT SAFETY INFORMATION

- Do not expose the unit to dripping or splashing liquids.
- Do not disassemble the unit. Repairs should only be performed by qualified personnel.
- Keep the unit away from direct sunlight, heat sources, and open flames.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only the charging cable provided or a certified equivalent.

PRODUCT OVERVIEW

The Intempo Bluetooth Speaker features a vintage design with modern functionality. It includes Bluetooth connectivity for wireless audio streaming, an FM radio tuner, and an auxiliary input for wired connections. A leather carry strap enhances portability.

intempo

Bluetooth PAIR & PLAY



((())) RADIO

2 IN 1
BLUETOOTH®
SPEAKER
WITH FM RADIO



Figure 2: Front panel showing speaker grille, FM tuning dial, and control knobs.



Figure 3: Rear panel with charging port, power switch, and extendable FM antenna.

SETUP

1. Charging the Speaker

1. Locate the Micro USB charging port on the rear of the speaker.
2. Connect the provided USB charging cable to the speaker's charging port.
3. Connect the other end of the USB cable to a suitable USB power adapter (not included) or a computer's USB port.
4. The charging indicator light will illuminate during charging and turn off once fully charged.

2. Powering On/Off

- To power on the speaker, slide the power switch located on the rear panel to the 'ON' position.
- To power off the speaker, slide the power switch to the 'OFF' position.

OPERATING INSTRUCTIONS

1. Bluetooth Mode

1. Power on the speaker. The speaker will automatically enter Bluetooth pairing mode, indicated by a flashing 'BT' indicator light.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select 'Intempo EE3332BLUSTKEU' from the list of devices.
4. Once paired, the 'BT' indicator light will become solid, and you will hear a confirmation tone.

5. You can now stream audio wirelessly from your device to the speaker.

2. FM Radio Mode

1. Extend the telescopic antenna on the rear of the speaker for optimal reception.
2. Rotate the function knob to select 'FM' mode. The 'AUX/FM' indicator light will illuminate.
3. Use the tuning dial on the front of the speaker to scan for FM radio stations.
4. Adjust the volume using the volume knob.



Figure 4: Close-up of the FM tuning dial for station selection.

3. Auxiliary Input (AUX) Mode

1. Connect one end of a 3.5mm audio cable (not included) to the AUX input port on the speaker.
2. Connect the other end of the audio cable to the headphone jack or audio output of your non-Bluetooth device.
3. Rotate the function knob to select 'AUX' mode. The 'AUX/FM' indicator light will illuminate.
4. Play audio from your connected device. Adjust the volume using the volume knob on the speaker and/or your connected device.

4. Volume Control

Rotate the volume knob on the front panel clockwise to increase the volume and counter-clockwise to decrease it.

MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, fully charge the speaker before first use and recharge it regularly, even if not in frequent use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker using the provided USB cable.
No sound.	Volume is too low or muted. Incorrect mode selected.	Increase volume. Ensure correct mode (Bluetooth, FM, AUX) is selected.
Cannot pair via Bluetooth.	Speaker is not in pairing mode. Device is too far.	Ensure speaker is in Bluetooth mode and indicator is flashing. Move device closer to speaker. Restart both devices.
Poor FM radio reception.	Antenna not extended or poor signal area.	Fully extend the telescopic antenna. Reposition the speaker for better reception.

SPECIFICATIONS

Feature	Detail
Brand	INTEMPO
Model Number	EE3332BLUSTKEU
Color	Blue
Product Dimensions (L x W x H)	21.6 x 8.9 x 15.1 cm
Item Weight	970 g
Power Output	5 Watts
Connectivity Technology	Bluetooth
Tuning Technology	FM
Supported Radio Bands	FM (88-108 MHz)
Features	Bluetooth, USB Port (for charging), Portable
Recommended Uses	Camping, Home, Travel

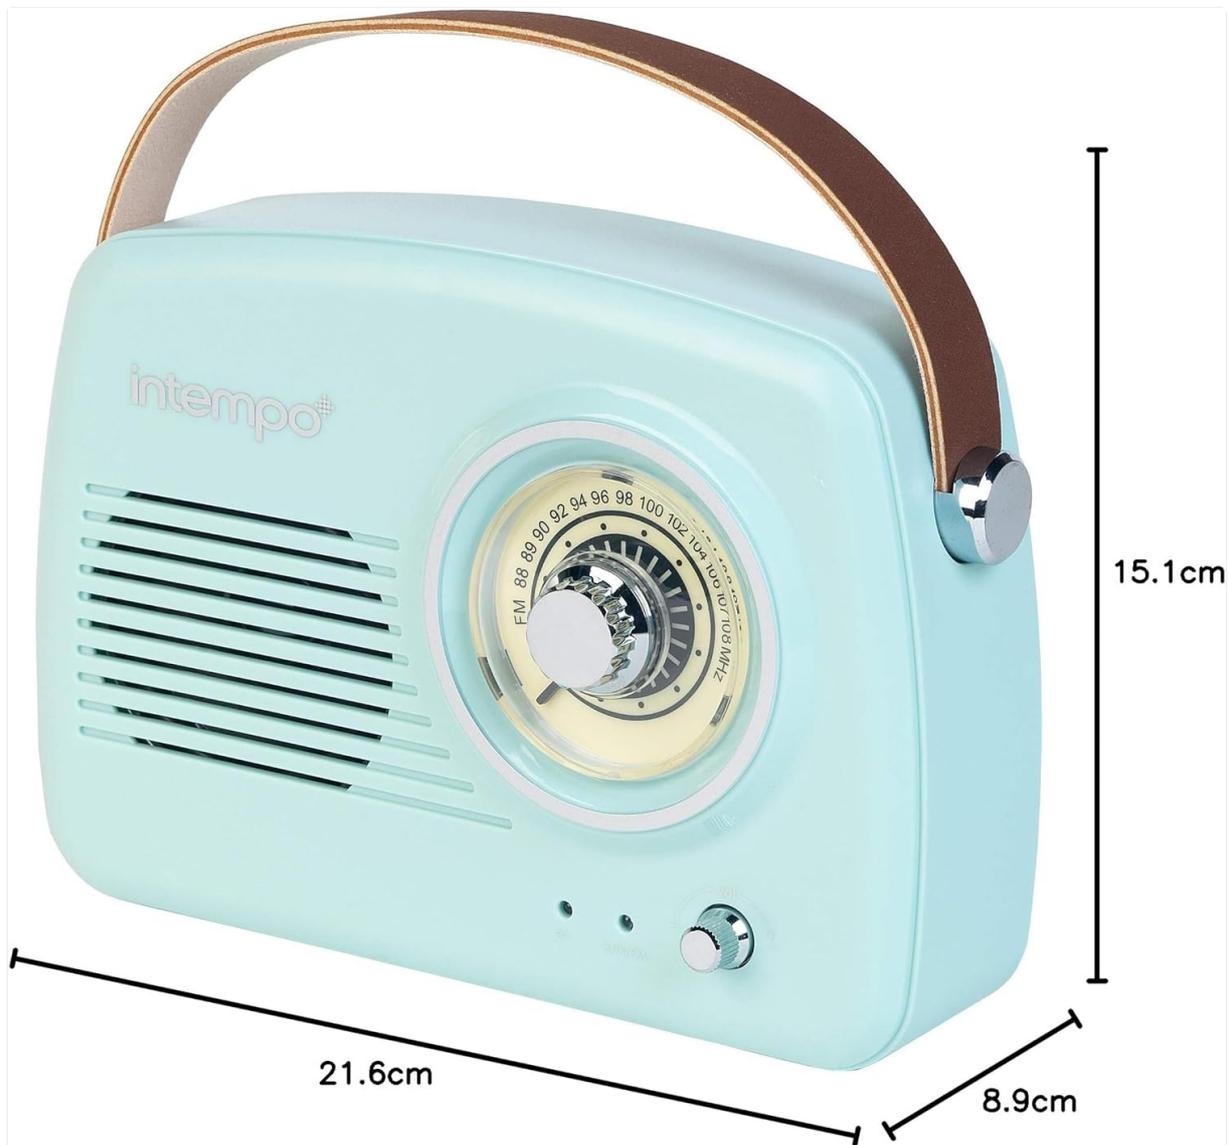


Figure 5: Product dimensions.

WARRANTY INFORMATION

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in the packaging for specific terms and conditions, including the warranty period and coverage details. Keep your proof of purchase for any warranty claims.

Information regarding the availability of spare parts for this product is currently unavailable.

CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Intempo customer support. Contact details can typically be found on the product packaging or the official Intempo website.

Online Support: Visit the official Intempo website for FAQs and support resources.

Email Support: Refer to your product documentation for the customer service email address.