

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY RM-ED053 Remote Control User Manual for Sony TV Models KDL-32W600A, KDL-24W605A, KDL-32EX653

ECONTROLLY RM-ED053

ECONTROLLY RM-ED053 Remote Control User Manual

For Sony TV Models KDL-32W600A, KDL-24W605A, KDL-32EX653

1. PRODUCT OVERVIEW

The ECONTROLLY RM-ED053 is a replacement remote control designed for various Sony TV models, including KDL-32W600A, KDL-24W605A, and KDL-32EX653. This remote functions as a direct replacement for the Sony RM-ED052 remote, offering immediate usability without the need for complex programming.

Key Features:

- Direct replacement for Sony RM-ED052 remote control.
- Compatible with Sony TV models KDL-32W600A, KDL-24W605A, KDL-32EX653.
- No programming or setup required; ready to use after battery installation.
- Powered by two AAA batteries (not included).



Figure 1: Front view of the ECONTROLLY RM-ED053 remote control, showing all buttons and their labels.

2. SETUP INSTRUCTIONS

To begin using your ECONTROLLY RM-ED053 remote control, follow these simple steps for battery installation:

1. **Locate the Battery Compartment:** Turn the remote control over. The battery compartment is located on the back of the unit.
2. **Open the Battery Cover:** Gently slide the battery compartment cover downwards or press the latch (if present) and

lift the cover off.

3. **Insert Batteries:** Insert two (2) AAA alkaline batteries into the compartment. Ensure that the positive (+) and negative (-) terminals of the batteries align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. **Close the Battery Cover:** Replace the battery compartment cover by sliding it back into place until it clicks securely.

Once the batteries are installed, the remote control is ready for immediate use with compatible Sony TV models. No additional programming or pairing is required.



Figure 2: Back view of the remote control with the battery compartment open, showing the correct orientation for AAA battery insertion.

3. OPERATING INSTRUCTIONS

The ECONTROLLY RM-ED053 remote control is designed to replicate the functionality of the original Sony RM-ED052 remote. All buttons correspond to their standard functions on compatible Sony televisions.

Basic Functions:

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Selects channels directly.
- **Channel Up/Down:** Navigates through channels sequentially.
- **Volume Up/Down:** Adjusts the television's volume.
- **Mute Button:** Silences the television audio.
- **Input/Source Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used for menu navigation and selection.
- **Menu/Home Button:** Accesses the TV's main menu or smart TV interface.
- **Return/Back Button:** Returns to the previous screen or menu.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain TV menus or applications, as indicated on the TV screen.

For detailed information on specific TV functions, refer to your Sony television's original user manual.

4. CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your remote control, please observe the following guidelines:

- **Cleaning:** Wipe the remote control periodically with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a dry place, away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.
- **Liquid Exposure:** Do not expose the remote control to water or other liquids.

5. TROUBLESHOOTING

If you encounter issues with your ECONTROLLY RM-ED053 remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Confirm that the TV is powered on and not in standby mode.
- **Specific Buttons Not Working:**

- Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be preventing proper contact.
 - If only a few buttons are unresponsive after cleaning and battery replacement, the remote may be faulty and require replacement.
- **TV Not Responding to Remote:**
- Verify that your TV model is listed as compatible (KDL-32W600A, KDL-24W605A, KDL-32EX653).
 - Test the remote with another compatible Sony TV if available, to determine if the issue is with the remote or the TV.
 - Ensure the TV's remote sensor is not blocked or damaged.

If these steps do not resolve the issue, contact the product vendor for further assistance.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	RM-ED053
Brand	ECONTROLLY
Compatible TV Models	Sony KDL-32W600A, KDL-24W605A, KDL-32EX653 (replaces RM-ED052)
Power Source	2 x AAA Batteries (not included)
Dimensions (L x W x H)	7 x 2 x 0.65 inches
Item Weight	1 ounce
Color	Black
Special Feature	Ergonomic design

7. WARRANTY AND SUPPORT

Specific warranty information for the ECONTROLLY RM-ED053 remote control is not provided in the product data. For details regarding warranty coverage, return policies, or technical support, please refer to the purchase documentation or contact the seller directly.

It is recommended to retain your proof of purchase for any warranty claims or support inquiries.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07G4TPQVC>

More documents and user manuals: **<https://manuals.plus/>**