

[Manuals.plus](#) /

> [maxtek](#) /

> maxtek Mobile Dry Erase Board (Model MPT-6090L) Instruction Manual

maxtek MPT-6090L

maxtek Mobile Dry Erase Board Instruction Manual

Model: MPT-6090L

Brand: maxtek

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your maxtek Mobile Dry Erase Board. Please read this manual thoroughly before use to ensure proper functionality and longevity of your product. Retain this manual for future reference.





Image 1.1: The maxtek Mobile Dry Erase Board, 40x28 inches, featuring a magnetic surface and an included flipchart paper pad.

2. PRODUCT FEATURES

- **Magnetic Dry Erase Surface:** The board features a high-end three-layered baking finish, making it solid, anti-scrap, and easy to dry wipe. It also provides a magnetic surface for attaching notes and accessories.
- **Integrated Flipchart Functionality:** Includes a flipchart paper pad (25 sheets, 34.25"x22.24") and movable flipchart hooks for easy attachment of paper.
- **Height Adjustable:** The board's height can be adjusted from 63 to 78.5 inches (160cm to 199.4cm) to suit various user preferences and environments. A built-in spring mechanism assists in height adjustment.
- **Mobile and Stable Design:** Equipped with 5 universal wheels for easy movement. The reinforced round base and locking casters ensure stability during use.
- **Accessory Tray:** A marker tray is integrated for convenient storage of dry-erase markers and erasers.
- **Durable Construction:** Features a heavy-duty steel frame and rounded ABS corners for enhanced durability and safety.

- **FSC Certified Components:** The corrugated cardboard inside the dry-erase board and the cork part are made of FSC-certified wood.

HEIGHT ADJUSTABLE

Build in Spring to Reduce the Impact of Gravity

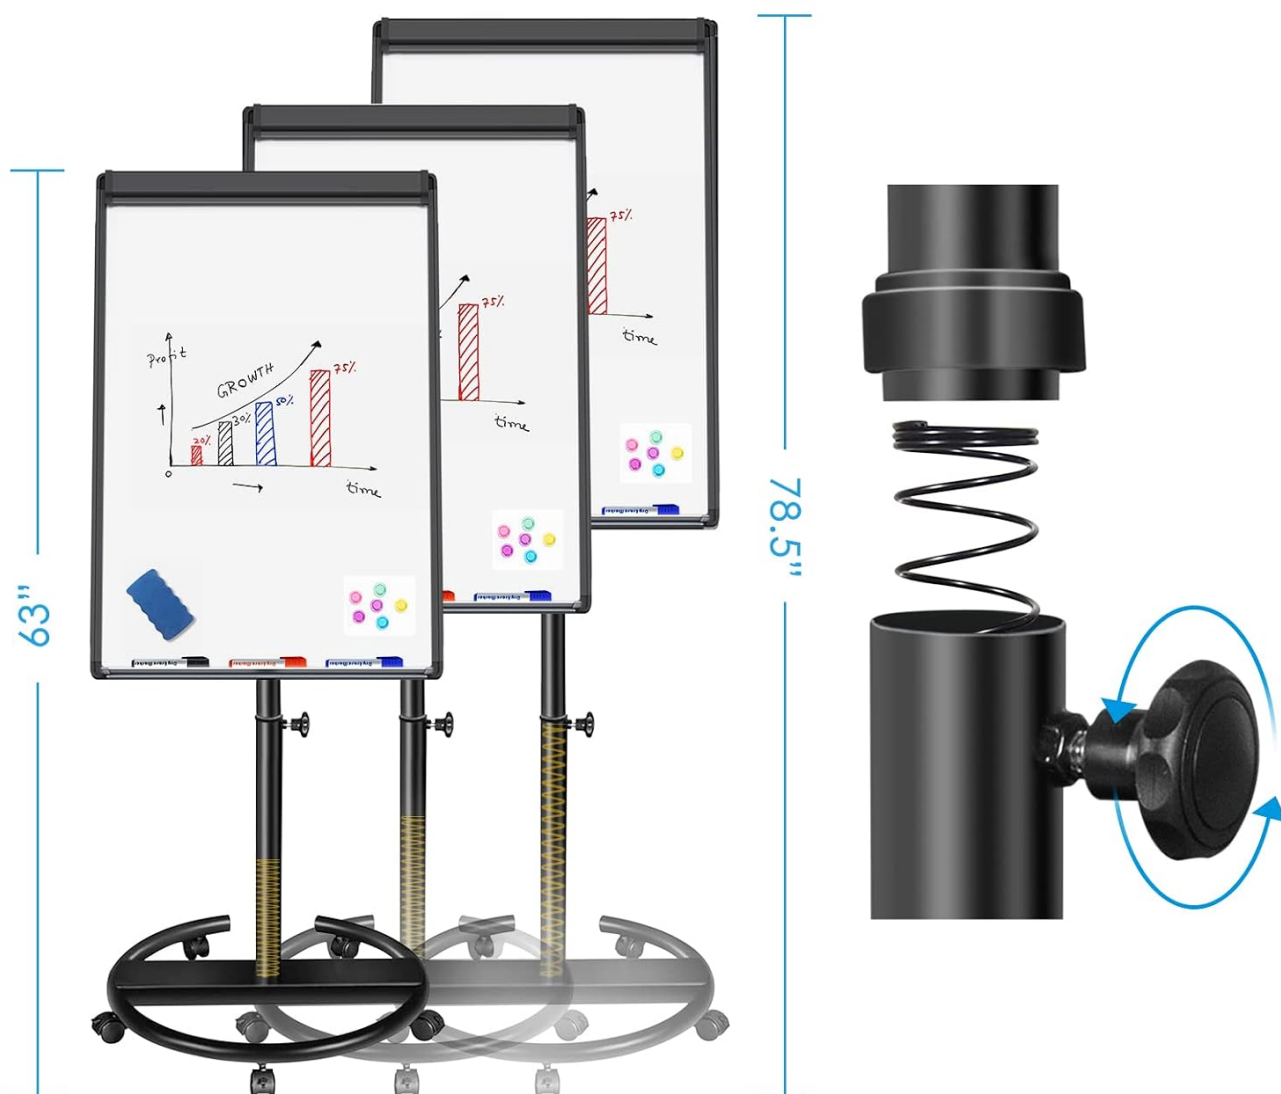


Image 2.1: Illustration of the board's adjustable height range (63 to 78.5 inches) and the internal spring for gravity impact reduction.



Image 2.2: Detail of the rounded ABS corners for safety and durability.



Image 2.3: View of the heavy metal back support for enhanced stability.

3. WHAT'S IN THE BOX

Upon unpacking, please verify that all components are present:

- maxtek Mobile Dry Erase Board
- Flipchart Paper Pad (25 sheets)
- Magnetic Accessories (Magnets)
- Dry Erase Duster
- Dry Erase Markers
- Marker Tray
- Assembly Hardware

4. SETUP INSTRUCTIONS

Follow these steps to assemble your maxtek Mobile Dry Erase Board:

1. **Unpack Components:** Carefully remove all parts from the packaging. Inspect for any damage.
2. **Assemble the Base:** Attach the vertical support pole to the circular base. Ensure all screws are tightened securely.
3. **Attach the Whiteboard:** Secure the whiteboard panel to the top of the vertical support pole. The back support should align with the board's frame.
4. **Install Accessory Tray:** Place the marker tray onto the designated area on the board's frame.
5. **Adjust Height:** Loosen the height adjustment knob on the vertical pole. Raise or lower the board to your desired height, then tighten the knob to secure it.
6. **Attach Flipchart Paper:** Position the flipchart paper pad onto the movable hooks at the top of the board. Use the steel elastic clamp to hold the paper securely.

Heavy Duty Steel Frame



Stable & Sturdy



Steel Tray



Image 4.1: Illustration of the heavy-duty steel frame and the steel tray for accessories.

Stable Round Base

Circular Tube



Wheel with lock



Image 4.2: The stable round base with locking wheels for mobility and security.



Image 4.3: Detail of the steel elastic clamp for securing flipchart paper.

5. OPERATING INSTRUCTIONS

5.1. Writing and Erasing

- Use only dry-erase markers on the whiteboard surface.
- To erase, use the provided dry-erase duster or a soft cloth. For best results, erase promptly after writing.

5.2. Using the Flipchart

- Once the flipchart paper is attached, you can write directly on the paper.
- To turn a page, simply lift the top sheet and fold it over the top bar.

5.3. Moving the Board

- To move the board, unlock the casters on the wheels by pressing down on the locking mechanism.
- Gently push the board to its desired location.
- Once in place, lock the casters to prevent unintended movement.

Durable Design & Easily Cleaned

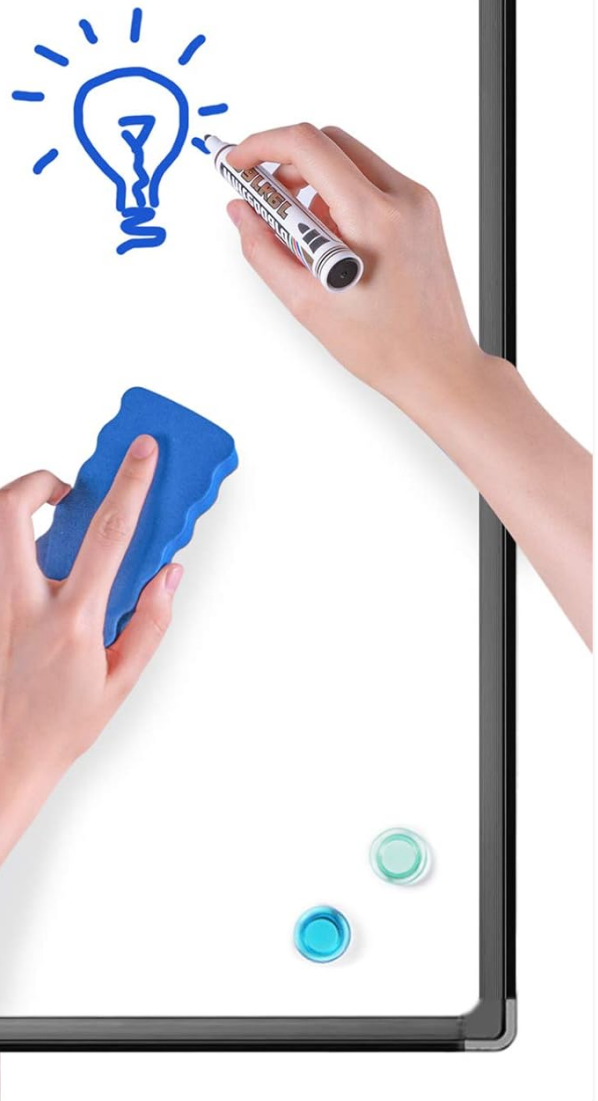
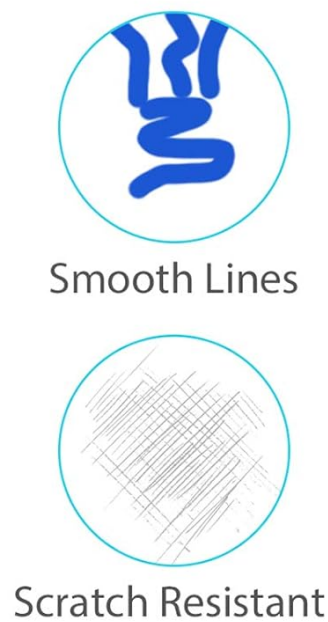


Image 5.1: Demonstrating the ease of writing and erasing on the durable, scratch-resistant surface.



Image 5.2: The board being moved, showcasing its portability on various floor types.

6. MAINTENANCE

6.1. Cleaning the Whiteboard Surface

- For daily cleaning, use a dry-erase duster or a soft, dry cloth.
- For stubborn marks or ghosting, use a specialized whiteboard cleaner or a damp cloth with mild soap. Avoid abrasive cleaners or harsh chemicals.
- Ensure the surface is completely dry before writing again.

6.2. General Care

- Regularly check all screws and connections to ensure they remain tight.
- Keep the wheels clean to ensure smooth movement.
- Store the board in a dry environment away from extreme temperatures.



Image 6.1: The stain-resistant baking finish ensures easy cleaning and prevents ghosting.

7. TROUBLESHOOTING

- **Board is unstable:** Ensure all assembly screws are tightened. Verify that the casters on the wheels are locked when the board is stationary.
- **Difficulty erasing:** Confirm that only dry-erase markers are being used. Clean the board with a specialized whiteboard cleaner if ghosting occurs.
- **Wheels not rolling smoothly:** Check for debris or hair caught in the wheels. Clean the wheels as necessary. Ensure casters are unlocked for movement.
- **Height adjustment is difficult:** Loosen the adjustment knob sufficiently. If resistance persists, check for any obstructions in the pole mechanism.

8. SPECIFICATIONS

Specification	Detail
Brand	maxtek
Model Number	MPT-6090L & MPT-7010GY
Item Weight	22 pounds
Product Dimensions	40 x 40 x 28 inches
Color	Black
Material Type	Aluminum
Number of Items	1
Size	28"W x 40"H
Ruling	Plain
Sheet Size (Flipchart)	34.25 x 22.24 Inches
Mounting Type	Floor Standing
Adjustable Height Range	63 to 78.5 inches

9. WARRANTY AND SUPPORT

maxtek products are designed for durability and performance. For specific warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official maxtek website. Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07G4YB3S3>

More documents and user manuals: <https://manuals.plus/>