

[Manuals.plus](#) /

› [Cricut](#) /

› Cricut EasyPress 2 Heat Press Machine (6" x 7") Instruction Manual

Cricut 2005430

Cricut EasyPress 2 Heat Press Machine (6" x 7") Instruction Manual

Brand: Cricut | Model: 2005430

INTRODUCTION

The Cricut EasyPress 2 (6" x 7") combines the speed of a heat press with the convenience of an iron, designed for professional-quality heat-transfer results. This compact and portable machine is ideal for small projects such as baby clothes, hats, accessories, and sublimation printing. It features precise temperature control up to 400°F (205°C) and a timer for customized heat application. Equipped with an insulated safety base and an auto-shutoff feature, it ensures safe operation. The advanced heat plate design with a ceramic-coated surface heats up quickly and provides even heat distribution for consistent results. It is compatible with most major brands of heat-transfer vinyl and all Infusible Ink products.

WHAT'S IN THE BOX

- Cricut EasyPress® 2, Raspberry - 6" x 7" (15 cm x 17.5 cm)
- Safety Base
- Welcome Book
- Materials for a practice project

SETUP

Before first use, ensure all packaging materials are removed. Place the Cricut EasyPress 2 on its insulated Safety Base on a flat, stable, heat-resistant surface. Plug the power cord into a grounded electrical outlet.

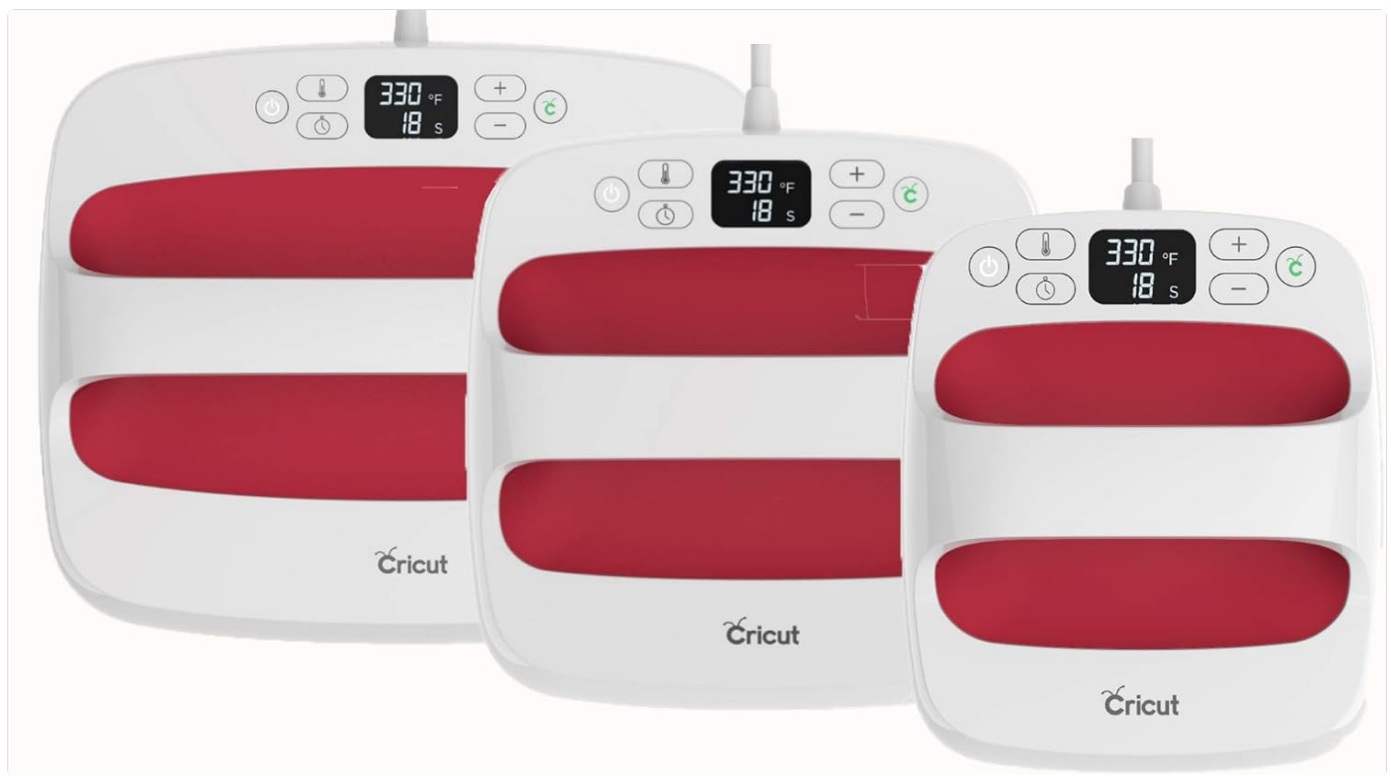


Figure 1: Cricut EasyPress 2 Heat Press Machine (6" x 7") with its insulated Safety Base. The machine is white with a raspberry-colored handle, and the base is dark gray with a perforated surface.

Your browser does not support the video tag.

Video 1: An unboxing and overview of the Cricut EasyPress 2, including its mat and carrying case. This video demonstrates the components included and how they fit together.

OPERATING INSTRUCTIONS

1. **Power On:** Press the Power button () to turn on the machine. The display will illuminate.
2. **Set Temperature:** Press the Temperature button () and use the Plus (+) or Minus (-) buttons to adjust to your desired temperature (up to 400°F / 205°C). The machine will begin heating and beep when the set temperature is reached.
3. **Set Time:** Press the Timer button () and use the Plus (+) or Minus (-) buttons to set the desired pressing time.
4. **Preheat Material:** Place your material (e.g., t-shirt) on a Cricut EasyPress Mat or a firm, flat, heat-resistant surface. Preheat the material for 5-10 seconds if recommended by your material's instructions.
5. **Apply Design:** Position your iron-on or Infusible Ink design onto the preheated material.
6. **Press:** Place the Cricut EasyPress 2 directly onto your design. Apply gentle pressure and press the Go button (). The timer will count down.
7. **Finish:** Once the timer beeps, lift the EasyPress 2 straight up and return it to its Safety Base. Allow the material to cool before peeling the liner, following your material's specific instructions (warm peel or cool peel).



Figure 2: A hand adjusting the temperature and time settings on the digital display of the Cricut EasyPress 2. The display shows "330°F" and "18s".

Your browser does not support the video tag.

Video 2: An official Cricut video demonstrating the use of the EasyPress 2, highlighting its features like precise temperature and time settings, even heat, and insulated safety base. It shows the machine being used on various projects.

MAINTENANCE

- Always allow the EasyPress 2 to cool completely on its Safety Base before storing.
- Clean the heat plate with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the machine in a dry, safe place away from children.

TROUBLESHOOTING

If you encounter issues with your Cricut EasyPress 2, consider the following:

- **Uneven Heat Transfer:** Ensure you are applying even, gentle pressure across the entire design. Verify the heat plate is clean and free of debris.
- **Design Not Sticking:** Double-check the recommended temperature and time settings for your specific material (HTV, Infusible Ink, etc.) and base material. Ensure the material is preheated correctly.
- **Machine Not Heating:** Verify the power cord is securely plugged into a working outlet. Ensure the Power button is pressed.

- **Auto-Shutoff:** The machine has an auto-shutoff feature that activates after 13 minutes of inactivity. Simply press the Power button to restart.

SPECIFICATIONS

Feature	Detail
Model Number	2005430
Product Dimensions	6" x 7" (15 cm x 17.5 cm) heat plate
Overall Dimensions	9.45 x 7.09 x 11.81 inches
Item Weight	0.085 ounces (2.4 Grams)
Upper Temperature Rating	400°F (205°C)
Voltage	120 Volts
Material	Iron (Ceramic-coated heat plate)
Color	Raspberry
Auto-Shutoff	Yes, after 13 minutes of inactivity

SAFETY INFORMATION

WARNING: This Cricut EasyPress™ operates at high temperatures that can cause burns or other injury. Use with extreme caution.

- Always place the machine on its insulated Safety Base when not in use.
- Do not leave the machine unattended while powered on.
- Keep out of reach of children and pets.
- Ensure proper ventilation when operating.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Cricut website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07G51F71X>

More documents and user manuals: **<https://manuals.plus/>**