

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Hoover](#) /

> [Hoover HNFLS G484TAH-84 Top-Load Washing Machine User Manual](#)

Hoover HNFLS G484TAH-84

Hoover HNFLS G484TAH-84 Top-Load Washing Machine User Manual

Model: HNFLS G484TAH-84

1. IMPORTANT SAFETY INFORMATION

Please read this manual carefully before using your washing machine. Keep it for future reference. Following these instructions will ensure safe operation and extend the life of your appliance.

- **Electrical Safety:** Ensure the washing machine is connected to a properly grounded power outlet. Do not use extension cords or adapters.
- **Water Connection:** Connect the water inlet hose securely to a cold water tap. Check for leaks before first use.
- **Children and Pets:** Keep children and pets away from the appliance during operation. Do not allow them to play with the controls.
- **Flammable Materials:** Do not wash items that have been cleaned, washed, soaked, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.).
- **Maintenance:** Always unplug the appliance before cleaning or performing any maintenance.

PROTECTIVE OUTER GRID

Safe for your kids and pets



Figure 1: Front view of the Hoover HNFLS G484TAH-84 Top-Load Washing Machine. This image shows the compact design and the control panel area.

2. SETUP AND INSTALLATION

Proper installation is crucial for the performance and safety of your washing machine.

2.1 Unpacking

- Remove all packaging materials, including the polystyrene base and any protective films.
- Check the appliance for any transport damage. If damaged, do not install or operate it, and contact your retailer.

2.2 Location

- Place the washing machine on a firm, level floor.
- Avoid direct sunlight or heat sources.
- Ensure adequate ventilation around the appliance.

2.3 Leveling

The washing machine must be perfectly level to prevent excessive vibration and noise during operation.

1. Use a spirit level to check the appliance's stability.
2. Adjust the adjustable feet at the bottom of the machine until it is level and stable.
3. Tighten the lock nuts on the feet to secure them in position.



Figure 2: Top view of the washing machine with the lid open, revealing the drum. This illustrates the top-load design for easy access.

2.4 Water Connection

- Connect the supplied inlet hose to the cold water tap. Ensure the connection is tight to prevent leaks.
- Place the drain hose into a standpipe or secure it over a sink, ensuring it is not kinked or submerged in water.

2.5 Electrical Connection

- Plug the power cord into a grounded electrical outlet.

- Ensure the voltage and frequency match the specifications on the rating plate of the appliance.

3. OPERATING INSTRUCTIONS

This section guides you through the daily operation of your Hoover washing machine.

3.1 Control Panel Overview

The control panel features a rotary knob for program selection and an LCD display for settings and status.



Figure 3: Detailed view of the washing machine's control panel. It shows the LCD screen, program selection dial, and various function buttons.

- **Program Selector Knob:** Turn to choose your desired wash program (e.g., Cotton, Synthetics, Delicates, Quick Wash).
- **LCD Display:** Shows program duration, selected options, and error codes.
- **Function Buttons:** Used to select additional options like temperature, spin speed, delay start, or extra rinse.

3.2 Loading Laundry

1. Open the top lid of the washing machine.
2. Load laundry loosely into the drum, ensuring not to overload. The maximum capacity is 8 kg.
3. Close the lid securely.

3.3 Adding Detergent and Softener

Use the detergent dispenser drawer, typically located on the top panel.

- **Compartment I:** For pre-wash detergent (if applicable).
- **Compartment II:** For main wash detergent.
- **Compartment III (Flower symbol):** For fabric softener. Do not exceed the MAX line.

3.4 Starting a Wash Cycle

1. Turn the program selector knob to choose the desired wash program.
2. Adjust temperature, spin speed, and other options using the function buttons as needed.
3. Press the "Start/Pause" button to begin the cycle.



Figure 4: Close-up of the detergent dispenser drawer. This image highlights the compartments for detergent and fabric softener.

4. MAINTENANCE AND CLEANING

Regular maintenance ensures your washing machine operates efficiently and prolongs its lifespan.

4.1 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

4.2 Cleaning the Detergent Dispenser

1. Pull out the detergent dispenser drawer completely.
2. Rinse it under running water to remove any detergent residue.
3. Clean the housing of the dispenser with a brush.
4. Reinsert the dispenser drawer.

4.3 Cleaning the Drain Filter

The drain filter should be cleaned periodically to prevent blockages.

1. Place a shallow container under the filter cover to collect any residual water.
2. Carefully open the filter cover (usually located at the bottom front of the machine).
3. Unscrew the filter slowly to allow water to drain.
4. Remove any lint, coins, or foreign objects from the filter.
5. Rinse the filter under running water and screw it back in securely.
6. Close the filter cover.



Figure 5: Interior view of the washing machine drum. This image shows the stainless steel drum designed for efficient washing.

5. TROUBLESHOOTING

Before contacting customer service, please refer to this section for solutions to common issues.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; door not closed properly; "Start/Pause" button not pressed.	Check power connection; ensure lid is fully closed; press "Start/Pause".
No water filling	Water tap closed; inlet hose kinked; water supply cut off.	Open water tap; straighten hose; check household water supply.
Water not draining	Drain hose kinked or blocked; drain filter clogged.	Straighten drain hose; clean drain filter (refer to Section 4.3).
Excessive vibration/noise	Machine not level; transport bolts not removed; uneven load.	Adjust leveling feet (refer to Section 2.3); ensure transport bolts are removed; redistribute laundry.
Error code on display	Specific issue indicated by code.	Refer to the full user manual (if provided separately) for a list of error codes and their solutions. Common codes relate to water supply, drainage, or door lock.

6. SPECIFICATIONS

Key technical specifications for the Hoover HNFLS G484TAH-84 washing machine.

Brand: Hoover

Model Number: HNFLS G484TAH-84 (Internal Reference: 31008298)

Type: Top-Load Washing Machine

Capacity: 8 kg (50 Litres)

Maximum Spin Speed: 1400 rpm

Energy Efficiency Class: A+++

Dimensions (L x W x H): 40 x 60 x 86.5 cm

Weight: 56.5 kg

Noise Level (Washing): 51 Decibels

Control Type: Rotary knob, LCD display, Buttons

ASIN: B07G5LSJ7S

First Available Date: 21 November 2018

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Hoover website or contact their customer service directly.

- **Official Website:** Visit www.hoover.fr (or your regional Hoover website) for detailed warranty terms, product registration, and service center locations.
- **Customer Service:** Contact Hoover customer support for technical assistance, spare parts, or to schedule a service appointment. Contact details are typically available on the official website or in the documentation provided with your appliance.
- **Product Registration:** Registering your product may provide additional benefits and streamline future support requests.

