

[Manuals.plus](#) /

› [Corbero](#) /

› Corbero CLA 6018 W Front Load Washing Machine User Manual

Corbero CLA6018W

Corbero CLA 6018 W Front Load Washing Machine User Manual

Model: CLA6018W

INTRODUCTION

This user manual provides essential information for the safe and efficient operation, installation, and maintenance of your Corbero CLA 6018 W Front Load Washing Machine. Please read this manual thoroughly before using the appliance and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the washing machine if the power cord or plug is damaged.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Unplug the appliance before cleaning or performing any maintenance.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your Corbero CLA 6018 W washing machine.



Figure 1: Front view of the Corbero CLA 6018 W washing machine.

This image displays the complete front panel of the washing machine, highlighting the central control knob, the digital display, the detergent dispenser drawer on the top left, and the large circular door for the drum.

Control Panel



Figure 2: Detailed view of the control panel.

The control panel features a large rotary knob for program selection, a digital display showing time and settings, and touch buttons for

temperature, spin speed, delayed start, rapid wash, and pause functions.

- **Program Selector Knob:** Used to select the desired wash program.
- **Digital Display:** Shows remaining time, error codes, and selected options.
- **Function Buttons:** For adjusting temperature, spin speed, delay start, and other options.
- **Detergent Dispenser Drawer:** Located on the top left, for adding detergent and fabric softener.
- **Drum Door:** Front-loading door for loading and unloading laundry.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials. Ensure no parts are missing or damaged. Keep packaging materials out of reach of children.

Removing Transport Bolts

Before operating the washing machine, it is crucial to remove the transport bolts located at the rear of the appliance. Failure to do so will cause severe vibration and damage during operation.

1. Locate the transport bolts on the back panel.
2. Use a wrench to loosen and remove all bolts.
3. Insert the plastic caps provided into the holes.

Positioning and Leveling

Place the washing machine on a firm, level surface. Adjust the leveling feet until the appliance is stable and does not rock.

Water Connection

- Connect the inlet hose to a cold water tap with a 3/4-inch thread.
- Connect the other end of the inlet hose to the water inlet valve on the back of the washing machine.
- Ensure all connections are tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.

Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications of your appliance.

OPERATING INSTRUCTIONS

Before First Use

Run an empty wash cycle with a small amount of detergent to clean the drum and remove any manufacturing residues.

Loading Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Open the drum door and load laundry loosely, ensuring not to overload the machine. The capacity is 6 kg.
- Close the drum door firmly.

Adding Detergent and Additives

Pull out the detergent dispenser drawer. Add appropriate amounts of detergent to the main wash compartment and fabric softener

to its designated compartment. Refer to detergent packaging for dosage recommendations.

Selecting a Wash Program

Turn the program selector knob to choose the desired wash program. The digital display will show the default settings for the selected program.

Table 1: Wash Programs Overview

Program	Description	Max Load	Max Temp
Cotton	For durable cottons, whites, and coloreds.	6 kg	90°C
Eco 20°C	Energy-saving program for lightly soiled cottons.	6 kg	20°C
Easy Care	For synthetic and mixed fabrics.	3 kg	60°C
Wool	Gentle wash for woolens.	2 kg	40°C
Rapid 15'	Quick wash for lightly soiled items.	1.5 kg	30°C
Daily 60'	Everyday wash for mixed loads.	3 kg	60°C
Shirts	Specific program for shirts.	2 kg	40°C
Mix	For mixed fabrics.	3 kg	40°C
Sport	For sportswear.	2 kg	30°C
Hand Wash / Delicate	For very delicate items.	1.5 kg	30°C
Spin	Separate spin cycle.	6 kg	-
Allergy Safe	Extra rinse for allergy sufferers.	6 kg	-
Rinse	Separate rinse cycle.	6 kg	-

Adjusting Settings

After selecting a program, you can adjust specific settings using the function buttons:

- **Temperature (Temp.):** Press to cycle through available temperature options.
- **Spin Speed (Essorage):** Press to select desired spin speed (e.g., 1000 RPM).
- **Delay Start (Départ Différé):** Press to set a delayed start time for the wash cycle.
- **Rapid Wash (Lavage Rapide):** Activates a shorter wash cycle for selected programs.
- **Pause (Départ Pause):** Pauses the current wash cycle. Press again to resume.

Starting a Wash Cycle

Once laundry is loaded, detergent added, and program/settings selected, press the Start/Pause button to begin the wash cycle.

End of Cycle

The machine will signal the end of the cycle. The door will unlock after a short delay. Remove laundry promptly to prevent wrinkles and odors.

MAINTENANCE AND CLEANING

Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Cleaning the Detergent Dispenser Drawer

Regularly remove and clean the detergent dispenser drawer to prevent detergent buildup. Rinse under running water and dry before reinserting.

Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot cotton wash without laundry) periodically to clean the drum and prevent odors.

Cleaning the Drain Filter

The drain filter should be cleaned regularly to ensure proper drainage and prevent blockages. This is typically located at the bottom front of the machine.



Figure 3: Location of the drain filter cover.

This image shows the lower right section of the washing machine's front, where a small circular cover conceals the drain filter. This filter should be accessed and cleaned periodically.

1. Open the cover at the bottom right of the machine.
2. Place a shallow container to catch any residual water.
3. Slowly unscrew the filter counter-clockwise.
4. Remove any lint, debris, or foreign objects.
5. Rinse the filter under running water.
6. Screw the filter back in clockwise and close the cover.

Care During Non-Use

If the machine will not be used for an extended period, unplug it, turn off the water supply, and leave the drum door slightly ajar to prevent odors.

TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions.

Table 2: Common Troubleshooting Guide

Problem	Possible Cause	Solution
Machine does not start	Not plugged in; Door not closed; Power outage; Program not selected.	Check power plug; Ensure door is firmly closed; Check household fuse/breaker; Select a program and press Start.
No water intake	Water tap closed; Inlet hose kinked; Water pressure too low.	Open water tap; Straighten hose; Check water supply pressure.
Water not draining	Drain hose kinked; Drain filter blocked; Drain pump fault.	Straighten hose; Clean drain filter (refer to Maintenance section); Contact service if issue persists.
Excessive vibration/noise	Transport bolts not removed; Machine not level; Uneven load.	Remove transport bolts; Adjust leveling feet; Redistribute laundry evenly in the drum.
Detergent residue in dispenser	Insufficient water pressure; Detergent buildup.	Check water pressure; Clean detergent dispenser drawer.

TECHNICAL SPECIFICATIONS

Table 3: Corbero CLA 6018 W Specifications

Feature	Specification
Model	CLA6018W
Brand	Corbero
Type	Front Load Washing Machine
Capacity	6 Kilograms
Maximum Spin Speed	1000 RPM
Color	White
Product Depth	49.7 centimeters

Feature	Specification
Standard Cycles	15
Human Interface Input	Touch Screen
Display Type	LED
Energy Efficiency Class	A+++ (as per product description)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your appliance or visit the official Corbero website. Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer: CORBERO

ASIN: B07G5SXTBY

Product First Available: August 4, 2018

© 2024 Corbero. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question