

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Severin](#) /

› [Severin KA 4845 Drip Coffee Maker User Manual](#)

Severin KA 4845

Severin KA 4845 Drip Coffee Maker User Manual

Model: KA 4845

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. This appliance is intended for domestic use only.

- Always ensure the appliance is unplugged before cleaning or if a fault occurs.
- Do not immerse the appliance, power cord, or plug in water or any other liquids.
- Keep the appliance out of reach of children.
- Do not operate the appliance with a damaged cord or plug.
- Use only cold, fresh water in the water tank.
- Do not open the filter holder during the brewing cycle.

PRODUCT OVERVIEW

The Severin KA 4845 is a freestanding manual drip coffee maker designed for ease of use and consistent coffee brewing. It features a durable stainless steel and black finish, a thermos jug to keep coffee warm, and a transparent water level indicator.





Figure 1: Front view of the Severin KA 4845 Drip Coffee Maker, showing the stainless steel body, black accents, and the thermos jug in place.

Components:

- Water Tank with Level Indicator

- Swivel Filter Holder (for 1x4 paper filters)
- Thermos Jug with Screw Lid
- On/Off Switch with Indicator Light
- Aroma Selection Function

SETUP

1. **Unpacking:** Carefully remove all packaging materials. Retain packaging for future storage or transport if needed. Ensure all components are present and undamaged.
2. **Initial Cleaning:** Before first use, clean all removable parts (thermos jug, filter holder) with warm soapy water. Wipe the exterior of the appliance with a damp cloth. Do not immerse the main unit in water.
3. **Positioning:** Place the coffee maker on a stable, level, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.
4. **First Use (Cleaning Cycle):**
 - Fill the water tank with cold water up to the maximum mark (8 cups).
 - Place an empty paper filter (size 1x4) into the filter holder.
 - Place the thermos jug with its lid on the warming plate.
 - Plug the appliance into a suitable power outlet.
 - Press the On/Off switch to start the brewing cycle. Allow the full tank of water to run through without coffee grounds.
 - Discard the water and repeat this process once or twice to thoroughly clean the internal system and remove any manufacturing residues.

OPERATING INSTRUCTIONS

Brewing Coffee:

1. **Fill Water Tank:** Open the lid of the water tank. Fill the water tank with fresh, cold water up to the desired number of cups, using the transparent water level indicator on the side. The maximum capacity is 8 cups (1.92 L).



Figure 2: Close-up of the water level indicator, showing markings for cup measurements.



Figure 3: Illustrates pouring water into the coffee maker's water tank.

- 2. Insert Filter and Coffee Grounds:** Swivel out the filter holder. Insert a size 1x4 paper filter into the holder. Add the desired amount of ground coffee into the filter. A general guideline is one level tablespoon of coffee per cup, but adjust to your taste.



Figure 4: Shows the swivel filter holder open with a paper filter and ground coffee inside.

Close the filter holder securely.

3. **Place Thermos Jug:** Ensure the thermos jug is empty and its lid is properly screwed on. Place the jug firmly on the warming plate beneath the filter holder. The anti-drip valve will be pushed open by the jug's lid.



Figure 5: Demonstrates placing the thermos jug correctly onto the coffee maker's base.

4. **Start Brewing:** Plug the power cord into a suitable wall outlet. Press the On/Off switch located at the front base of the appliance. The indicator light will illuminate, signifying that the brewing process has started.



Figure 6: Close-up of the illuminated On/Off switch, indicating the brewing cycle is active.

5. **Aroma Selection:** This model features an aroma selection function to customize coffee strength. Adjust the setting as desired before brewing.
6. **After Brewing:** Once the brewing cycle is complete, the appliance will automatically switch off. The indicator light will extinguish. The thermos jug will keep the coffee warm for an extended period. To serve, simply lift the jug by its ergonomic handle.



Figure 7: Shows a hand holding the thermos jug by its handle, ready for serving.



Figure 8: A closer view of the ergonomic handle of the thermos jug.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your coffee maker.

1. Daily Cleaning:

- Always unplug the appliance and allow it to cool down completely before cleaning.
- Remove and discard the used paper filter and coffee grounds.
- Wash the swivel filter holder and the thermos jug (including its lid) with warm water and a mild dish soap. Rinse thoroughly and dry.
- Wipe the exterior of the coffee maker with a damp cloth. Do not use abrasive cleaners or scouring pads.

2. Descaling: Mineral deposits from water can build up over time, affecting performance and taste. Descale your coffee maker regularly, depending on water hardness and frequency of use (e.g., every 2-4 months).

- Use a commercially available descaling solution suitable for coffee makers, or a mixture of white vinegar and water (1 part vinegar to 2 parts water).
- Pour the descaling solution into the water tank.
- Place the empty thermos jug on the warming plate.

- Start a brewing cycle. If using vinegar, stop the cycle halfway through and let it sit for 15-30 minutes before resuming.
- After the cycle, discard the solution.
- Run 2-3 full cycles with fresh, cold water to rinse the system thoroughly and remove any residual descaling solution taste.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	Appliance not plugged in; On/Off switch not pressed; No water in tank.	Ensure power cord is securely plugged in. Press the On/Off switch. Fill water tank to desired level.
Coffee tastes weak.	Insufficient coffee grounds; Coffee too coarsely ground; Descaling needed.	Increase amount of coffee grounds. Use finer ground coffee. Perform a descaling cycle.
Coffee overflows from filter.	Too much coffee grounds; Filter holder not closed properly; Clogged filter.	Reduce coffee grounds. Ensure filter holder is securely closed. Use a new filter. Descale if necessary.
Coffee is not hot enough.	Thermos jug lid not sealed; Descaling needed.	Ensure thermos jug lid is tightly screwed on. Perform a descaling cycle.

SPECIFICATIONS

- **Model:** KA 4845
- **Brand:** Severin
- **Type:** Freestanding Manual Drip Coffee Maker
- **Capacity:** Up to 8 cups (1.92 Liters)
- **Power:** 1000 W
- **Voltage:** 230 Volts
- **Dimensions (D x W x H):** 9.06"D x 9.45"W x 7.87"H
- **Weight:** 5.27 pounds
- **Filter Type:** 1x4 Paper Filter
- **Coffee Input Type:** Ground Coffee
- **Color:** Black, Stainless Steel

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Severin website or contact their customer service department. Keep your proof of purchase for any warranty claims.

Severin Customer Service: Please visit www.severin.com for contact details and further assistance.

Additional protection plans may be available from your retailer.



Related Documents - KA 4845

 <p>SEVERIN</p> <p>ART.-NO. KA 4840 / KA 4845</p> <p>SEVERIN</p> <p>1. Einleitung 1 2. Sicherheitshinweise 2 3. Bedienung 3 4. Reinigung 4 5. Technische Daten 5</p>	<p>SEVERIN Filterkaffeemaschine KA 4840 / KA 4845 - Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für die SEVERIN Filterkaffeemaschine mit Thermokanne, Modelle KA 4840 und KA 4845. Enthält Sicherheitshinweise, Bedienung, Reinigung und technische Daten.</p>
 <p>SEVERIN</p> <p>SEVERIN</p> <p>piccola</p>	<p>SEVERIN Piccola Fully Automatic Coffee Maker Instruction Manual</p> <p>Comprehensive guide for the SEVERIN Piccola fully automatic coffee maker, covering setup, operation, maintenance, troubleshooting, and tips for optimal coffee enjoyment. Learn to brew perfect coffee and milk specialities.</p>
 <p>Safety.</p> <p>FILKA.</p> <p>SEVERIN</p>	<p>SEVERIN FILKA KA 4850/KA 4851 Coffee Maker Safety and Operating Instructions</p> <p>Comprehensive safety instructions, troubleshooting guide, and technical specifications for the SEVERIN FILKA KA 4850 and KA 4851 automatic filter coffee machines. Learn about proper usage, maintenance, and error codes.</p>
 <p>SEVERIN</p> <p>Friends for Life</p> <p>1910.016</p> <p>SEVERIN</p> <p>ART.-NO. KA 5829 / KA 5830</p> <p>1. Einleitung 1 2. Sicherheitshinweise 2 3. Bedienung 3 4. Reinigung 4 5. Technische Daten 5</p>	<p>SEVERIN Duo Coffee Maker KA 5829/KA 5830 User Manual</p> <p>Comprehensive user manual for the SEVERIN Duo Coffee Maker (KA 5829/KA 5830), covering setup, operation, safety, maintenance, descaling, and warranty information.</p>
 <p>SEVERIN</p> <p>SEVERIN</p> <p>ART.-NO. KA 4813</p> <p>1. Einleitung 1 2. Sicherheitshinweise 2 3. Bedienung 3 4. Reinigung 4 5. Technische Daten 5</p>	<p>SEVERIN KA 4813 Warranty Information and Claim Guide</p> <p>Detailed warranty terms and conditions for the SEVERIN KA 4813 filter coffee maker. Learn about your statutory rights, manufacturer warranty coverage, exclusions, and the process for making a warranty claim. Find contact information and support details on www.severin.com.</p>
 <p>SEVERIN</p> <p>MANUAL</p> <p>ART.-NO. KA 4852, 4851, 4851, 4852</p>	<p>SEVERIN Coffee Maker KA 4852 User Manual</p> <p>This user manual provides comprehensive instructions for operating, maintaining, and troubleshooting your SEVERIN KA 4852 coffee maker. Learn about setup, features, cleaning, and technical specifications.</p>