

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Remington](#) /
- › [Remington Smooth & Silky WSF5060 Women's Shaver User Manual](#)

## Remington WSF 5060

# Remington Smooth & Silky WSF5060 Women's Shaver User Manual

Model: WSF 5060

## PRODUCT OVERVIEW

The Remington Smooth & Silky WSF5060 is a battery-operated women's shaver designed for efficient and comfortable hair removal. It features a 2-sided intercept trimmer and a shearing foil, complemented by an aloe vera moisturizing strip for a smooth shaving experience across all body parts. This shaver is suitable for both wet and dry applications, offering versatility and convenience.



Image: Front view of the Remington Smooth & Silky WSF5060 women's shaver, showing its white and lavender design with the shaving head at the top.

### Key Features:

- 2-sided intercept trimmer with shearing foil for effective hair removal.
- Aloe vera moisturizing strip for a smooth and comfortable shave.
- Wet & Dry functionality for use in or out of the shower.
- Anti-slip grip for secure handling.
- Battery operated (2x AAA batteries included).
- Includes bikini comb attachment, beauty bag, and cleaning brush.

## **IMPORTANT SAFETY WARNINGS**

**Always read and follow all safety instructions provided in this manual before using the appliance to prevent risks of cuts, skin irritations, or other injuries.**

- Do not immerse the shaver in water for extended periods.
- Keep out of reach of children.
- Do not use if the shaving foil is damaged, as this may cause injury.
- Ensure hands are dry when inserting or removing batteries.
- Only use the shaver for its intended purpose as described in this manual.

## **SETUP AND BATTERY INSTALLATION**

Your Remington Smooth & Silky shaver requires 2 AAA batteries for operation. Please follow these steps for proper setup:

1. Locate the battery compartment cover on the handle of the shaver.
2. Gently twist or slide the cover to open the compartment.
3. Insert 2 new AAA batteries, ensuring the positive (+) and negative (-) ends align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.
5. Before first use, it is recommended to clean the shaving head as described in the "Maintenance" section.



Image: The Remington Smooth & Silky WSF5060 shaver shown in its retail packaging, highlighting its features and accessories.

## OPERATING INSTRUCTIONS

The WSF5060 shaver can be used for both wet and dry shaving. Choose the method that best suits your preference and skin type.

### Dry Shaving:

- Ensure your skin is clean and dry.
- Turn on the shaver using the power switch.
- Hold the shaver at a 90-degree angle to your skin.

- Gently glide the shaver against the direction of hair growth.
- Stretch the skin taut with your free hand to ensure a closer shave.

### **Wet Shaving:**

- The shaver is fully washable and can be used in the shower or bath.
- Apply your preferred shaving gel or foam to the area you wish to shave.
- Turn on the shaver.
- Glide the shaver over the skin, allowing the foam/gel to provide lubrication.
- Rinse the shaving head frequently under running water during use to remove hair and foam buildup.



Image: A person demonstrating the use of the Remington Smooth & Silky WSF5060 shaver on their leg, highlighting its ergonomic design for easy handling.

### **Using the Bikini Comb Attachment:**

- Ensure the shaver is turned off.

- Attach the bikini comb over the shaving head. It should click into place.
- Turn on the shaver and use it to trim longer hairs in sensitive areas before a closer shave, or for maintaining a specific length.
- Remove the comb after use by gently pulling it off.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your shaver.

1. **After Each Use:** Turn off the shaver. Remove the shaving head by pressing the release buttons (if applicable) or gently pulling it off. Tap out any loose hairs. Use the provided cleaning brush to brush away hairs from the foils and cutters.
2. **Wet Cleaning:** For a more thorough clean, the shaving head can be rinsed under warm running water. Do not use hot water as it may damage the foils.
3. **Drying:** Allow the shaving head and shaver body to air dry completely before reassembling or storing. Do not use a towel or cloth on the foils as this can damage them.
4. **Storage:** Store the shaver in a cool, dry place, preferably in its beauty bag, away from direct sunlight and moisture.
5. **Foil and Cutter Replacement:** Over time, the foils and cutters may wear down, affecting performance. Replace them when you notice a decrease in shaving efficiency. Replacement parts can be purchased from authorized Remington retailers.



Image: The Remington Smooth & Silky WSF5060 shaver held in a hand, illustrating its compact size and ease of grip for cleaning and handling.

## TROUBLESHOOTING

If you encounter any issues with your Remington Smooth & Silky WSF5060 shaver, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Shaver does not turn on.	Batteries are dead or incorrectly inserted.	Replace batteries with new ones, ensuring correct polarity (+/-).
Poor shaving performance.	Foil or cutters are dull/damaged, or shaver head is clogged with hair.	Clean the shaving head thoroughly. If performance does not improve, replace the foil and cutter assembly.

Problem	Possible Cause	Solution
Skin irritation after shaving.	Incorrect shaving technique, or sensitive skin.	Ensure you are shaving against the direction of hair growth and stretching the skin. Consider using a shaving gel for wet shaving. If irritation persists, consult a dermatologist.
Shaver makes unusual noise.	Hair caught in the mechanism, or damaged internal components.	Clean the shaver head thoroughly. If the noise persists, the unit may require professional inspection or replacement.

## PRODUCT SPECIFICATIONS

**Model Number:** WSF 5060

**Power Source:** 2 x AAA Batteries

**Battery Life:** Approximately 70 hours (depending on usage)

**Dimensions (L x W x H):** 13 x 16 x 6 cm

**Weight:** 320 Grams

**Color:** White with Lavender accents

**Blade Material:** Titanium

**Special Feature:** Anti-slip wet/dry shaver

**Included Components:** Shaver, Bikini Comb, Beauty Bag, Cleaning Brush, 2 AAA Batteries

## WARRANTY AND SUPPORT

Remington products are manufactured to the highest quality standards. This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.

For technical support, replacement parts, or further assistance, please visit the official Remington website or contact their customer service department. Contact information can typically be found on the product packaging or on the Remington brand website.

You can also visit the [Remington Brand Store on Amazon](#) for more information and product offerings.

© 2025 Remington. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.