

Kärcher 1.513 248.0

Kärcher SC 2 Deluxe EasyFix Steam Cleaner User Manual

Model: 1.513 248.0

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Kärcher SC 2 Deluxe EasyFix Steam Cleaner. This compact and powerful steam cleaner is designed for chemical-free cleaning of all hard surfaces throughout your home, utilizing steam to effectively remove dirt and grime.

Please read this manual thoroughly before first use and keep it for future reference.

2. SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, read all instructions carefully before operating this appliance.

- Always ensure the appliance is unplugged from the power outlet before filling with water, cleaning, or performing maintenance.
- Do not leave the appliance unattended when plugged in.
- Do not direct steam at people, animals, or electrical appliances. Steam is hot and can cause burns.
- Use only clean tap water. Do not add detergents, perfumes, or other chemicals to the water tank, as this can damage the appliance or create hazardous fumes.
- Keep the appliance out of reach of children.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance has been dropped or damaged.
- Always allow the appliance to cool down completely before storing.

3. PACKAGE CONTENTS

Carefully unpack all items and ensure you have received the following components:

- Kärcher SC 2 Deluxe EasyFix Steam Cleaner Unit
- EasyFix Floor Nozzle
- Microfibre Floor Cloth (for EasyFix floor nozzle)
- Hand Nozzle
- Microfibre Cover (for hand nozzle)
- Spot Jet Nozzle
- Round Brush
- Extension Tubes (2 x 0.5 m)
- Accessory Bag



An overhead view of the Kärcher SC 2 Deluxe EasyFix Steam Cleaner, its main yellow unit, and various black and white cleaning attachments including floor nozzle, hand nozzle, round brush, microfibre cloths, and extension tubes, all laid out on a white background.

4. SETUP

1. **Filling the Water Tank:** Ensure the appliance is unplugged. Unscrew the safety cap of the water tank. Fill the tank with up to 1 liter of clean tap water. Do not overfill. Screw the safety cap back on securely.
2. **Attaching Accessories:** Select the appropriate accessory for your cleaning task.
 - For floor cleaning, connect the extension tubes to the steam gun, then attach the EasyFix floor nozzle. Secure the microfibre floor cloth to the floor nozzle using the velcro system.
 - For smaller areas or specific tasks, attach the hand nozzle, spot jet nozzle, or round brush directly to the steam gun. For the hand nozzle, attach the microfibre cover.
3. **Connecting to Power:** Plug the power cord into a suitable 220 Volt grounded electrical outlet.

5. OPERATION

1. **Heating Up:** Once plugged in, the LED indicator on the device will light up red, indicating that the appliance is heating the water. This process typically takes a few minutes.
2. **Ready for Use:** When the LED indicator turns green, the steam cleaner is ready for operation.
3. **Steam Regulation:** The steam quantity can be regulated via a 2-level control on the steam gun. Select the desired steam intensity based on the surface and cleaning task.
4. **Applying Steam:** Press the steam trigger on the steam gun to release steam. Move the chosen accessory slowly over the surface to be cleaned.
5. **Refilling Water:** If steam production stops, the water tank is empty. Unplug the appliance, allow it to cool for a few minutes, then carefully unscrew the safety cap and refill with water.
6. **Switching Off:** After use, release the steam trigger, unplug the appliance from the power outlet, and allow it to cool down.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your steam cleaner.

- **Emptying the Water Tank:** After each use, and once the appliance has cooled, carefully empty any remaining water from the tank.
- **Cleaning Accessories:**
 - Microfibre cloths and covers can be washed in a washing machine at up to 60°C (140°F). Do not use fabric softener.
 - Wipe down plastic accessories (nozzles, brushes, floor tool) with a damp cloth.
- **Descaling:** Depending on your water hardness, periodic descaling of the boiler may be necessary. Refer to the Kärcher website or contact customer support for recommended descaling solutions and procedures.
- **Storage:** Store the appliance and its accessories in a dry, cool place, out of direct sunlight and away from freezing temperatures. Use the provided accessory bag for organized storage.

7. TROUBLESHOOTING

If you encounter issues with your Kärcher SC 2 Deluxe EasyFix Steam Cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank is empty; appliance not heated up; safety cap not fully closed; limescale buildup.	Refill water tank; wait for green LED; ensure safety cap is tight; descale the appliance.
LED indicator remains red.	Appliance is still heating up; insufficient water.	Wait for the LED to turn green; check water level and refill if necessary.
Water leaking from accessories.	Accessories not properly attached; seals are worn.	Ensure accessories are securely clicked into place; contact Kärcher support for replacement seals if needed.

If the problem persists after attempting these solutions, please contact Kärcher customer support.

8. SPECIFICATIONS

Feature	Detail
Model Name	SC 2 Deluxe EasyFix (1.513-243.0 / 1.513 248.0)
Brand	Kärcher
Wattage	1500 watts
Voltage	220 Volts
Tank Volume / Capacity	1 Liters
Steam Pressure	3.2 bar
Item Weight	4.25 Kilograms (9.35 pounds)
Product Dimensions (L x W x H)	19.49 x 10.59 x 12.68 inches
Special Features	LED Operating Mode Display, EasyFix Floor Cleaning System
Surface Recommendation	Floor
Form Factor	Canister
Power Source	Hand-operated

9. WARRANTY AND SUPPORT

Kärcher products are manufactured to high-quality standards and come with a manufacturer's warranty. Please refer to the warranty card included with your product or visit the official Kärcher website for detailed warranty terms and conditions specific to your region.

For technical support, spare parts, or service inquiries, please contact Kärcher customer service. Contact information can typically be found on the Kärcher website or in the documentation provided with your purchase.

Kärcher Official Website: www.kaercher.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question