

ECONTROLLY GXFA GXBD GXBM CS-90283-1T

ECONTROLLY 4-in-1 Replacement Remote Control GXFA GXBD GXBM CS-90283-1T User Manual

Model: GXFA GXBD GXBM CS-90283-1T

[Introduction](#) [Setup](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY 4-in-1 Replacement Remote Control, model GXFA GXBD GXBM CS-90283-1T. This remote is designed to replace original remote controls for various Sanyo TV models, including DP32242, DP55441, DP46142, DP40142, DP42142, DP32640, DP42740, DP42841, DP46841, DP50741, DP50842, DP24E14, DP42D24, DP50E44, DP55D44, DP58D34, DP65E34, DP39D14, FVD3924, FVF5044, DP26746, DP26647, DP42647, DP50747, DP42746, DP26647, DP50747, DP26647, DP42647, DP50747, DP42746, DP26647, DP50747, DP26648A, DP32648, DP37649, DP42848, DP46819, DP46848, DP50719, DP52848, HT27546, HT27547, HT32546, DP32640, DP42740, DP42841, DP46841, DP32642, and DP46812. It offers a straightforward setup process and requires no programming.



Figure 1: Front view of the remote control.

2. SETUP

The ECONTROLLY 4-in-1 Replacement Remote Control is designed for immediate use with compatible Sanyo TV models. No programming is required.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.



Figure 2: Battery compartment with batteries inserted.

Note: Always use new alkaline batteries for optimal performance. Do not mix old and new batteries, or different types of batteries.

3. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready to operate your compatible Sanyo TV. Point the remote control directly at the TV's infrared sensor.

3.1 Basic Functions

- **Power (●):** Turns the TV on or off.
- **Input:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **Number Buttons (0-9):** Directly select channels.
- **VOL (+/-):** Adjusts the volume level.
- **CH (+/-):** Changes the channel up or down.
- **Mute:** Mutes or unmutes the TV audio.

3.2 Navigation and Menu

- **Menu:** Opens the TV's main menu.
- **Arrow Buttons (Up, Down, Left, Right):** Navigate through menu options.
- **ENTER:** Confirms a selection in the menu.
- **INFO:** Displays information about the current program or input.
- **EXIT:** Exits the current menu or on-screen display.

3.3 Special Functions

- **FAV:** Accesses favorite channels.
- **ECO:** Activates or deactivates power-saving modes.
- **RECALL:** Returns to the previously viewed channel.
- **RESET:** Resets certain TV settings (use with caution).
- **SLEEP:** Sets a sleep timer for the TV.
- **GUIDE:** Opens the electronic program guide (if available).
- **HELP:** Accesses the TV's help menu.
- **CAPTION:** Toggles closed captions on/off.
- **AUDIO:** Changes audio tracks or modes.
- **SUB CH:** Selects sub-channels.

4. MAINTENANCE

Proper care and maintenance will ensure the longevity of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote control to extreme temperatures, direct sunlight, or moisture.

5. TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote control does not work.	Batteries are dead or incorrectly inserted. Obstruction between remote and TV. Remote control is too far from the TV.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity. Remove any objects blocking the line of sight to the TV's IR sensor. Move closer to the TV (within 10 meters).
Remote control works intermittently.	Low battery power. Infrared sensor on TV is dirty or obstructed.	Replace batteries. Clean the TV's IR sensor.
Certain buttons do not respond.	Button malfunction. TV model incompatibility for specific advanced functions.	Ensure the remote is compatible with your specific TV model's functions. Contact customer support if basic functions are affected.

6. SPECIFICATIONS

Brand	ECONTROLLY
Model Name	GXFA GXBD GXBM CS-90283-1T
Compatible Devices	Sanyo Televisions (various models listed in Introduction)
Controller Type	Button Control
Color	Black
Special Feature	Ergonomic design
Maximum Range	10 Meters

Number of Batteries	2
Battery Type	AAA Alkaline
Item Weight	0.06 Pounds (approximately 27 grams)

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the seller or manufacturer's contact details provided at the point of purchase. Keep your purchase receipt as proof of purchase.

Manufacturer: ECONTROLLY Factory

© 2023 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B07G7TT1SJ>

More documents and user manuals: <https://manuals.plus/>