

ECONTROLLY RCEC-GJ220

Instruction Manual

ECONTROLLY GJ220 REMOTE CONTROL FOR SHARP TV

Model: RCEC-GJ220

1. Introduction

This manual provides instructions for the ECONTROLLY GJ220 Remote Control, designed as a replacement for various Sharp TV models. This remote control is compatible with Sharp TV models including LC-26LE320E, LC-32LE320E, LC-37LE320E, LC-42LE320E, LC-19LE320E, LC-22LE320E, LC19LE320E, LC32LE320E, LC37LE320E, LC42LE320E, LC22LE320E, and LC26LE320E. It requires no programming and is ready to use after battery installation.

2. Setup

2.1 BATTERY INSTALLATION

The GJ220 remote control operates on two (2) AAA alkaline batteries (not included). Follow these steps to install the batteries:

- 1. Locate the battery compartment on the back of the remote control.
- 2. Press down on the latch and slide the battery cover off.
- 3. Insert two AAA batteries, ensuring the positive (+) and negative (-) ends align correctly with the markings inside the compartment.
- 4. Slide the battery cover back into place until it clicks securely.

Note: This remote control does not require any programming or pairing. Once new alkaline batteries are installed, it is ready for immediate use with compatible Sharp TV models.

3. Operating the Remote Control

Familiarize yourself with the buttons and their functions on your GJ220 remote control. Below is an image of the remote, followed by a description of key button groups.



Figure 3.1: ECONTROLLY GJ220 Remote Control Layout

This image displays the full layout of the ECONTROLLY GJ220 remote control. It is a black remote with various function buttons, including number keys, navigation buttons, volume and channel controls, and special function keys for TV features like Teletext and Subtitle.

3.1 POWER AND INPUT BUTTONS

- **Power ():** Turns the TV on or off.

- **Input (⏏):** Selects the input source (e.g., HDMI, AV, Component).

3.2 NUMBER AND FUNCTION BUTTONS

- **0-9:** Directly select TV channels.
- **EPG:** Accesses the Electronic Program Guide.
- **PRE PR (Previous Program):** Switches to the previously viewed channel.

3.3 CHANNEL AND VOLUME CONTROLS

- **Volume Up/Down (+/-):** Adjusts the TV's volume level.
- **Mute (⏏):** Mutes or unmutes the TV's audio.
- **Channel Up/Down (P▲/P▼):** Changes the TV channel up or down.

3.4 NAVIGATION AND OK BUTTONS

- **Directional Arrows (▲ ▼ ◀ ▶):** Navigate through menus and options.
- **OK:** Confirms selections or enters menus.

3.5 MENU AND EXIT BUTTONS

- **MENU:** Opens the TV's main menu.
- **EXIT:** Closes the current menu or returns to the previous screen.

3.6 SPECIAL FUNCTION BUTTONS

- **DTV/ATV:** Switches between Digital TV and Analog TV modes.
- **PR LIST:** Displays the program list.
- **ECO:** Activates or deactivates power-saving mode.
- **i+ (Information):** Displays information about the current program.
- **AUDIO:** Adjusts audio settings or selects audio tracks.
- **VIDEO:** Adjusts video settings.
- **DUAL:** For dual audio/video functions.
- **ADJ (Adjust):** Used for various adjustment functions.
- **SLEEP:** Sets the sleep timer for the TV.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within menus or interactive services (e.g., Teletext, Smart TV features).
- **TELETEXT:** Activates Teletext mode.
- **SUBTITLE:** Toggles subtitles on/off or selects subtitle language.
- **SIZE:** Adjusts screen size or aspect ratio.
- **SUBPAGE:** Navigates through Teletext subpages.
- **INDEX:** Accesses the Teletext index page.
- **HOLD:** Holds the current Teletext page.

- **REVEAL:** Reveals hidden Teletext information.
- **FREEZE:** Freezes the current image.
- **Media Playback Controls** (, ,) :Control media playback (e.g., rewind, stop, play/pause, fast forward) if the TV supports it.

4. Maintenance

4.1 CLEANING THE REMOTE CONTROL

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

4.2 BATTERY CARE AND REPLACEMENT

- Replace batteries when the remote's response becomes sluggish or it stops functioning.
- Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- If the remote control will not be used for an extended period (e.g., one month or more), remove the batteries to prevent leakage and potential damage to the remote.
- Dispose of used batteries according to local regulations.

5. Troubleshooting

Problem	Possible Cause	Solution
Remote control is not working.	Batteries are dead or incorrectly installed.	Replace with new AAA alkaline batteries, ensuring correct polarity (+/-).
Remote control has short range or intermittent response.	Low batteries; Obstruction between remote and TV; Infrared sensor on TV is blocked.	Replace batteries. Ensure a clear line of sight between the remote and the TV's infrared sensor. Remove any obstructions.
Some buttons do not function.	Button stuck or damaged; TV model not fully compatible with all functions.	Check if the button is physically stuck. While this remote is widely compatible, some specific TV models may not support every single function button. Verify TV's original remote functionality for comparison.
TV does not respond to remote.	Remote is not compatible with the specific TV model; TV is off or unplugged.	Confirm your Sharp TV model is listed as compatible. Ensure the TV is powered on and plugged in. Try power cycling the TV.

6. Specifications

- **Model:** RCEC-GJ220
- **Brand:** ECONTROLLY
- **Compatible Devices:** Sharp Televisions (specific models listed in Introduction)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 7 x 2 x 0.65 inches (approximately)
- **Item Weight:** 1 ounce (approximately, without batteries)
- **Max Number of Supported Devices:** 1 (designed for one TV)
- **Special Feature:** Ergonomic design

7. Warranty and Support

Specific warranty information for this product is not provided in this manual. For any product-related inquiries, technical support, or warranty claims, please contact the seller or the manufacturer directly through the platform where the product was purchased.

Please refer to your purchase documentation for seller contact details or visit the ECONTROLLY brand page on the retailer's website for further assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B07G81FVKX>

More documents and user manuals: <https://manuals.plus/>