

ECONTROLLY RCEC-SN-14+AL

Universal Remote Control SN-14+AL Instruction Manual

Model: RCEC-SN-14+AL | Brand: ECONTROLLY

INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your new ECONTROLLY Universal Remote Control SN-14+AL. This remote is designed to be compatible with almost all Sony televisions, including models such as RM-YD005, RM-YD014, RM-YD018, RM-YD021, RM-YD024, RM-YD025, YD026, YD027, RM-YD028, RM-YD040, RM-YD063, RM-YD065, RM-YD092, RM-YD102, RM-YD103, and RM-Y156. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

SETUP

Battery Installation

The ECONTROLLY Universal Remote Control SN-14+AL requires two (2) AAA batteries for operation. No programming or complex setup is required; simply install the batteries, and the remote will be ready for use.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 1: Battery compartment with AAA batteries inserted.

Once batteries are installed, the remote is ready to operate your compatible Sony television.

OPERATING INSTRUCTIONS

This universal remote control is designed for intuitive use, mirroring the functionality of many original Sony TV remotes. Below is a general overview of the buttons and their common functions.





Figure 2: Front view of the remote control.

Key Functions

- **POWER:** Turns the television on or off.
- **INPUT:** Cycles through available input sources (HDMI, AV, etc.).
- **VOL +/-:** Adjusts the volume level up or down.
- **CH +/-:** Changes the television channel up or down.
- **Muting:** Mutes or unmutes the television audio.
- **Number Buttons (0-9):** Directly input channel numbers.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used to navigate menus and select options.
- **HOME:** Accesses the television's main menu or smart TV interface.
- **RETURN:** Goes back to the previous screen or menu.
- **APPS:** Direct access to installed applications.
- **NETFLIX:** Direct access to the Netflix application.
- **DISCOVER:** Opens the content discovery menu.
- **PLAY/PAUSE/STOP/PREV/NEXT:** Media playback controls for compatible content.
- **GUIDE:** Displays the electronic program guide (EPG).
- **DISPLAY:** Shows on-screen information.
- **SUBTITLE/CC:** Toggles subtitles or closed captions.
- **JUMP:** Quickly switches between the current and previously viewed channel.

For specific functions related to your Sony TV model, refer to your television's user manual. The remote operates via infrared (IR) signal, requiring a clear line of sight between the remote and the TV's IR receiver.

MAINTENANCE

Cleaning

To maintain the appearance and functionality of your remote control, follow these cleaning guidelines:

- Wipe the remote with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning materials, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

If you experience issues with your ECONTROLLY Universal Remote Control, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries. Obstruction between remote and TV.	Replace batteries with new AAA batteries, ensuring correct polarity. Remove any objects blocking the line of sight to the TV's IR receiver.
Buttons require hard pressing.	Wear and tear on internal contacts.	This can occur over time. Ensure firm, direct presses. If persistent, consider replacing the remote.
Certain functions not working.	TV model incompatibility for specific advanced functions.	While highly compatible, some very specific or advanced functions might not be supported across all Sony models. Verify the function with your TV's original remote or manual.
Remote works intermittently.	Low battery power. Interference.	Replace batteries. Ensure no strong light sources (like direct sunlight) are interfering with the IR signal.

SPECIFICATIONS

- Model Number:** RCEC-SN-14+AL
- Product Dimensions:** 7 x 2 x 0.65 inches
- Item Weight:** 1 ounces
- Batteries Required:** 2 x AAA batteries
- Compatible Devices:** Television (specifically almost all Sony models)
- Connectivity Technology:** Infrared (IR)
- Special Feature:** Universal compatibility
- Max Number of Supported Devices:** 4

WARRANTY INFORMATION

Specific warranty details for the ECONTROLLY Universal Remote Control SN-14+AL are not provided in this manual. Please refer to the product packaging or contact your retailer for information regarding warranty coverage and terms.

CUSTOMER SUPPORT

For further assistance or inquiries regarding your ECONTROLLY Universal Remote Control SN-14+AL, please contact the retailer from whom you purchased the product. They can provide support and guidance specific to your purchase.

© 2024 ECONTROLLY. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question