

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY GB101WJSA Remote Control User Manual for Sharp Smart TVs

ECONTROLLY GB101WJSA

ECONTROLLY GB101WJSA Remote Control User Manual

For Sharp Smart TV Models GB096WJSA & GB147WJN1

INTRODUCTION

Thank you for choosing the ECONTROLLY GB101WJSA replacement remote control. This remote is designed to be fully compatible with various Sharp Smart TV models, including GB096WJSA and GB147WJN1. It provides a direct replacement for your original remote without requiring any complex programming or setup. Simply install batteries, and it's ready for use.

This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new remote control.

SETUP: BATTERY INSTALLATION

The ECONTROLLY GB101WJSA remote control requires two (2) AAA alkaline batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: No programming or pairing is required. Once batteries are installed, the remote is ready to operate your compatible Sharp Smart TV.





Image: Rear view of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.

OPERATING INSTRUCTIONS

This remote control provides full functionality for your Sharp Smart TV. Below are the primary functions of the buttons:





Image: Front view of the ECONTROLLY GB101WJSA remote control, displaying the layout of all control buttons.

- **POWER:** Turns the TV on or off.
- **DISPLAY:** Shows on-screen information.
- **TIMER:** Accesses timer functions.
- **ECO:** Activates or deactivates eco mode for power saving.
- **PHOTO:** Accesses photo viewing mode.
- **Number Buttons (0-9):** Directly select channels or input numbers.
- **INPUT:** Cycles through available input sources (HDMI, AV, etc.).
- **VOL (+/-):** Adjusts the volume level.
- **CH (Up/Down):** Changes channels.
- **AV MODE:** Selects audio/video modes.
- **MENU:** Opens the TV's main menu.
- **Navigation Buttons (Up/Down/Left/Right):** Navigate through menus and options.
- **ENTER:** Confirms selections in menus.
- **RETURN:** Goes back to the previous screen or menu.
- **WIDE:** Adjusts screen aspect ratio.
- **MPX:** Accesses multiplex audio options.
- **Color Buttons (R, G, Y, B):** Access specific functions within certain TV applications or menus.

The remote control has an effective transmitting distance of approximately 10 meters (33 feet). Ensure a clear line of sight between the remote and the TV's infrared receiver for optimal performance.

MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** To clean the remote, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Remote is not working.	◦ Ensure batteries are inserted correctly with the correct polarity (+/-). ◦ Replace old batteries with new AAA alkaline batteries. ◦ Check for any obstructions between the remote and the TV's infrared sensor. ◦ Point the remote directly at the TV.
Remote range is limited.	◦ Ensure batteries are fresh. Low batteries can reduce range. ◦ Remove any objects blocking the line of sight between the remote and the TV. ◦ Avoid using the remote in areas with strong infrared interference (e.g., direct sunlight, certain types of lighting).
Specific buttons are not responding.	◦ Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris. ◦ Ensure the remote is compatible with your specific TV model. While this remote is broadly compatible, some very specific functions might vary by TV model.

SPECIFICATIONS

- **Model:** GB101WJSA (RCEC-GB101WJSA)
- **Compatibility:** Sharp Smart TV models GB096WJSA, GB147WJN1, and others.
- **Power Source:** 2 x AAA Alkaline Batteries (not included)
- **Operating Distance:** Approximately 10 meters (33 feet)
- **Dimensions:** 7 x 2 x 0.65 inches (17.78 x 5.08 x 1.65 cm)
- **Item Weight:** 1 ounce (28.35 grams)
- **Color:** Black
- **Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

This product is typically covered by a standard return policy. For specific warranty details or technical support, please refer to the retailer's policy where the product was purchased or contact ECONTROLLY customer service if available. Keep your purchase receipt as proof of purchase.

For further assistance, ensure you have your product model number (GB101WJSA) and any relevant purchase information ready.

© 2024 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07G85SHWR>

More documents and user manuals: **<https://manuals.plus/>**